 


1 Your mobile

 
Keys in idle mode

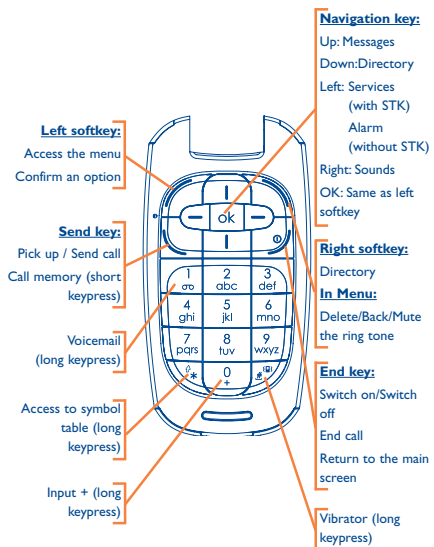

OT-E227A
ALCATEL
mobile phones


2 Getting started

2.1 Removing the battery cover

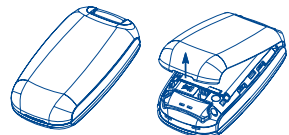


2.2 Inserting your SIM Card

 To insert your SIM card, turn off your phone by holding down the key. Fit the SIM card with the chip (indicated by the gold connectors) facing downwards. Slide the SIM card into its compartment taking care of the correct orientation with the angled corner. Push the SIM card with your finger to release it.

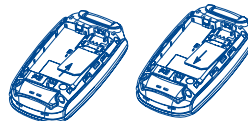

2.3 Inserting and removing the battery

 To insert the battery, place the top of the battery in first as shown and press down gently. To remove the battery, pull battery up from bottom using index finger.



3 Menu.....

Select the menu of selection you would like by using the navigation keys (), then press the left softkey to confirm.

- Display:** Change the main screen wallpaper, colors/reverse, power on/off screen, screensaver and contrast.
- Call services:** Access functions such as: voicemail number, call memory, call settings, network, forward and call barring.
- Games:** Play the 2 games embedded in your telephone.
- Sounds:** Change the mode, volume, ringtones, alerts, power on/off sounds and key beep.
- Directory:** Access/create directory files and make calls from your directory.
- Messages:** Read, write and send SMS messages in your inbox or outbox. Adjust the settings and activate/deactivate SMS CB (i) message reception.
- Settings:** Set the time, date, language, security mode, answer mode, etc...
- Services (i):** Access operator services.
- Tools:** Access the Alarm and Calculator functions.

(i) Contact your network operator to check service availability.
(i) Depending on your operator's network.

4 Main screen icons

- Battery charge level.**
- Vibrate mode**
- Silence mode**
- Unread message.**
- Message list is full**
- Voicemail message arrived.**
- Missed call**
- Call forwarding activated:** your calls are forwarded
- Alarm programmed**
- Roaming indicator.**
- Home zone indicator.**
- Signal strength indicator.**

5 Tools

- 5.1 Alarm**
+ = "snooze": The alarm will ring again after 5 minutes.
+ = "cancel"
When the phone is switched off, the alarm will ring.
- 5.2 Calculator**
select type confirm of operation

6 Calls

- 6.1 Making a call**
Dial number then press .
To hang up, press .
If you make a mistake, press . Press and hold the key to delete all digits.
Making an emergency call.
Dial 911 or other local emergency number and press . Emergency calls can be performed at anytime without your SIM card or PIN code. Once the call has been made, the screen will display: "SOS".
Making an international call
Hold down when "+" is displayed, enter the country and area codes, then complete the number and send the call.
Calling a number from the directory
Press to access the directory.
Select the desired phone number and press .
- 6.2 Calling your voicemail (i)**
Press and hold the key until connected.
- 6.3 Available functions during the call**
Access the available options during a call by pressing .

(i) Contact your network operator for more information.

7 Messages

- Press or press and select .
- 7.1 Create an SMS**
"create" -> Abc -> and choose your action:
Send: send the message to a recipient.
Send to many: send the message to a group of people you have defined
Send to email: send a message to an email address (i).
Save: save the message in the unsent box and send it later.
Templates: use or modify an existing message.
Discard: discard the message.
Predictive (T9): select this mode to enter the words more quickly.
I23: switch to numeric mode
T9 help: help menu for the predictive mode
- 7.2 Read an SMS**
In the inbox, read and unread messages are shown with different icons. The outbox includes sent and unsent messages.
- 7.3 Inbox/Outbox**
Select the message and press and choose your option: Reply/Delete/Forward message/Archives/Modify/Extract number/Call number.

(i) Contact your network operator for service availability.

8 Directory.....

You may store up to 250 entries in the phone memory.

- 8.1 Directory menu**
View: access your stored contact list (alphabetic order).
Create: enter number and name of a new contact.
Delete: delete the selected contact.
Copy: copy the selected contact from the SIM memory to the phone memory and vice versa.
Caller group: group together names by category.
Select Dir.: select the SIM directory, Phone directory or both at the same time.
Memory status: check the numbers of contacts and the memory space left.
My number: enter your own phone numbers for future reference.
Speed Dial: set up speed dial for each key from to .

- 8.2 Creating a contact**
select "create" and enter number and name of a new contact.

- 8.3 Viewing your saved directory contacts**
Select "Dir." then "View" to access the list of your contacts
Available options in the contact list
Once you have selected a name, press to access the following options: Call number/Send message/Details/Modify/Delete/Copy/Caller group/Search number.
Caller group
You can group together names by category and select a special ringtone. For each group, you can select the following options: Modify/Ringtone/SMS alert/Members/Add member/Delete all.

9 Sounds.....

From the main screen, press and select one of the following options in order to customize your telephone.

- 9.1 Mode**
Ringtone: only the tone is played.
Vibrate: only vibrator is set (but the alarms and low battery sound will be played anyway).
Vibrate & ring: vibrator and tone at the same time.
Vibrate then ring: vibrator then tone.
Vibrate.Beep.Ring: vibrator then warning beep, then tone.
Silence: no sound no beep (but the alarms and low battery sound will be played anyway).

- 9.2 Volume**
The volume can be adjusted to one of the set levels.

10 Display

- 10.1 Wall paper**
Select the image you wish to be displayed as the idle screen.
- 10.2 Colors/Reverse**
Choose different colors for the presentation of the screen.
- 10.3 Backlight**
Select the display backlight duration : 7s, 15s, 20s, 30s.

11 Settings.....

- 11.1 Clock**
Set time and date, time format, display (show or hide the clock).
- 11.2 Languages**
To choose the language in which the messages will be displayed.
- 11.3 Dictionary**
Create, modify or delete a word in your personal dictionary. When creating an SMS, the word is predicted and displayed if in Predictive Mode (T9).
- 11.4 Auto power**
- 11.5 Answer mode**
- 11.6 Factory reset**

12 Call services

- 12.1 Call memory**
From the main screen, press and your phone display a call list. Each call is displayed with an icon indicating the type of the call.
Select a cellphone number in the list and press to redial it or press to access the following options :
Details: display the information of the call selected.
Save number: store the number in your directory.
Send message: create an SMS.
Call number: call the selected number.
Modify: modify the number, then call it or save it.
Delete: delete the number selected.
Delete all: delete the entire list.
- 12.2 Call settings (i)**
Minute alert/Call waiting/Auto redial/Billing/Duration/Amount/Hide my ID.
- 12.3 Call services (i)**
Network/Call forwarding/Call barring.

(i) Contact your network operator for more information.

13 Games

- 13.1 Russia**
The object of this game is to complete as many complete lines of bricks as possible.
Key functions:
Same as Same as Same as Same as
Move left Rotate the brick Move right Drop the brick
- 13.2 Bricks**
The object of this game is to break as many bricks as possible with a bat and ball.
3 lives per game. Miss a ball = lose a life
Bonus depending on the position in which the ball hits the bricks.
Key functions:
Same as Same as
Move left Shoot first ball Move right Shoot first ball

Alcatel logo and Alcatel name are Trademark of Alcatel-Lucent used under license by T&A Mobile Phones Limited.
All rights reserved © Copyright 2007 T&A Mobile Phones Limited.
T&A Mobile Phones Limited reserves the right to alter material or technical specification without prior notice.

