
670_UM_USA_22-07-08 22/07/08 11:05 Page 1

ALCATEL mobile phones

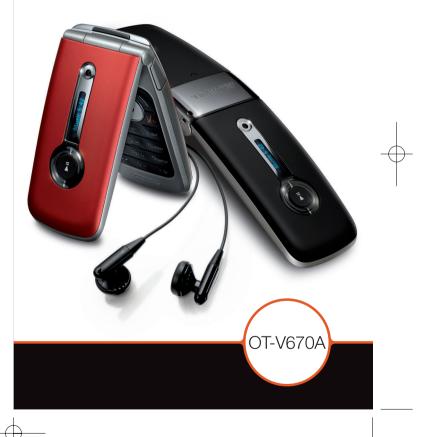

ALCATEL mobile phones

www.alcatel-mobilephones.com

Introduction

TCT Mobile Limited would like to thank you for purchasing this cellphone.

Power music player/video player

- With playlist, lyrics display and equalizer
- Full screen video playback
- View videos on the 1.8" TFT landscape display

Unlimited video recording

• Record video clips as long as desired (1)

USB mass storage

Simply a USB key for storing/accessing data.

Webcam

The best companion for PC messenger.

Bluetooth

- Bluetooth 2.0
- A2DP profile (Bluetooth stereo)

⁽¹⁾ Depending on battery and free memory.

Table of contents

Sa	fety	and use	5
Ge	enera	al information	10
r.	Υου	ır telephone	12
	1.1	Keys	
	1.2	Main screen icons	
	1.3	External screen icons	16
2	Get	tting started	
	2.1	Set-up	
	2.2	Power on your phone	19
	2.3	Power off your phone	19
3	Calls		20
	3.1	Making a call	
	3.2	Calling your voicemail	20
	3.3	Receiving a call	21
	3.4	During a call	
	3.5	Conference calls	
	3.6	Line switching (ALS)	24
4	Me	nu	25
5	Cal	l register	27
	5.I	Call memory	
	5.2	My numbers	27
	5.3	Billing	28
	5.4	Call settings	28
6	Directory		31
	6.I	Accessing your directory/phone book	31
	6.2	Creating a file	33
	6.3	Available options	33

7	Mes	sages	35
	7.1	Messages: Text/Multimedia message	35
	7.2	Voice message	
	7.3	Photo message	37
	7.4	Video message	37
	7.5	Email	38
	7.6	Messenger	38
	7.7	Voicemail	40
	7.8	Settings	41
8	My	settings	42
	8.1	Ringtones	42
	8.2	Color	43
	8.3	Clamshell	43
	8.4	Theme	44
	8.5	Antenna off/Airplane mode	44
	8.6	Equalizer	44
	8.7	Display	45
	8.8	Clock	46
	8.9	Keys	46
	8.10	More settings	47
9	Тоо	ls	50
	9.1	Bluetooth [™]	50
	9.2	Organizer	51
	9.3	Alarm	52
	9.4	Calculator	52
	9.5	Converter	53
	9.6	Memory status	53
	9.7	Voice memo	54
10	My	shortcuts	55
п	WA	P	56
	11.1	Homepage	56
	11.2		

	11.3 Recent pages	56
	11.4 Go to URL	56
	11.5 Profiles	56
12	Media album	
	12.1 My audio	
	12.2 My images	
	12.3 My videos	
	12.4 My creations	
	12.5 Unknown files	
	12.6 Memory card	
	12.7 Managing audio, images, videos and cr	
	12.8 Compatible formats	
	12.9 Memory status	
13	Camera & Video	
	13.1 Access	
	13.2 Camera	
	13.3 Video	
14	Music	68
14	Music	
14	14.1 Music	
14	14.1 Music 14.2 Settings	
	14.1 Music 14.2 Settings 14.3 Playing with lyrics	
	14.1 Music 14.2 Settings 14.3 Playing with lyrics Games & Applications	
	 14.1 Music	
	 14.1 Music	
15	 14.1 Music 14.2 Settings 14.3 Playing with lyrics Games & Applications 15.1 Launch an application 15.2 Java settings 15.3 Java downloading 	
15	 14.1 Music 14.2 Settings 14.3 Playing with lyrics Games & Applications 15.1 Launch an application 15.2 Java settings 15.3 Java downloading Making the most of your telephot 	
15	 14.1 Music 14.2 Settings 14.3 Playing with lyrics Games & Applications 15.1 Launch an application 15.2 Java settings 15.3 Java downloading 	
15	 14.1 Music 14.2 Settings 14.3 Playing with lyrics Games & Applications 15.1 Launch an application 15.2 Java settings 15.3 Java downloading Making the most of your telephot 	
15 16 17	 14.1 Music 14.2 Settings 14.3 Playing with lyrics Games & Applications 15.1 Launch an application 15.2 Java settings 15.3 Java downloading Making the most of your telephon 16.1 PC suite 	68 69 70 70 70 70 70 70 70 70 70 70 70 70 70
15 16 17 18	14.1 Music 14.2 Settings 14.3 Playing with lyrics 5 Games & Applications 15.1 Launch an application 15.2 Java settings 15.3 Java downloading Making the most of your telephon 16.1 PC suite Zatin input mode/character table	68 69 69 70 70 70 70 70 70 70 70 70 70 70 70 70

3

Safety and use

We recommend that you read this chapter carefully before using your cellphone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

• TRAFFIC SAFETY:

Given that studies show that using a cellphone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their cellphone when the vehicle is not parked. Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.

When driving, do not use your cellphone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your cellphone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your cellphone on top of the dashboard or within an airbag deployment area,

- check with your car dealer or the car manufacturer to make sure that the car's electronic devices are shielded from cellphone RF energy.

CONDITIONS OF USE:

You are advised to switch off the telephone from time to time to optimize its performance. Switch the cellphone off before boarding an aircraft.

Switch the cellphone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, cellphones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the cellphone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, gas station, or chemical plant, or in any potentially explosive atmosphere.

When the cellphone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump. In particular when using the cellphone you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, answer the call before holding your cellphone to your ear. Also move the handset away from your ear while using the "hands-free" option because the amplified volume might cause hearing damage.

Do not let small children use your cellphone without supervision.

When replacing the cover please note that your cellphone may contain substances that could create an allergic reaction.

Always handle your cellphone with care and keep it in a clean and dust-free place.

Do not allow your cellphone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is -10° C to $+55^{\circ}$ C (the max value depends on device, materials and housing paint/texture). Over 55° C the legibility of the cellphone's display may be impaired, though this is temporary and not serious.

Do not open or attempt to repair your cellphone yourself. Do not drop, throw or try to bend your cellphone.

Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your cellphone model (see Accessories List page 79).TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Your cellphone should not be disposed of in a municipal waste. Please check local regulations for disposal of electronic products.

Remember to make back-up copies or keep a written record of all important information stored in your cellphone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your cellphone or enabling a flashing-lights feature on your cellphone. Parents should monitor their children's use of video games or other features that incorporate flashing lights on the cellphones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15 minute break.
- Play in a well lit environment.
- Play at the farthest distance possible from the screen.

When you play games on your cellphone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.

- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.

Prolonged exposure to music at full volume when listening to music may cause hearing impairment. Adjust the volume before placing headphones on or in your ear. Only use headphones recommended by TCT Mobile Limited and its affiliates.

• PRIVACY:

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your cellphone regarding taking photographs and recording sounds with your cellphone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and reproduce or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorization be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your cellphone (including the operator) disclaim any liability which may result from the improper use of the cellphone.





• BATTERY:

Before removing the battery from your cellphone, please make sure that the cellphone is switched off.

Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).

- Do not puncture, disassemble or cause a short-circuit in a battery,

- Do not burn or dispose of a used battery in the garbage or store it at temperatures above 60 $^\circ\text{C}.$

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.



This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centers with specific bins for these items of equipment - Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:

These collection points are accessible free of charge. All products with this sign must be brought to these collection points.

In non European Union jurisdictions:

Items of equipment with this symbol are not be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

In the United States you may learn more about CTIA's Recycling Program at www.recyclewirelessphones.com

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

CHARGERS

Home A.C. chargers will operate within the temperature range of: 0°C to 40°C.

The chargers designed for your cellphone meet with the standard for safety of information technology equipment and office equipment use.

Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction.

They should be used for this purpose only.

Characteristics of power supply (depending on the country):

110V charger (used in Mexico/USA):

Input : 100-240 V, 50/60 Hz, 0,15 A

Output : 5 V. 400mA

Battery: Lithium 750 mAh

RADIO WAVES:

THIS CELLPHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your cellphone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for cellphones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by public authorities such as the Federal Communications Commission of the US Government (FCC), or by Industry Canada, is 1.6 W/kg averaged over 1 gram of body tissue. Tests for SAR are conducted using standard operating positions with the cellphone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the cellphone while operating can be well below the maximum value. This is because the cellphone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the cellphone Before a cellphone model is available for sale to the public, compliance with national regulations and standards must be shown.

The highest SAR value for this model cellphone when tested is 1.05 W/Kg for use at the ear and 0.85 W/Kg for use close to the body.

While there may be differences between the SAR levels of various cellphones and at various positions, they all meet the government requirement for RF exposure. For body-worn operation, the cellphone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of cellphones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep cellphones away from the head and body. (fact sheet n° 193). Additional WHO information about electromagnetic fields and public health are available on the following website: http://www.who.int/peh-emf.

7

670_UM_USA_22-07-08 22/07/08 11:05 Page 9

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

LICENCES

Obigo® is a registered trademark of Obigo AB..



microSD Logo is a trademark.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

T9 Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,187,480, 5,818,437, 5,945,928, 5,953,541, 6,011,554, 6,286,064, 6,307,548, 6,307,549, and 6,636,162, 6,646,573; European Pat. Nos. 0 842 463 (96927260.8), I 010 057 (98903671.0), I 018 069 (98950708.2); and additional patents are pending

worldwide.

Java

Java™ and all Java™ based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

General information

- Website: www.alcatel-mobilephones.com
- Hot Line Number: see "TCT Mobile Services" leaflet or go to our Internet site.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

Your telephone is a transceiver that operates on GSM networks with 850 and 1900 MHz bands.

9


Protection against theft (1)

Your cellphone is identified by an IMEI (cellphone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your telephone by entering *#06# and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen.

Disclaimer

There may be certain differences between the user manual description and the cellphone's operation, depending on the software release of your telephone or specific operator services.

Your telephone.....

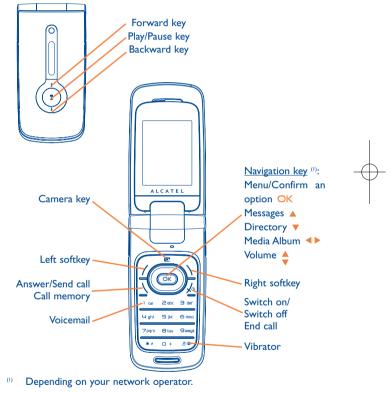

^(I) Contact your network operator to check service availability.

11

Keys 1.1

OK

Navigation key Confirm an option (press the middle of the key)

Answer Send a call Access call memory (Redial) (short keypress)

Switch on/Switch off the telephone (long keypress) End call Return to the main screen

Left softkey

Right softkey

- Access your voicemail (long keypress) 00
- In Edit mode: * 1
 - Short keypress: change input methods
 - Switch from T9 predictive mode to Normal mode
 - Long keypress: access the Symbols table

📳 From main screen - Short keypress: # - Long keypress: activate/deactivate the vibrator In edit mode: - Short keypress:
 (space) - Long keypress: add a word

0 Camera key

Short keypress: take a photo Long keypress: go to the Music player screen and play the recent song.

- Short keypress: Play/pause Long keypress: go to the Music player screen and play the recent song.
- (in the playing mode) Short keypress: previous/next song Long keypress: backward/forward

- **1.2** Main screen icons ⁽¹⁾
- **Battery charge level**.
- Vibrate alert: in vibrate mode, the ringer is silenced except for alarms set. (see page 43).
- Bluetooth status (Blue Activated).
- Bluetooth status (Connected to an audio device).
- 12 Headset connected.
- Call forwarding activated: your calls are forwarded (see page 29).
- Alarm clock programmed (see page 52).
- Woicemail message received.
- Unanswered calls.
- WAP alerts ⁽²⁾.
- Roaming.
- Memory card scanning in progress.
- Memory card scanning completed.
- **Line switching** ⁽²⁾: indicates the selected line.
- **GPRS** active.
- Music player active.
- Messenger.
- ⁽¹⁾ The icons and illustrations in this guide are provided for informational purposes only.
- ⁽²⁾ Depending on your network operator.
 - 15

- Network signal strength indicator.
- 中 USB cable connected.
- Reception of a message in progress.
- Sending a message.
- Silence mode: in silence mode, your phone will not ring or vibrate, but alarms set will still sound (see page 43).
- Message unread
- Message list is full: your terminal cannot accept any new messages. You must access the message list and delete at least one message on your SIM card.
- Preferred network area (1).
- Antenna off/Airplane mode.
- A2DP connected.
- 1.3 External screen icons (2)
- Battery charge level.
- Network signal strength indicator..
- Antenna off/Airplane mode.

- ^(I) Contact your network operator to check service availability.
- ⁽²⁾ The icons and illustrations in this guide are provided for informational purposes only.

2 Getting started

2. I Set-up

Inserting and removing the SIM card ()

In order to make or receive calls, you must insert your SIM card as illustrated below.



Place the SIM card with the bronze colored chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press the SIM card firmly and slide it out.

Installing and removing the battery



Insert and click the battery into place, then close the telephone cover. Unclip the cover, then remove the battery. Do not force the battery, as this may cause damage to the battery and or phone.

⁽¹⁾ Check with your network operator to make sure that your SIM card is 3V compatible. Older 5 volt cards can no longer be used. Please contact your operator.

 
Charging the battery



Connect the battery charger

- It may take up to 20 minutes during the initial charge for the phone to powerup.
- · Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The AC outlet must be near the phone and easily accessible (avoid electric extension cables).
- When using your telephone for the first time, charge the battery fully (approximately 3 hours (iii)).
- Your phone is fully charged when the animated charging icon stops. Be sure to only use Alcatel chargers.

Remove the back cover





Power on your phone 2.2

ଚ୍ଚି

Hold down the $\frac{1}{2}$ key until the telephone powers on type in your PIN code if necessary and then confirm by pressing the OK key. The main screen will wake up.

If you don't know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code near your telephone and store your card in a safe place when not in use.

If cell broadcast messages are displayed, use the OK key to browse through them in full or press the right softkey to return to the main screen.

While the phone is searching for a network, "Searching/Emergency" will be displayed.

In the power on screen, you also have access to "Media album", "Camera & Video" and "Music" functions even if no SIM card is present.

2.3 **Power off your phone**

Hold down the $\frac{1}{\sqrt{2}}$ key from the main screen.

Calls •••••••

Making a call 3.1

Dial the desired number then press the \setminus key to place the call. If you make a mistake, you can delete the incorrect digits by pressing the right softkey.

To hang up the call, press the 1/2 key.



To enter characters "+", "W" (for tonewait) or "P" (used to store a number with extension number), hold down the \Box + key (the following characters will scroll by: 0, +, P,W).

Making an emergency call

If your phone is covered by the network, dial 911 or any other applicable emergency number and press the \backslash key to make an emergency call. This works even without a SIM card and without typing the PIN code or unlocking the keypad.

Calling your voicemail () 3.2

Voicemail once configured, will take messages of callers if you are unavailable. To access your voicemail, hold down the 1 🐽 key.

^(I) Contact your network operator to check service availability.



If the access number for your operator's voicemail service does not work, dial the number that you were given. To change this number at a later date, refer to "**My Numbers**" (see page 27).



To use your voicemail service from abroad, contact your network operator before leaving.

3.3 Receiving a call

When you receive an incoming call, press the \setminus key to talk and then hang up using the $\cancel{}$ key.

If the 88 icon is displayed, the vibrator is activated and ringtones are disabled. If the a icon is displayed, the phone neither rings nor vibrates.

If the flip is open

- To pick up a call, press the 📏 key.

If the flip is closed

- To pick up a call, open the flip (if clamshell open answer option is activated, see page 43).



The caller's number is displayed if it is transmitted by the network (contact your network operator to check service availability).

Muting the ringtone

Press the right softkey once while the telephone is ringing. Answer the call by pressing the key.

Rejecting a call

Press the 10° key once or the right softkey twice.

3.4 During a call

Available functions

During a call, you may access your directory, diary, short messaging, etc. without disconnection of your current conversation by pressing the \triangleleft key.

- Call on hold
- Ongoing call
- Sector Sector Sector Handsfree

WARNING: move the handset away from your ear while using the "handsfree" option because the amplified volume might cause hearing damage.

- S Directory
- Messages
- Organizer
- Services (1)
- Sound recorder (record your current call).

You may also switch from handset to a BT device when connected.

^(I) Contact your network operator to check service availability.

Adjusting the volume

Volume may be adjusted up or down be using the \diamondsuit key.

Handling two calls

- Answering a second call (Ensure that "Call waiting" is activated, see page 28).
- To call a second party during a call, dial the number directly and press

3.5 Conference calls (1)

Your phone allows you to talk to several people at the same time (up to 5). If you are on a double call, press "**Options**" and select "**Conference**" then confirm with the OK key. If a third call comes in, answer it by pressing the key and speak with your new correspondent.

This correspondent becomes a member of the conference if you press "**Options**" and select "**Joint conf.**", and then confirm by pressing $\bigcirc K$. Pressing $\checkmark 0$ disconnects the current call.

To end the conference call, press "Options" and select "End conference".

3.6 Line switching (ALS) ⁽¹⁾

Your SIM card can contain two distinct telephone numbers. Under "**Call register**", choose "**Line switching**" and then select a default line; all outgoing calls will be made from this number. Incoming calls will still be received from both lines despite the default set.

The services programmed on the default line do not impact those selected on the other line.

^(I) Contact your network operator to check service availability.

23

⁽¹⁾ Contact your network operator to check service availability.

Menu^(I)

From the menu interface, you may directly access features by pressing the corresponding key (number keys and * + and # keys) (2).

I. GAMES & APPS

2. MEDIA ALBUM - My audio

- My images

- My videos

- My creations

- Unknown files

- Memory card

- Memory status

Bluetooth

Calculator

- Memory status

- Voice memo

- Converter

- Organizer

- Alarm

3. TOOLS

4. CAMERA & VIDEO - Camera

- Video

 - My creations

5. DIRECTORY

- 6. MESSAGES
- Messages
- Voice message
- Photo message
- Video message
- Email
- Messenger
- Voicemail
- Settings

7. CALL REGISTER

- Call memory
- My numbers
- Billing
- Call settings

8. MY SETTINGS

- Ringtones

-

0. MUSIC

- Playlist

- Album

- Artist

- Genre

#. WAP

- All songs

- My star list

- Homepage

- Bookmarks

- Go to URL

- Profiles

- Recent pages

- Recently played

- Updated songs

- Color
- Clamshell
- Theme
- Antenna off/Airplane mode
- Equalizer
- Display
- Clock
- Keys
- More settings...

9. MY SHORTCUTS

- *. SERVICE (I) - VAS
- Data account
- My One Touch
- Service dial number

^(I) Contact your network operator to check service availability.

26



⁽¹⁾ There may be certain differences between this menu tree and phone's

operation, depending on your operator.

⁽²⁾ Only available in "**Board**" mode.



5 Call register 🜗

5. Call memory

You can access your call memory by pressing the $\$ key from the main screen. Choose the icon of the desired list:

- Unanswered calls
- Outgoing calls (Redial)
- Answered calls

Select a number of the call memory and press the "**Options**" softkey to **View** call details, **Create text/multimedia message**, **Save** or **Delete** the selected number or clear the entire list (**Delete all**).

5.2 My numbers

Type in or modify your telephone number or the number to access your voicemail and confirm by pressing OK. Your telephone number is usually written on your SIM card.

5.3 Billing

In the billing menu, you may access the following items:

 Amount
 • You can view the total cost of charged calls, modify it or reset it and enter the cost of a Telecom Unit in the currency of your choice.

 Duration
 • You can view the total duration of all outgoing calls or reset it.

 GPRS counter
 • Management of the volume of data communications charged for (in kilobytes).

 Beep duration
 • You can activate or cancel the beep emitted during a call with a specified frequency (enter the frequency and confirm by ○K).

5.4 Call settings ⁽¹⁾

In the call settings menu, you may access the following items:

5.4.1 Call waiting

Activate/deactivate the audible tone when an incoming call is received.

^(I) Contact your network operator to check service availability.

5.4.2 Call forwarding

You may activate, cancel or verify call forwarding status to voicemail, or a specified number. The following call forwarding options are available:

- Unconditional: systematic forwarding of all incoming calls. The 🕅 icon is displayed.
- Conditional: forward calls if your line is busy, unavailable, or outside of the network coverage area.

5.4.3 Call barring

You can activate or deactivate call barring for outgoing and incoming calls. The various options are:

Outgoing calls • The following configurations are possible:

- All calls All outgoing calls are barred.
- International calls Outgoing international calls are barred.
- International except home
 Outgoing international calls except those to your country of subscription are barred.
- **Incoming calls** The following configurations are possible:
- All calls All incoming calls are barred.
- Roaming Incoming calls are barred when you are abroad.
- Cancel all Deactivate all call barring.
- barring

5.4.4 Line switching ⁽¹⁾

Line switch between line 1 and line 2.

5.4.5 Auto redial

You can activate or deactivate the automatic callback of your party for calls that do not connect the first time.



👌 Directory 🚺

6.1 Accessing your directory/phone book

To access the **directory** from the main screen, press the \blacklozenge key ⁽¹⁾ downwards or press the $\bigcirc K$ key and select the \bigcirc icon from the menu.

You may also create a shortcut for quick access to your directory (see page 47).

You have 4 directories:

SIM directory

- General
- Phone directory
- 🔠 Group

In addition to the directories already provided, you can create up to 5 groups (maximum 100 entries per group).

Searching for a name by its first letter

You can search for the person's name by pressing the key associated with the first letter of his/her name.

Read a file

Select a name from your directory, then press OK to read the file.

Sending Vcard via Bluetooth

Selecting the Vcard you wish to transfer ("**Options\Send vCard\By Bluetooth**").

Making a call

Press the \backslash key once the name is selected. If several numbers are associated with the name to be called, you must first choose the number from the list (Cellphone, Home, Office, etc.) using the \diamondsuit key. Press the OK key to make the call.

Information in the directory and the diary may be managed using the PC suite (see page 72).

32

⁽¹⁾ Depending on your network operator.

6.2 Creating a file

Select the directory in which you wish to create a file, press the "**Options**" softkey, select "**Create file**" then OK.

When you create a new contact in the product directory, at least one of the following fields must be filled in: Anne, Coup, Cellphone, Home, Ringtone, Mange, Video, Work, Kara, Kara, Karai, Birthday, Company.

You can move from one field to another using the \ddagger key.

If you use your phone abroad, store the numbers in your directories in international format "+" followed by the country code (see page 20).

6.3 Available options

From the list of names in SIM directory, General directory or Group you can access the following options via left softkey:

View	• View a complete file: name, numbers, address, e-mail, etc.
Create file	• Create a file (name, numbers, address, e-mail, etc.) in the desired directory.
Create text/ multimedia message	• Send an SMS/MMS to a contact you selected from the directory.
Edit	• Modify the contents of a file: name, number, ringtone, image, etc.
Delete	• Delete the selected file.

Delete all	 Delete all files in the current directory.
Copy all	 Copy the whole directory to the SIM or General directory if memory allows.
Send vCard	• Exchange data via MMS or Bluetooth (see page 50).
Settings	• More information and setting.
Create group	Create a group of files.
Delete group	 The group and its files will be completely deleted.
Associate/ Not associate	 If the contact is modified on the SIM or general directory, the entry in the group will be modified accordingly.

33

7 Messages..... 🗈

You can create, edit and receive SMS, MMS, Postcard $^{\rm (i)},$ email $^{\rm (i)}$ and IM (Messenger) $^{\rm (i)}$ with this phone.

MMS is a message whereby you can send video clips, images, photos, animations and sounds to other compatible cellphones and e-mail addresses.

7.1 Messages: Text/Multimedia message ⁽²⁾

7.1.1 Create message

Ö.

From the main menu select "Messages" to create text/multimedia message.

You may type a message, but may also modify a predefined message in **Templates** for future access. You may customize messages by adding pictures, photos, sounds, titles, etc (only available while editing a MMS). While writing a message, select "**Options**" to access all messaging options.

You can save your messages that you send often to Drafts or Templates.

An SMS message of more than 160 characters (the number of characters depends on the languages you writing in) will be charged as several SMS. An MMS message containing photos and/or sounds may also be billed as more than one message.

7.1.2 Inbox

All received messages (read and unread) are stored in the inbox.

When viewing your messages, you will find the following status icons, depending on the type of message: 0 unread SMS in phone, 1 unread SMS in SIM card, 1 read SMS in phone, 1 read SMS in SIM card, \rightleftarrows unread MMS in phone, 1 read MMS in phone, 1 message reception in progress and 1 message sending in progress.

Receiving and reading SMS/MMS

When your receive a new message, the following message is displayed: "**X new message!**", a beep sounds, the icon appears with the # of unread messages. Select this line and press OK to read it directly from the main screen.

Once you have read the message, the following options are given: **Reply**, **Forward** the message to another person, **Edit**, **Delete**, **Delete** all and extract number or URL (**Use number/Use URL**).

7.1.3 Unsent

All messages failed to send.

7.1.4 Sent

All sent messages.

7.1.5 Drafts

All drafts messages.

⁽¹⁾ Depending on your network operator and product availability.

⁽²⁾ Depending on your network operator.



7.1.6 WAP alerts

Store WAP push messages.

7.1.7 Empty folder

Delete all messages in "Inbox/Unsent/Sent/Drafts".

7.1.8 Templates

A list of predefined messages is available. Select one, edit it if required, and then send it. You can also create your own predefined text messages.

7.2 Voice message

Record voice and send as MMS.

7.3 Photo message

Take a photo and send as MMS.

7.4 Video message

Take a video and send as MMS.

7.5 Email ⁽¹⁾

 To connect the email server in order to launch sending/receiving email manually.
Create a new email.
 Folder of all received emails.
 Folder of all emails failed to be sent.
 Folder of all sent emails.
 Folder of all draft emails.
 A list of predefined messages.
 Delete all email in the folder specified.
• Edit or activate email profiles.

7.6 Messenger ⁽¹⁾

Messenger (IM, also called "Chat") is one of the most popular services on the Internet after e-mails. The presence feature allows users to check when their friends are online and communicate with them in near realtime.

You can now "chat" with your cellphone.

7.6.1 Log in

You may let your Messenger service start up automatically when you switch on the phone. You may also choose to login the service automatically with the user data you stored in the phone.

^(I) Depending on version, this feature may not be available.

7.6.2 Presence

IM enables a user to see the connection status or presence of other users.

The presence includes a combination of network status information (online or offline) and user specified status information (available or busy).

An important privacy protection feature of Messenger is the ability to block another user at any time. Blocked users cannot see your presence neither send you unsolicited IM (SPIM: the word for IM spam).

In one glance you can know the presence of your friends thanks to the IM buddy list: it is the list of contacts with whom you may chat.You can manage your IM buddy list: add a new contact (using a cellphone number or the messenger ID), or search for a contact.

You can also create groups of contacts in order to well manage your contact list.

7.6.3 Always on

Mobile IM works the same way as on a PC: you can still receive IM messages, even if the IM application is not on the screen. An IM icon in the status bar shows you whether IM is on or off. The icon shows:

- if you are online and available,
- if you are online and busy,
- if there are unread IM

No icon means that you are not connected.

7.6.4 Receiving and reading IM

When you receive a new IM notification (a new IM, an information message...),

- an IM message is displayed: "You have received an IM message from...",
 "You have received an invitation from..."
- you have a specific sound alert for IM (to modify or deactivate the audible signal, refer to IM parameters below),
- in the status bar, the IM icon is updated,
- a line with the number of conversations with different friends (whatever the number of IMs) or information messages appears on the idle screen.
 Select this line and press OK to access it from the main screen.

You can also create a private chatroom and invite your online contacts to chat together.

7.6.5 IM parameters

You can update the IM server parameters in the same way as for a WAP profile.

7.7 Voicemail

Access voicemail received.

7.8 Settings

7.8.1 Text messages		
Profile settings	• Profiles can be retrieved directly from SIM card. Alternatively, you can create your own profile.	
General setting	• Delivery report, request for acknowledgement of delivery report On/Off. Reply path ⁽¹⁾ show reply path.	
Memory status	 Memory used on the phone. 	
Preferred storage	• Select default message storage, SIM or phone.	
Pref. Bearer	Bearer preference.	
7.8.2 Multimedia messages		
Edit	 Set edit mode, image size and signature. 	
Sending	• Set the values for validity period, Read report, etc.	
Retrieve	• Set the values for Home network, Roaming network, etc.	
Filter	• Set criteria for filtering.	
Profiles	• Follow the same procedure as for setting your WAP connection.	
Memory status	• Memory used on the phone.	
7.8.3 CB SMS	(1)	
Receive mode	• Enable to receive broadcast SMS.	
Read message	• Store the received messages.	
Languages	• Language selection.	
Channel setting	• Add/Edit channels.	

⁽¹⁾ Depending on your network operator.

41

8 My settings

From the main screen, select the icon menu 🥨 and select the function of your choice in order to customize your telephone.

8.1 **Ringtones**

8.1.1 Available functions

To modify the sound settings, select an option using the **+** key:

- Select a melody from the list using the \diamondsuit key then confirm by pressing OK (see page 68).
- Mode (normal, discreet, vibrate...).
- Adjust the volume using the \Rightarrow key.
- Select the type of key beep.
- Select a melody for a new incoming message.
- Select a melody for an alarm or appointment.
- OF Power on beep.
- OF Power off beep.
- Select a sound for opening the flip and for closing it.