

www.glamphone.com

E

GlamPhone
ELLE

by Alcatel

Introduction

TCT Mobile Limited would like to thank you for purchasing this cellphone.

Power music player/video player

- With playlist, lyrics display and equalizer
- Full screen video playback
- Watch the show on 1.8" TFT screen

Unlimited video recording

- Shoot video clips as long as you want ⁽¹⁾

USB mass storage

Simply a USB key.

Webcam

The best companion for PC messenger.

Bluetooth

- Bluetooth 2.0
- A2DP profile (Bluetooth stereo)

⁽¹⁾ Depending on battery and free memory.

Table of contents

Safety and use5

General information.....10

1 Your telephone12

- 1.1 Keys13
- 1.2 Main screen icons15
- 1.3 External screen icons.....16

2 Getting started17

- 2.1 Set-up.....17
- 2.2 Power on your phone20
- 2.3 Power off your phone20

3 Calls21

- 3.1 Making a call21
- 3.2 Calling your voicemail21
- 3.3 Receiving a call22
- 3.4 During the call23
- 3.5 Conference calls24
- 3.6 Line switching (ALS).....25

4 Menu.....26

5 Call register28

- 5.1 Call memory28
- 5.2 My numbers28
- 5.3 Billing29
- 5.4 Call settings29

6 Directory32

- 6.1 Consulting your directory32
- 6.2 Creating a file.....34
- 6.3 Available options.....34

7	Messages	36
7.1	Messages: Text/Multimedia message	36
7.2	Voice message	38
7.3	Photo message	38
7.4	Video message	38
7.5	Email	39
7.6	Messenger	39
7.7	Voicemail	41
7.8	Settings	42
8	My settings	43
8.1	Ringtones	43
8.2	Color	44
8.3	Slider	44
8.4	Theme	45
8.5	Antenna off mode	45
8.6	Equalizer	45
8.7	Display	46
8.8	Clock	47
8.9	Keys	47
8.10	More settings	48
9	Tools	51
9.1	Bluetooth™	51
9.2	Organizer	52
9.3	Alarm	53
9.4	Calculator	53
9.5	Converter	54
9.6	Memory status	54
9.7	Voice memo	55
10	My shortcuts	56
11	WAP	57
11.1	Homepage	57
11.2	Bookmarks	57
11.3	Recent pages	57

11.4	Go to URL	57
11.5	Profiles	57
12	Media album	59
12.1	My audios	59
12.2	My images	60
12.3	My videos	60
12.4	My creations	60
12.5	Unknown files	60
12.6	Memory card	61
12.7	Managing audios, images, videos and creations	62
12.8	Formats and compatibility	63
12.9	Memory status	63
13	Camera & Video	64
13.1	Access	64
13.2	Camera	64
13.3	Video	66
14	Music	69
14.1	Music	69
14.2	Settings	70
14.3	Playing with lyrics	70
15	Games & Applications	71
15.1	Launch an application	71
15.2	Java settings	71
15.3	Java downloading	71
16	Making the most of your cellphone	73
16.1	PC suite	73
17	Latin input mode/character table	74
18	Telephone warranty	78
19	Accessories	80
20	Troubleshooting	81



Safety and use

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

• TRAFFIC SAFETY:

Recent studies show that using a cellphone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (headset...), drivers are requested to refrain from using their cellphone when the vehicle is not parked.

Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Do not use your phone's stereo or music feature with a headphone. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your phone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the car's electronic devices are shielded from cellphone RF energy.

• CONDITIONS OF USE:

You are advised to switch off the telephone from time to time to optimize its performance.

Switch the phone off before boarding an aircraft.

Switch the phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, cellphones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the phone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, gas station, or chemical plant, or in any potentially explosive atmosphere.

When the phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump. In particular when using the phone you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, press to answer the call before holding your cellphone to your ear. Also move the handset away from your ear while using the "hands-free" option because the amplified volume might cause hearing damage.

Do not let small children use your cellphone without supervision.

When replacing the cover please note that your phone may contain substances that could create an allergic reaction.

Always handle your phone with care and keep it in a clean and dust-free place.

Do not allow your phone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is -10°C to +55°C (the max value depends on product ie. housing or paint). Over 55°C the legibility of the phone's display may be impaired, though this is temporary and not serious.

Emergency call numbers may not be reachable on all cellular networks. You should never rely only on your phone for emergency calls.

Do not open, dismantle or attempt to repair your cellphone yourself.

Do not drop, throw or try to bend your cellphone.

Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your phone model (see Accessories List page 80). TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Your phone should not be disposed of in a municipal waste. Please check local regulations for disposal of electronic products.

Remember to make back-up copies or keep a written record of all important information stored in your phone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15 minute break hourly.
- Play in a well lit room.
- Play at the farthest distance possible from the screen.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow the instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders.

 Prolonged exposure to music at full volume on the music player may damage the listener's hearing.

Set your phone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.





• **PRIVACY:**

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your cellphone regarding taking photographs and recording sounds with your cellphone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and reproduce or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorization be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your cellphone (including the operator) disclaim any liability which may result from the improper use of the cellphone.

• **BATTERY:**

Before removing the battery from your phone, please make sure that the phone is switched off. Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery,
- Do not burn or dispose of a used battery in the garbage or store it at temperatures above 60 °C.

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.



This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centers with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:

These collection points are accessible free of charge. All products with this sign must be brought to these collection points.

In non European Union jurisdictions:

Items of equipment with this symbol are not be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled. In the United States you may learn more about CTIA's Recycling Program at www.recyclewirelessphones.com

• **CHARGERS**

Home Chargers will operate within the temperature range of: 0°C to 40°C. The chargers designed for your cellphone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

Characteristics of power supply (depending on the country):

110V charger (used in Mexico / USA):
 Input: 100-240 V, 50/60 Hz, 0.15 A
 Output: 5 V, 400 mA
 220V charger:
 Input: 220-240 V, 50/60 Hz, 0.15 A
 Output: 5 V, 400 mA
 Battery: Lithium 3.7V/750mAh

• **RADIO WAVES:**

THIS CELLPHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your cellphone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for cellphones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by public authorities such as the Federal Communications Commission of the US Government (FCC), or by Industry Canada, is 1.6 W/kg averaged over 1 gram of body tissue. Tests for SAR are conducted using standard operating positions with the cellphone transmitting at its highest certified power level in all tested frequency bands.

 
 
Although the SAR is determined at the highest certified power level, the actual SAR level of the cellphone while operating can be well below the maximum value. This is because the cellphone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the cellphone. Before a cellphone model is available for sale to the public, compliance with national regulations and standards must be shown.

The highest SAR value for this model cellphone when tested for use at the ear is 0.86 W/Kg and for use close to the body is 1.05 W/Kg

While there may be differences between the SAR levels of various cellphones and at various positions, they all meet the government requirement for RF exposure. For body-worn operation, the cellphone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of cellphones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep cellphones away from the head and body. (fact sheet n°193). Additional WHO information about electromagnetic fields and public health are available on the following website: <http://www.who.int/peh-emf>.

Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.





NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

LICENCES

Obigo® is a registered trademark of Obigo AB.



microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.



T9 Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,187,480, 5,818,437, 5,945,928, 5,953,541, 6,011,554, 6,286,064, 6,307,548, 6,307,549, and 6,636,162, 6,646,573; European Pat. Nos. 0 842 463 (96927260.8), I 010 057 (98903671.0), I 018 069 (98950708.2); and additional patents are pending worldwide.



ELLE is a trademark, owned by Hachette Filipacchi Presse S.A., Paris, France. Manufactured and distributed by TCT Mobile Limited under license from Hachette Filipacchi Presse S.A., Paris, France.



Java™ and all Java™ based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

General information

- **Website:** www.alcatel-mobilephones.com
- **Hot Line Number:** see "TCT Mobile Services" leaflet or go to our Internet site.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server: www.alcatel-mobilephones.com

Your telephone is a transceiver that operates on GSM networks with 850 and 1900 MHz bands.

Ⓒ This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The entire copy of the Declaration of Conformity for your telephone can be obtained through our website: www.alcatel-mobilephones.com.



 
Protection against theft ⁽¹⁾

Your telephone is identified by an IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your telephone by entering * # 0 6 # and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your cellphone to be blocked preventing a third person from using it, even with a different SIM card.

Disclaimer

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your telephone or specific operator services.

Your telephone.....

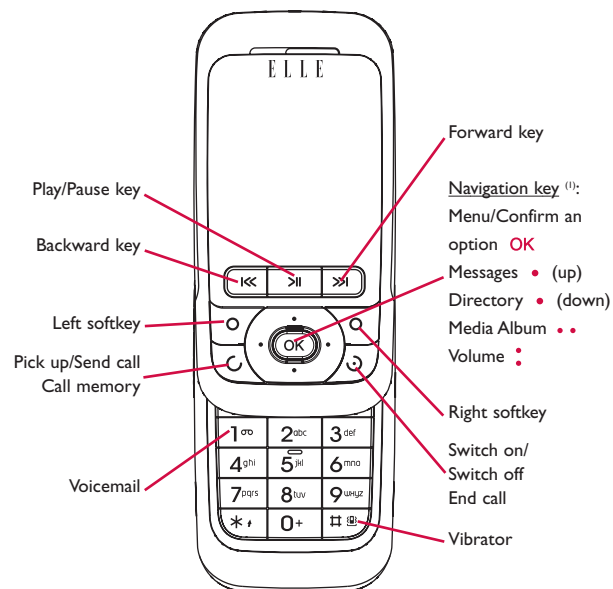

⁽¹⁾ Contact your network operator to check service availability.

⁽¹⁾ Depending on your network operator.

1.1 Keys



Navigation key
Confirm an option (press the middle of the key)



Pick up
Send a call
Access call memory (Redial) (short keypress)



Switch on/Switch off the telephone (long keypress)
End call
Return to the main screen



Left softkey



Right softkey



Access your voicemail (long keypress)



In Edit mode:
- Short keypress: change input methods
- Switch from T9 predictive mode to Normal mode
- Long keypress: access the Symbols table



From main screen
- Short keypress: #
- Long keypress: activate/deactivate the vibrator
In edit mode:
- Short keypress: ␣ (space)
- Long keypress: add a word



Camera key
Short keypress: take a photo
Long keypress: go to the Music player screen and play the recent song.




















Short keypress: Play/pause
Long keypress: go to the Music player screen and play the recent song.













(in the playing mode) Short keypress: previous/next song
Long keypress: backward/forward

1.2 Main screen icons ⁽¹⁾




-  **Battery charge level.**
-  **Vibrate alert:** your phone vibrates, but neither rings nor beeps except for the alarms (see page 44).
-  **Bluetooth status** (Blue - Activated).
-  **Bluetooth status** (Connected to an audio device).
-  **Headset connected.**
-  **Call forwarding activated:** your calls are forwarded (see page 30).
-  **Alarm clock programmed** (see page 53).
-  **Voicemail message arrived.**
-  **Unanswered calls.**
-  **WAP alerts** ⁽²⁾.
-  **Roaming.**
-  **Memory card scanning in progress.**
-  **Memory card scanning completed.**
-  **Line switching** ⁽²⁾: indicates the selected line.
-  **GPRS active.**
-  **Music player active.**
-  **Messenger.**

⁽¹⁾ The icons and illustrations in this guide are provided for informational purposes only.

⁽²⁾ Depending on your network operator.

-  **Level of network reception.**
-  **USB cable connected.**
-  **Reception of a message in progress.**
-  **Sending a message.**
-  **Silence mode:** your phone neither rings, beeps nor vibrates except for the alarms (see page 44).
-  **Message unread**
-  **Message list is full:** your terminal cannot accept any new messages. You must access the message list and delete at least one message on your SIM card.
-  **Preferred tariff areas** ⁽¹⁾.
-  **Antenna off mode.**
-  **A2DP connected.**

1.3 External screen icons ⁽²⁾

-  **Battery charge level.**
-  **Level of network reception.**
-  **Antenna off mode.**

⁽¹⁾ Contact your network operator to check service availability.

 
⁽²⁾ The icons and illustrations in this guide are provided for informational purposes only.

2 Getting started

2.1 Set-up


Inserting and removing the SIM card ⁽¹⁾

You must insert your SIM card to make phone calls.

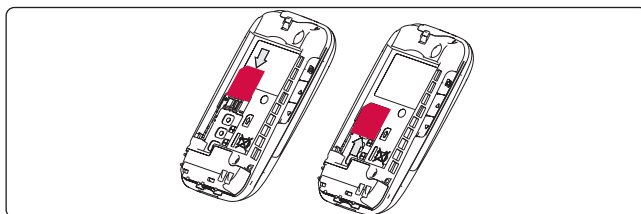

Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out.

 
Installing the battery

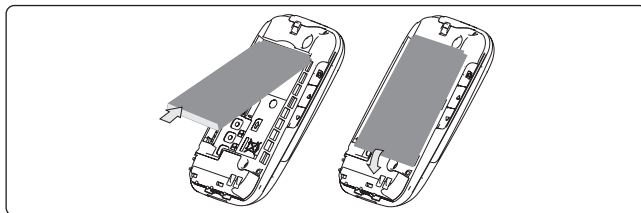

Insert and click the battery into place, then close the telephone cover.


⁽¹⁾ Check with your network operator to make sure that your SIM card is 3V compatible. The old 5 Volt cards can no longer be used. Please contact your operator.

 Removing the battery

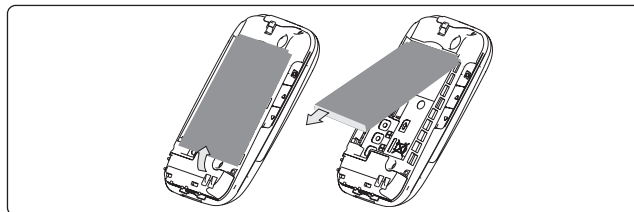

Unclip the cover, then remove the battery.

 Charging the battery

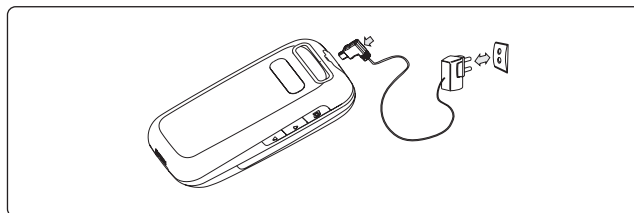


Connect the battery charger

- The charging may take about 20 minutes to start if the battery is flat.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the phone and easily accessible (avoid electric extension cables).
- When using your telephone for the first time, charge the battery fully (approximately 3 hours). You are advised to fully charge the battery (■■■■).




The charge is complete when the animation stops. Only use Alcatel chargers.

 
Remove the back cover

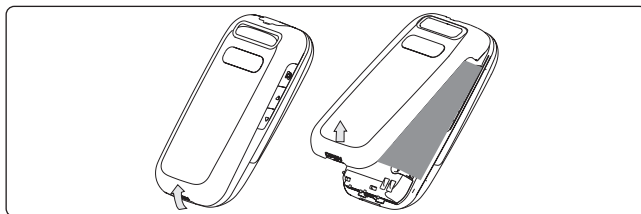

Replace the back cover

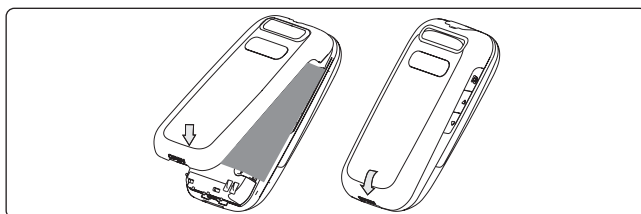 

2.2 Power on your phone

Hold down the  key until the telephone powers on, type in your PIN code if necessary and then confirm with the **OK** key. The main screen is displayed.



If you don't know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code near your telephone and store your card in a safe place when not in use.

If cell broadcast messages are displayed, use the **OK** key to browse through them in full or press the right softkey to return to the main screen.

While the phone is searching for a network, "**Searching/Emergency**" will be displayed.


In the power on screen, you also have access to "**Media album**", "**Camera & Video**" and "**Music**" functions even if no SIM card inside.


2.3 Power off your phone



Hold down the  key from the main screen.

3 Calls


3.1 Making a call

Dial the desired number then press the  key to place the call. If you make a mistake, you can delete the incorrect digits by pressing the right softkey.


To hang up the call, press the  key.

 To enter characters “+”, “W” (for tonewait) or “P” (used to store a number with extension number), hold down the  key (the following characters will scroll by: 0, +, P, W).


Making an emergency call

If your phone is covered by the network, dial **112** and press the  key to make an emergency call (or any other number provided by your operator). This works even without a SIM card and without typing the PIN code or unlocking the keypad.



3.2 Calling your voicemail ⁽¹⁾



Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can consult at any time. To access your voicemail, hold down the  key.


If the access number for your operator's voicemail service does not work, dial the number that you were given. To change this number at a later date, refer to “**My Numbers**” (see page 28).

 To use your voicemail service from abroad, contact your network operator before leaving.


3.3 Receiving a call

When you receive an incoming call, press the  key to talk and then hang up using the  key.


If the  icon is displayed, the vibrator is activated and there is no ringtone. If the  icon is displayed, the phone neither rings nor vibrates.

 The caller's number is displayed if it is transmitted by the network (contact your network operator to check service availability).

Muting the ringtone

Press the right softkey once while the telephone is ringing. Answer the call by pressing the  key.

Rejecting a call

Press the  key once or the right softkey twice.

⁽¹⁾ Contact your network operator to check service availability.

3.4 During the call

Available functions


During a call, you can use your directory, your diary, short messages, etc. without losing your correspondent by pressing the **••** key.

 Call on hold

 Ongoing call

 Handsfree


WARNING: move the handset away from your ear while using the “handsfree” option because the amplified volume might cause hearing damage.

 Directory

 Messages

 Organizer

 Services ⁽¹⁾

 Sound recorder (record your current call).

Besides, you can switch the audio speech from handset to BT device when connected.

⁽¹⁾ Contact your network operator to check service availability.

Adjusting the volume

You can adjust the sound level during a call using the **⋮** key.

Handling two calls

- Answering a second call (Ensure that “**Call waiting**” is activated, see page 29).
- To call a second party during a call, dial the number directly.

3.5 Conference calls ⁽¹⁾

Your phone allows you to talk to several people at the same time (up to 5). If you are on a double call, press “**Options**” and select “**Conference**” then confirm with the **OK** key. If a third call comes in, answer it by pressing the **⌂** key and speak with your new correspondent.

This correspondent becomes a member of the conference if you press “**Options**” and select “**Joint conf.**”, and then confirm by pressing **OK**. Pressing **⌂** disconnects the current call.

To end the conference call, press “**Options**” and select “**End conference**”.

⁽¹⁾ Contact your network operator to check service availability.

3.6 Line switching (ALS) ⁽¹⁾

Your SIM card can contain two distinct telephone numbers. Under “**Call register**”, choose “**Line switching**” and then select a default line; all your outgoing calls will be made from this number. Incoming calls, however, will continue to use the two lines.



The services programmed on the default line do not impact those selected on the other line.

⁽¹⁾ Contact your network operator to check service availability.

4 Menu ⁽¹⁾

From the menu interface, you may directly access features by pressing the corresponding key (number keys and * and # keys) ⁽²⁾.

1. GAMES & APPS

2. MEDIA ALBUM

- My audios
- My images
- My videos
- My creations
- Unknown files
- Memory card
- Memory status

3. TOOLS

- Bluetooth
- Organizer
- Alarm
- Calculator
- Converter
- Memory status
- Voice memo

4. CAMERA & VIDEO

- Camera
- Video
- My creations

5. DIRECTORY

6. MESSAGES

- Messages
- Voice message
- Photo message
- Video message
- Email
- Messenger
- Voicemail
- Settings

7. CALL REGISTER

- Call memory
- My numbers
- Billing
- Call settings

⁽¹⁾ There may be certain differences between this menu tree and phone's operation, depending on your operator.

⁽²⁾ Only available in “**Board**” mode.

8. MY SETTINGS

- Ringtones
- Color
- Slider
- Theme
- Antenna off mode
- Equalizer
- Display
- Clock
- Keys
- More settings...

9. MY SHORTCUTS

*. SERVICE ⁽¹⁾

- VAS
- Data account
- My One Touch
- Service dial number

0. MUSIC


- Playlist
- Album
- Artist
- Genre
- All songs
- Recently played
- My star list
- Updated songs

#. WAP

- Homepage
- Bookmarks
- Recent pages
- Go to URL
- Profiles

5 Call register

5.1 Call memory

You can access your call memory by pressing the  key from the main screen. Choose the icon of the desired list:

 Unanswered calls

 Outgoing calls (Redial)

 Answered calls

Select a number of the call memory and press the “Options” softkey to **View** call details, **Create text/multimedia message**, **Save** or **Delete** the selected number or clear the entire list (**Delete all**).

5.2 My numbers

Type in or modify your telephone number or the number to access your voicemail and confirm by pressing **OK**. Your telephone number is usually written on your SIM card.

⁽¹⁾ Contact your network operator to check service availability.