

## 1 Your cellphone .....

### Keys in idle mode



 
OT-102A  
by Alcatel

OT-202A  
by Alcatel

1

## 2 Getting started.....


### 2.1 Removing the battery door

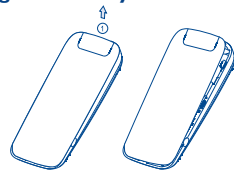

### 2.2 Inserting a SIM card


To insert your SIM card, turn off your cellphone by holding down the key.

 Fit the SIM card with the chip (indicated by the gold connectors) facing downwards. Slide the SIM card into its compartment taking care of the correct orientation with the angled corner. Push the SIM card with your finger to release it.

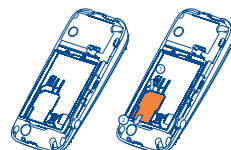

### 2.3 Inserting and removing the battery

 To insert the battery, place the top of the battery in first as shown and press down gently. To remove the battery, pull battery up from bottom using index finger.

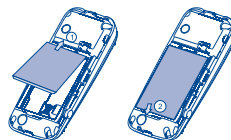

2

## 3 Menu .....

Select the menu option you desire using the navigation keys (, , , ), then press the left softkey to confirm the selection.



- Tools:**  
Access the Alarm and Calculator functions.
- Call services:**  
Access functions such as: voicemail number, call memory, call settings, network, call forwarding and call barring.
- Messages:**  
Read, write and send SMS messages. View new messages in your inbox, or sent messages in your outbox. Adjust the settings and activate/ deactivate SMS CB <sup>(1)</sup> message reception.
- Directory:**  
Access/create directory files and make calls from your directory.
- Sounds:**  
Change the mode, volume, ringtones, alerts, power on/off sounds and key beep.
- Display:**  
Change the main screen wallpaper, colors/reverse, power on/off display, screensaver and contrast.
- Settings:**  
Set the time, date, language, security mode, answer mode, etc
- Games:**  
Play the 2 games embedded in your cellphone.
- Services <sup>(2)</sup>:**  
Access the Operator services.

<sup>(1)</sup> Contact your network operator to check service availability.  
<sup>(2)</sup> Depending on your operator's network.

3

## 4 Main screen icons.....

- Battery charge level.**
- Vibrate mode <sup>(1)</sup>**
- Silence mode <sup>(2)</sup>**
- Unread message.**
- Message list is full**
- Unanswered call**
- Call forwarding activated:** your calls are forwarded
- Alarm programmed**
- Signal strength indicator.**
- Keypad lock.**
- Roaming.**

<sup>(1)</sup> For E202A only  
<sup>(2)</sup> For E102A also means vibrate mode

## 5 Tools .....

### 5.1 Alarm

+ = "snooze": The alarm will ring again after 5 minutes.  
+ = "cancel"

Note: When the cellphone is switched off, the alarm will ring.

### 5.2 Calculator

1 + 1 2  
select type of operation      confirm

4

## 6 Calls.....

### 6.1 Making a call

Dial number then press .

To hang up, press .

If you make a mistake, press to delete a digit, or press and hold to delete multiple digits.

### Making an emergency call

Dial 911 or other local emergency number and press . Emergency calls can be performed at anytime without your SIM card or PIN code. Once the call has been made, the screen will display: "SOS".

### Making an international call

Hold down + when "+" is displayed, enter the country and area codes, then complete the number and send the call.

### Calling a number from the directory

Press the key to access the directory. Select the desired cellphone number and press .

### 6.2 Calling your voicemail <sup>(1)</sup>

Press and hold the key to connect.

### 6.3 Available functions during a call

Access the available options during a call by pressing .

<sup>(1)</sup> Contact your network operator for more information.

5

## 7 Messages.....

Press or press and select .

### 7.1 Create an SMS

To hang up, press → "create" → Abc →

and choose your action:

**Send:** send the message to a recipient.

**Send to many:** send the message to a group of people you have defined

**Send to email:** send a message to an email address <sup>(1)</sup>.

**Save:** save the message in the unsent box and send it later.

**Templates:** use or modify an existing message.

**Discard:** discard the message.

**Predictive (T9):** select this mode to have your phone predict words as you type.

**123:** switch to numeric mode

**T9 help:** help menu for the predictive mode

### 7.2 Read an SMS

In the inbox, read and unread messages are shown with different icons.

The outbox includes sent and unsent messages.

### 7.3 Inbox/Outbox

Select the message and press and choose your option: Reply/Delete/Forward message/Archives/Modify/Extract number/Call number.

<sup>(1)</sup> Contact your network operator for service availability.

6

## 8 Directory.....

You may store up to 250 entries in the phone's directory.

### 8.1 Directory menu

**View:** view directory contacts (listed in alphabetical order).

**Create:** enter number and name of a new contact.

**Delete:** delete the selected contact.

**Copy:** copy the selected contact from the SIM memory to the phone memory and vice versa.

**Caller group:** assign contacts to a group.

**Select Dir.:** select the SIM directory, Phone directory or both at the same time.

**Memory status:** view number of contacts and memory available.

**My number:** enter your own cellphone numbers for future reference.

**Speed Dial:** set up speed dial for each key from 2 ABC to 9 WXYZ.

### 8.2 Creating a contact

select "create" and enter number and name of a new contact.

### 8.3 Consulting your directory ("View")

Select "Dir." then "View" to access the list of your contacts

#### Available options in the contact list

Once you have selected a name, press to access the following options: Call number/Send message/Details/Modify/Delete/Copy/Caller group/Search number.

#### Caller group

You can group together names by category and select a special ringtone. For each group, you can select the following options: Modify/Ringtone/SMS alert/Members/Add member/Delete all.

## 9 Sounds.....

From the main screen, press → and select one of the following options in order to customize your cellphone.

### 9.1 Mode

**Ringtone:** only the tone is played.

**Vibrate:** only vibrator is set (alarms and low battery alert will still sound).

**Vibrate & ring:** vibrate and tone simultaneously.

**Vibrate then ring:** vibrate then tone.

**Vibrate.Beep.Ring:** vibrate, warning beep, then tone.

**Silence:** no tone or vibrate, however alarms and low battery alerts will still sound.

### 9.2 Volume

The volume can be adjusted to one of the set levels.

## 10 Display .....

### 10.1 Wall paper <sup>(1)</sup>

Select the image you wish to be displayed as the idle screen.

### 10.2 Colors <sup>(1)</sup>/Reverse <sup>(2)</sup>

Change the color of the screen's display.

<sup>(1)</sup> OT-202A  
<sup>(2)</sup> OT-102A

7

### 10.3 Contrast

Set the contrast of your cellphone by choosing one of the 5 levels proposed.

### 10.4 Backlight

Select the display backlight duration : 7s, 15s, 20s, or 30s.

## 11 Settings .....

### 11.1 Clock

Set time and date, time format, display (show or hide the clock).

### 11.2 Languages

Select or change the language of the phone's menus.

### 11.3 Dictionary

Create, modify or delete a word in your personal dictionary. When creating an SMS, words typed are predicted from this dictionary and are automatically called if you choose the Predictive Mode (T9).

### 11.4 Auto keypad lock

To select the timing for the automatic locking of the keypad when the handset is not in use. From this function you may select a timing of 5 to 40 seconds, or to set it "off" if you prefer to lock it manually.

### 11.5 Auto power

### 11.6 Answer mode

### 11.7 Factory reset

<sup>(1)</sup> Contact your network operator for more information.

8

## 12 Call services .....

### 12.1 Call memory

From the main screen, press and your cellphone displays a call list. Each call is displayed with an icon indicating the type of the call.

Select a cellphone number in the list and press to redial it or press to access the following options :

**Details:** display the information of the call selected.

**Save number:** store the number in your directory.

**Send message:** create an SMS.

**Call number:** call the selected number.

**Modify:** modify the number, then call it or save it.

**Delete:** delete the number selected.

**Delete all:** delete the entire list.

### 12.2 Call settings <sup>(1)</sup>

Minute alert/Call waiting/Auto redial/Billing/Duration/Amount/Hide my ID.

### 12.3 Call services <sup>(1)</sup>

Network/Call forwarding/Call barring.

 
9

## 13 Games .....

### 13.1 Russia

The object of this game is to make as many complete lines of bricks as possible.

#### Key functions:

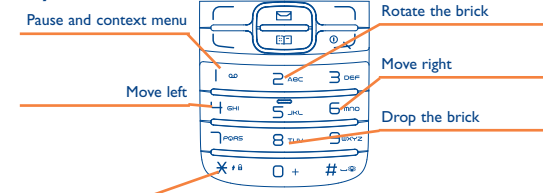

Toggle the upgrade level flag; if the flag is on, the game level will move up when your score increases to 300. The level impacts the speed of the bricks : the higher the level, the higher the speed.

### 13.2 Bricks

 
The object of this game is to break as many bricks as possible with a bat and ball.

3 lives per game.

Miss a ball = lose a life

Bonus depending on the position in which the ball hits the bricks.

#### Key functions:



10

ALCATEL is a trademark of Alcatel-Lucent and used under license by TCT Mobile Limited.

All rights reserved © Copyright 2008 TCT Mobile Limited.

TCT Mobile Limited reserves the right to alter material or technical specification without prior notice.

11

12

