 


Your cellphone

1.1 Keys and connectors

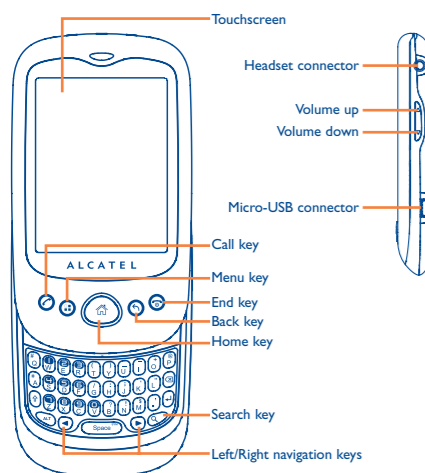

- Answer/Send a call
- Enter Call Log
- Return to ongoing call screen if the user navigates to other applications during call.
- On Home screen, press to quick access to **Settings** menu or Notification panel; to launch quick search; to customize your Home screen by adding applications or changing wallpaper.
- On other screens, press to view options list.
- Short press: Return to the Home screen or back to the central Home screen if it is extended.
- Long press: Enter the recently used applications list.
- Go back to the previous menu or screen.
- Short press: End a call
Lock the screen
- Long press: When cellphone is off, power on the cellphone. When cellphone is on, enter Phone options: Silent mode, Airplane mode, Power off.
- Press to adjust the Volume (in call/media playing mode)
- Open Search bar for searching within an application, the cellphone or web.
- Press to go left/right
- ALT+ Press to go up/down

⚠ Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Set your cellphone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.

OT-980A
OT-981
ALCATEL
mobile phones

English - CJB3171ALAAA

Notification panel

Touch and drag down the Status bar or press **Menu** key and touch **Notifications** to open the notification panel. Touch and drag up to close it. From Notification panel, you can open items and other reminders indicated by notification icons or view wireless service information.



Touch **Clear** to clear all event-based notifications (other ongoing notifications will remain).

1.3.3 Search bar

The cellphone provides a Search function which can be used to locate information within applications, the cellphone or the web.

1.3.4 Lock/Unlock your screen

To protect your cellphone and privacy, you can lock the cellphone screen by creating a variety of patterns.

1.3.5 Personalize your home screen

Add
Touch and hold an empty area or press **Menu** key and touch **Add** on the Home screen, you can add shortcuts, widgets or folders to the Home screen.

1.2 Getting started

1.2.1 Set-up

Removing or installing the back cover



Inserting or removing the SIM card

You must insert your SIM card to make phone calls. Please power off your cellphone and remove battery before inserting or removing the SIM card.



Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.

Installing or removing the battery



- Insert and click the battery into place, then close the cellphone cover.
- Unclip the cover, then remove the battery.

 
Installing and removing the memory card (MicroSD card)



Insert the MicroSD card with golden contact facing downwards into the slot until it is locked. Gently push the memory card until it is unlocked.

To remove the microSD card while the cellphone is on, you must unmount the storage card from the cellphone first, to prevent corrupting or damaging the storage card.

Charging the battery

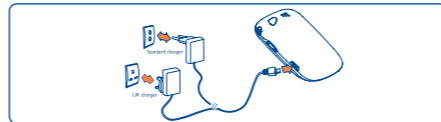

1.2.2 Power on your cellphone

Hold down the **End** key until the cellphone powers on.

Set up your cellphone for the first time

The first time you power on the cellphone, you are required to touch the Android logo to begin and then sign into your Google account to synchronize email, contacts, calendar and other Google applications.

In power on screen without SIM card inserted, you can also connect to a Wi-Fi network to sign into your Google account and to use some features.

1.2.3 Power off your cellphone

Hold down the **End** key from the Home screen until the cellphone options appear, select **Power off**.

1.3 Home screen

You can bring all the items (applications, shortcuts, folders and widgets) you love or use most frequently to your home screen for quick access. Press **Home** key to switch to Home screen.



Home screen is provided in an extended format to allow more space for adding applications, shortcuts etc. Slide the Home screen horizontally left and right to get a complete view of the Home screen. Small dots at the lower left and right of the screen indicate which screen you are viewing.

1.3.1 Using the touchscreen

Touch

To access an application, touch it with your finger.

Touch and Hold

To enter the available options for an item, touch and hold the item. For example, select a contact in Directory, touch and hold this contact, an option list will then appear on screen.

Drag

Place your finger on the screen to drag an object to another location.

Slide/Swipe

Slide the screen to scroll up and down the applications, images, web pages... at your convenience.

Flick

Similar to swiping, but flicking makes it move quicker.

Rotate

Automatically change the screen orientation from portrait to landscape by turning the cellphone sideways to have a better screen view.

1.3.2 Status bar

From status bar you can view both cellphone status (to the right side) and notification info (to the left side). When the status bar is full, "G" icon will appear, touch to display hidden icons.

Status icons


GPRS connected	Speakerphone is on
GPRS in use	Roaming
EDGE connected	No signal
EDGE in use	No SIM card installed
3G connected	Vibrate mode
3G in use	Ringer is silenced
HSPA (3G+) connected	Cellphone microphone is mute
HSPA (3G+) in use	Battery is very low

2 Text input

Your cellphone is equipped with two kinds of keyboard: Hardware Keyboard and Onscreen Keyboard.

2.1 Using Hardware Keyboard

 
Slide up the cellphone to open the Hardware Keyboard.

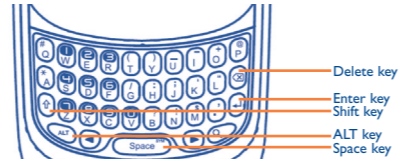

- Press once: Input a capitalized character
- Shift+Space: to select input method
- Press twice: Lock the keyboard in capital letter input mode.
- Press once: Input a top-half character.
- Press twice: Lock the keyboard in top-half key input mode.
- Enter a space
- ALT+Space: to enter symbol table
- Confirm an option
- Enter the next line
- Delete a word or character

2.2 Using Onscreen Keyboard

 Onscreen keyboard will display automatically when a program requires entering text or numbers.

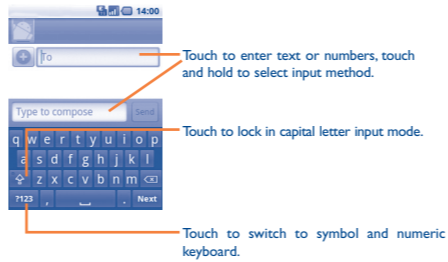

Onscreen keyboard settings

Press **Menu** key from Home screen, select **Settings** > **Language & Keyboard settings** > **Android keyboard**, a series of settings are available for your selection.

Adjust the onscreen keyboard orientation

Turn the cellphone sideways or upright to adjust the onscreen keyboard orientation. You can also adjust it by settings (Press **Menu** key on Home screen) > **Settings** > **Sound & display**).

2.3 Text editing

 
- You can edit the text you have entered.
- Touch and hold text you have entered
- An option list pops up
- Select the operation you need (**Select all**, **Select text**, **Cut all**, **Copy all**, etc.)

3 Cellphone call.....

3.1 Placing a call

User can easily launch a call using **Phone**. Enter this menu using one of the following two ways:


- Touch Application tab from Home screen and select **Phone**
- Press **Call** key, then select **Phone** tab.

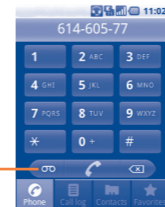

Enter the desired number from keyboard directly or select a contact from **Contacts**, **Call log** or **Favorites** by touching tabs, then press **Call** key or touch **Phone** to place the call. The number you entered can be saved to **Contacts** by pressing **Menu** key and touching **Add to contacts**. If you make a mistake, you can delete the incorrect digits by touching **Clear**.

To hang up a call, press **End** key.

 3.2 Answering or rejecting a call

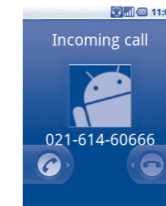

When you receive an incoming call, drag the green cellphone icon to the right or press **Call** key to answer. Hang up the call by pressing **End** key.

3.3 Consulting your call memory

You can access your call memory by pressing the **Call** key from the Home screen and touching **Call log** tab to view call history in categories of **Missed call**, **Dialed call** and **Received call**.

4 Contacts.....

You can view and create contacts on your cellphone and synchronize these with your Gmail contacts or other applications on the web or on your cellphone.

When using **Contacts** for the first time you are required to add new contacts to cellphone, import contacts from SIM card to cellphone, or synchronize contacts from other application accounts to cellphone.

4.1 Adding a contact

Touch **Application tab** on the Home screen, select **Contacts**, then press **Menu** key from contact list screen and touch **New contacts**.

Connected to a Wi-Fi network	Battery is low
Bluetooth is on	Battery is partially drained
Connected to a Bluetooth device	Battery is full
Airplane mode	Battery is charging
Alarm is set	GPS is on
Signal strength	Receiving location data from GPS
Headset connected	

Notification icons

New Gmail message	More notifications are hidden
New text or multimedia message	Call in progress (green)
Problem with text or multimedia message delivery	Call in progress using Bluetooth headset (blue)
New Google Talk message	Missed call
New voicemail	Call on hold
Upcoming event	Call forwarding is on
Data is synchronizing	Uploading data
Problem with sign-in or synchronization	Downloading data
microSD card is full	Download finished
An open Wi-Fi network is available	Connected to VPN
Cellphone is connected via USB cable	Disconnected from VPN
Song is playing	System update available

4.2 Importing and exporting contacts

From **Contacts** screen, press **Menu** key to open contact list option menu, touch **Import/Export**, then select **Import from SIM**, **Import from MicroSD card** or **Export to SD card**.

To import/export a single contact, touch the contact you want to import/export, then **Done**.

To import/export all contacts, press **Menu** key, then touch **Import all/Export all**.

4.3 Synchronizing contacts in multiple accounts

Contacts, data or other information can be synchronized from multiple accounts, depending on the applications installed on your cellphone.

5 Messaging.....

You can create, edit and receive SMS and MMS with this cellphone.

To access this feature, touch Application tab from Home screen, then select **Messaging**.

All messages you receive or send out can only be saved in cellphone memory. To consult messages stored in SIM card, press **Menu** key from Messaging screen, then touch **Settings** > **Manage SIM card message**.

5.1 Create message

On message list screen, touch **New message** to create text/multimedia messages.

Sending a text message

Enter cellphone number of the recipient on **To** bar, touch **Type to compose** bar to enter the text of the message. When finished, touch **Send** to send the text message.

