nory card scanning in progress

ory card scanning completed.

Line switching (2): indicates the selected line

Message receipt in progress

one message on your SIM card.

Contact your network operator to check service availability.

Store them in your "Media album\My creations".

Transfer them by microSD card to your computer.

Camera.....

· Send them in a multimedia message (MMS) to a cellphone or an

Select them as incoming call image to a contact in your directory.

Profiles.....

Media album.....

With this menu, you may personalise ringtones for different events and

except for the alarms.

Flight mode

nection status (Blue - Activated)

nce mode: your cellphone neither rings, beeps nor vibrat

Message list is full your terminal cannot accept any new

messages. You must access the message list and delete at least

Your cellphone



(1) Depending on your network operator.



5.1.2 Inbox

All received messages (read and unread) are stored in the same Inhox

Group by sender/Group by receiver(1)

Messages can be grouped by sender/receiver ("Options\Group by Protect yourself from annoying situations with the "Fake Call". In this sender","Options\Group by receiver"). And you are enabled to quick meun, you can set "Caller name/nb", "Call time" and "Ringtone". search the messages by pressing the key associated with the first letter of sender/receiver's name.

5.2 SMS Conversation (chat) (2)

Access to "Advanced" and select "Switch view mode" keep the conversation going in real time using SMS chat. You may separate chat for every contact with whom you exchange short text messages.

Your cellphone has an email client with the settings predefined for a few popular email services like - GoogleMail, Windows live, Yahoo, AOL, etc.

Directory

6.1 Consulting your directory

To access the Directory from the main screen, press the key and select the 💷 icon.

6.2 Adding a contact

Depending on your network operator.

HTML email and image in email not supported

Select the contacts list in which you wish to add a contact to, press the "Options" softkey, select "Add contact" then Save.

pages. Offline pages 9.2 Weather

Your cellphone is equipped with a weather function for consulting up

Confirm an option (press the middle of the key)

Switch on/Switch off the cellphone (long keypress)

Access to many (short keypress)

Send a call

Left softkey

Right softker

Input the "#" in Idle

In edit mode: Short keypress: input space

call the call will terminate automatically

Show/hide shortlist menu(long keypress)

Access call memory (short keypress)

Access your voicemail (long keypress)

Long/short keypress: Lock/Unlock the keypad

Fake Call.....

When the timer reaches, the cellphone will ring and display like receiving a

display just like have an ongoing call. Press W key, pretend to reject the

Radio

parallel visual information related to the radio program on the display, if you

tune to stations that offer Visual Radio service. You can listen to it while

Internet⁽²⁾

Access WAP options: Homepage, Bookmarks, Go to URL, Recent available: View, Add/Edit, Delete.

Long keypress: switch language

En key + Space: switch input mode

Access to Fake call (long keypress)

Return to the idle screen

3-day forecast of favorite cities.

(1) The quality of the radio depends on the coverage of the radio station in that (1) The option of Group by receiver is available in Outbox, Sent, and Draft folders

9.I WAP

Depending on your network operator. May cause additional network charges for data flow to provide this service. Extra fees might also be charged in roaming

Fn + S: access to Notes

In idle screen

Press to access shortcuts En + Praccess to Profiles Fn + Q: access to Clock

In edit mode:

Press once to input top-half characte

Press twice to lock top-half inputting mode, then press once t unlock top-half inputting mode.

Long keypress: access to Dictionary.

In edit mode:

Short press: popup symbol page to select special character by

Long press & Fn+SYM: popup smileys page to select special smileys by navigation key

Delete one by one (short keypress) Delete one by one quickly (long keypress)

Switch the uppercase and minuscule (in edit screen)

Return a cursor to the next line.

1.2 Main screen icons (I

Vibrate alert: Your cellphone vibrates, but does not ring

Keypad locked Call forwarding activated: your calls are forwarded.

The icons and illustrations in this guide are provided for informational purposes (i) Depending on your network operator

email address

Send them directly by Email.

Customize your main screen.

It is a huge time saver providing news updates from a website in a simple form. Once subscribed to a channel, it gives you the ability to track and manage all your favorite RSS content on your cellphone at anytime, Your cellphone is fitted with a camera for taking photos that you can use in Access this feature from the main menu by selecting "Music player". You

Update all

vibration alert.

real cellphone call. Press key, pretend answering a call, the screen will View Message title or message summary of a channel with URL will be shown.

Refresh the content of a channel Create a new channel with name and URL. Delete

Delete the channel. Edit the name or URL of a channel Refresh all channels.

Select a regular interval to retrieve updates automatically set to show images or not, as well as a WAP account to Your cellphone is equipped with a Radio (1) with RDS functionality. You can Enable/Disable Activate auto-update or not to all channels.

use the application as a traditional Radio with saved channels or with all auto-update

Share a channel with your friend by sending it by SMS,

ICE

ICE (in case of emergency) are 3 numbers emergency services can call if you have an accident, you can also add useful information such as blood type, allergy, Access to "ICE" menu from main menu and below options are You will have an access to all audio and visual files stored in cellphone or in Enter a number, select the type of operation to be performed using the 18.1 Keys audios, My images, Unknown files and Memory status.

Inserting the memory card Games.....

Your cellphones includes some games, Select "Game settings", it allows you to manage settings, in which you may set background audio and

> Unclip the cover and insert the MicroSD card with golden contact downwards into the slot.

Unclip the cover and gently push the memory card until unlocked Take out your MicroSD card and clip the cover closed.

Getting started

2.1 Set-up

Removing or installing the back cover





Installing or removing the battery









Music Player

Services.....

Others.....

Once you enter this menu from main menu, there is a monthly-view

Enables you to easily manage and track the progress of an task with

Access this feature by selecting "Calculator" from the main menu.

Contact your network operator to check service availability

Days with events entered will be marked in color.

priorities. All the tasks will be sorted by due date

17.1 Calendar

17.2 Calculator

Inserting or removing the SIM card





From main menu, press left softkey and select "Move" or long keypress Place the SIM card with the chip facing downwards and slide it into its key till tick "\" is shown, then move the cursor to your favorite destination housing. Make sure that it is correctly inserted. To remove the card, press and confirm with \infty key. the bottom and slide it out. Please power off your cellphone before you

2.2 Power on your cellphone

Hold down the W key until the cellphone powers on.

2.3 Power off your cellphone

Hold down the W key until the cellphone power off.

Calls.....

3.1 Making a call

remove the SIM card

softkey or @ key.

To hang up the call, press the W key.

Making an emergency call

If your cellphone has network coverage, dial emergency number and press the key to make an emergency call. This works even without a SIM card and without typing the PIN code or unlocking the keypad.

17.5 Clock

Your cellphone has a built-in alarm clock with a spooze feature

will have full flexibility of managing music both on your cellphone and Allows you to have settings of date and time, including 12/24h format.

17.5.3 World clock The World clock shows current local time and the time zone in different

The stopwatch is a simple application for measuring time with the possibility

to register several results and suspend/resume measurement 17.6 Converter

Unit converter and Currency converte

Settings.....

calendar for you to keep track of important meetings, appointments, etc. From the main menu, select the menu icon and select the function of our choice in order to customize your cellphone: Display, Languages, Headset, Input mode, Vocabulary, Keys, Security, Networks, Conr Restore default set, Call settings.

You will have an access to all audio and visual files stored in cellphone or in Medium Album. You can access a number of items with this option: My avigation keys, and enter the second number, then press key or left You may set the keypad to which you prefer to.

Fn + Keys: you may define the combined Fn key function and to get shortcuts with below options: Edit/Add/Delete.

You can create a note in text or voice format by accessing "Notes" from 18.2 Call settings

My numbers

Your cellphone number is usually written on your SIM card.

You can access different items with this option: Amount, Duration, GPRS counter. Beep duration.

(i) Depending on your network operator

Access "Menu arrange", press \bigcirc key till tick (" $\sqrt{}$ ") show or off, it will show/hide some main r

Messages

You can access your call memory by pressing the key from the idle

screen. Check "Outgoing calls", "Missed calls", "Answered calls".

💶 Menu arrange......

Main Menu is designed to vary according to your preference.

Messages: Text/Multimedia message

5.1.1 Create message

3.2 Call memory

Change the order

From the main menu select "Messages" to create text/multimedi

You can type a message and you can also modify a predefined message in Templates or customize your message by adding pictures, photos, sounds, Dial the desired number then press the key to place the call. If you titles, etc (only available while editing a MMS). While writing a message, make a mistake, you can delete the incorrect digits by pressing the right select "Options" to access all the messaging options. You can save your messages that you send often to **Drafts** or **Templates** (MMS only).



ALCATEL is a trademark of Alcatel-Lucent and is used under license by TCT Mobile Limited.

All rights reserved © Copyright 2010 TCT Mobile Limited.

TCT Mobile Limited reserves the right to alter material or technical specification without prior notice.

Prolonged exposure to music at full volume on the music player may damage Type in or modify your cellphone number and confirm by pressing ... the listener's hearing. Set your cellphone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.

English - CIB21S1ALAAB





To write messages, there are two writing methods

- Normal: this mode allows you to type a text by choosing a letter or a •TRAFFIC SAFETY: sequence of characters associated with a key.
- Predictive with the 7i mode: This mode speeds up the writing of your text

Fn key Fn: Press once: input top-half character,

Press twice: lock top-half character inputting mode, then press once to unlock top-half character inputting mode.

Short press once: only switch one character from

Short press twice: lock uppercase input mode

Short press once: unlock the uppercase

Long keypress; delete one by one quickly

In e7iahc (Smartahc) input mode

Short keypress: delete one by one

Short press once to e7i ABC

Short press twice: to eZi Abc

Long press: access to Dictionary Short keypress: access the Symbols table

nuscule to uppercase

Long keypress & Fn + Sym: popup smileys page Short press; input space

- Long press: press to switch language - do not place your cellphone on top of the dashboard or within an airbag Fn+Space: switch input mode deployment area. In abc (Multitapabc) input mode (no Abc mode):
 - electronic devices are shielded from cellphone RF energy.

CONDITIONS OF USE

performance.

Switch the cellphone off when you are in health care facilities except in designated

Switch the cellphone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, gas station, or chemical plant, or in

medical device such as a pacemaker a hearing aid or insulin pump. In particular when using the cellphone you should hold it against the ear on the opposite side to the device, if any,

because the amplified volume might cause hearing damage

accessories without supervision

When replacing the cover please note that your cellphone may contain substances that could create an allergic reaction.

the radio. Using a headphone can be dangerous and forbidden in some areas. with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

vices may be prohibited or restricted in certain areas

check with your car dealer or the car manufacturer to make sure that the car's

When driving do not use your cellphone and headphone to listen to music or to

You are advised to switch off the cellphone from time to time to optimize it Switch the cellphone off before boarding an aircraft to avoid prosecution

areas. As with many other types of equipment now in regular use, cellphones can interfere with other electrical or electronic devices, or equipment using radio

any potentially explosive atmosphere When the cellphone is switched on, it should be kept at least 15 cm from any

To avoid hearing impairment, answer the call before holding your cellphone to your ear. Also move the handset away from your ear while using the "hands-free" option

Do not let children use the cellphone and/or play with the cellphone and

Latin input mode...... We recommend that you read this chapter carefully before using your cellphone. conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is -10°C to +55°C (the The manufacturer disclaims any liability for damage, which may result as a max value depends on device, materials and housing paint/texture).

temporary and not serious

Do not open or attempt to repair your cellphone yourself

real risk, even when the hands-free kit is used (car kit, headset...), drivers are Do not paint it.

Check the laws and regulations on the use of wireless cellphones and their. TCT Mobile Limited and its affiliates and are compatible with your cellphone accessories in the areas where you drive. Always obey them. The use of these model.TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries

Your cellphone should not be disposed of in a municipal waste. Please check local regulations for disposal of electronic products

When switched on, your cellphone emits electromagnetic waves that can interfere Remember to make back-up copies or keep a written record of all important information stored in your cellphone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult Batteries must be disposed of in accordance with locally applicable environments. your doctor before playing video games on your cellphone or enabling a flashinglights feature on your cellphone. Parents should monitor their children's use of use damaged batteries or those not recommended by TCT Mobile Limited and/or video games or other features that incorporate flashing lights on the cellphones. All its affiliates persons should discontinue use and consult a doctor if any of the following symptoms occur; convulsion, eye or muscle twitching, loss of awareness, involuntary vements, or disorientation. To limit the likelihood of such symptoms, please take

Do not play or use a flashing-lights feature if you are tired or need sleep.

Take a minimum of a 15-minute break hourly

Play in a well lit environment.

Play at the farthest distance possible from the screen.

discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendinitis carnal tunnel syndrome or other musculoskeletal disorders:

- Take a minimum of a 15-minute break every hour of game playing. If your hands, wrists, or arms become tired or sore while playing, stop and rest

the game and see a doctor.

listener's hearing impairment. Adjust the volume before placing headphones INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE on or in your ear.Only use headphones recommended by TCT Mobile INSTRUCTIONS Limited and its affiliates.

or other jurisdiction(s) where you will use your cellphone regarding ons, it may be strictly forbidden to take photographs and/or to record the oices of other people or any of their personal attributes and reproduce or distribut them as this may be considered to be an invasion of privacy

It is the user's sole responsibility to ensure that prior authorization be obtained if necessary, in order to record private or confidential conversations or take a Battery: tograph of another person; the manufacturer, the seller or vendor of your

BATTERY AND ACCESSORIES

relinhone is switched off

Do not puncture, disassemble or cause a short-circuit in a battery.

Do not burn or dispose of a used battery in the garbage or store it at temperatures above 60°C

This symbol on your cellphone the battery and the accessories

Municipal waste disposal centers with specific bins for these

vironment so that their components can be reused

These collection points are accessible free of charge. All products with this sign must be brought to these collection points.

In non European Union jurisdictions: jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled. In the United States you may learn more about CTIA's Recycling Program at www

Prolonged exposure to music at full volume on the music player may cause the CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN

CHARGERS

Home A.C./Travel chargers will operate within the temperature range of: 0°C to 40°C. The chargers designed for your cellphone meet with the standard for safety of part 15 of the FCC Rules. These limits are designed to provide reasonable ion technology equipment and office equipment use. Due to different protection against harmful interference in a residential installation. This equipment applicable electrical specifications, a charger you purchased in one jurisdiction may generates, uses and can radiate radio frequency energy and, if not installed and used not work in another jurisdiction. They should be used for this purpose only.

Characteristics of power supply (depending on the country) Travel charger: Input: 100-240 V, 50/60 Hz, 150 mA

Output: 5 V. 350/400 mA Lithium 650 mAh

• RADIO WAVES:

THIS CELLPHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your cellphone is a radio transmitter and receiver It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RE energy for the general population. The guidelines are based on standards that were compliance could void the user's authority to operate the equi developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include a substantial safety margin For the receiver devices associated with the operation of a licensed radio service designed to ensure the safety of all persons, regardless of age and health. (e.g. EM broadcast) they bear the following statement:

The exposure standard for cellphones employs a unit of measurement known as the This device complies with Part 15 of the FCC Rules. Operation is subject to the Specific Absorption Rate, or SAR. The SAR limit set by public authorities such as the condition that this device does not cause harmful interference. rederal Communications Commission of the US Government (FCC), or by Industry For other devices, they bear the following stater Canada, is 1.6 W/kg averaged over 1 gram of body tissue. Tests for SAR are conducted

This device complies with Part 15 of the FCC Rules. Operation is subject to the using standard operating positions with the cellphone transmitting at its highest following two conditions: certified power level in all tested frequency bands. (1) this device may not cause harmful interference

Although the SAR is determined at the highest certified power level, the actual SAR (2) this device must accept any interference received including interference that level of the cellphone while operating can be well below the maximum value. This is may cause undesired operation because the cellphone is designed to operate at multiple power levels so as to use Your cellphone is equipped with a built-in antenna For optimal operation you only the power required to reach the network. In general, the closer you are to a should avoid touching it or degrading it. wireless base station antenna, the lower the power output of the cellphone Before a cellphone model is available for sale to the public, compliance with national egulations and standards must be shown.

the ear and 1.02 W/Kg for use close to the body.

various positions, they all meet the government requirement for RF exposure. For body-worn operation, the cellphone meets FCC RF exposure guidelines provided . LICENCES that it is used with a non-metallic accessory with the handset at least 1.5 cm from Obigo® the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

does not indicate the need for any special precautions for use of cellphones. individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep cellphones away from the head and body. (fact sheet n°193). Additional WHO information about electromagnetic fields and public health are available on the 18

following website: http://www.who.int/peh-emf. Note: This equipment has been General information tested and found to comply with the limits for a Class B digital device pursuant to

Website: www.alcatel-mobilephones.com

in accordance with the instructions, may cause harmful interference to radio Hot Line Number: see "TCT Mobile Services" leaflet or go to ications. However, there is no guarantee that interference to radio or television reception, which can be determined by turning the equipment off and on,

On our Internet site, you will find our FAO (Frequently Asked Questions section. You can also contact us by e-mail to ask any questions you may

An electronic version of this user guide is available in English and other languages according to availability on our server; www.alcatel-mobilephones

Your cellphone is a transceiver that operates on GSM networks with 850 Changes or modifications not expressly approved by the party responsible for and 1900 MHz bands.

Protection against theft (1)

Your cellphone is identified by an IMEI (cellphone serial number) shown or the packaging label and in the product's memory. We recommend that you ote the number the first time you use your cellphone by entering * # 0 6 # and keep it in a safe place. It may be requested by the police or your erator if your cellphone is stolen. This number allows your cellphone to be blocked preventing a third person from using it, even with a different SIM

As mobile devices offer a range of functions, they can be used in positions other **Disclaimer**

than against your ear. In such circumstances the device will be compliant with the

There may be certain differences between the user manual description and regulations and standards must be shown.

The highest SAR value for this model cellphone when tested is 1.21 W/Kg for use at guidelines when used with headset or usb data cable. If you are using another the cellphone's operation, depending on the software release of your accessory ensure that whatever product is used is free of any metal and that it cellphone or specific operator services.

Contact your network operator for service availability

Cellphone warranty

Your cellphone is warranted against any defect or malfunctioning which may occur in conditions of normal use during the warranty period of twelve (12) months (1) from the date of purchase as shown 2) on your original invoice.

warranted against any defect which may occur during the first six (6) months (1) from the date of purchase as shown on your original 4) Inclement weather, lightning, fire, humidity, infiltration of liquids or

In case of any defect of your cellphone which prevents you from normal use thereof, you must immediately inform your vendor and present your cellphone with your proof of purchase

If the defect is confirmed your cellphone or part thereof will be (IMEI) have been removed or altered. either replaced or repaired, as appropriate. Repaired cellphone and accessories are entitled to a one (I) month warranty for the same. There are no express warranties, whether written, oral or implied, components offering equivalent functionality.

This warranty covers the cost of parts and labor but excludes any

The warranty period may vary depending on your country.

IP3235_355A_QG_Eng_USA_03_101020.indd 2

The life of a rechargeable cellphone battery in terms of conversation tim standby time and total service life will depend on the conditions of use and network configuration. Batteries being considered expendable supplies, the specifications state that you should obtain optimal performance for you cellphone during the first six months after purchase and for approximately 200

This warranty shall not apply to defects to your cellphone and/or accessory due to (without any limitation):

- 1) Non-compliance with the instructions for use or installation, or with technical and safety standards applicable in the geographical area where your cellphone is used Connection to any equipment not supplied or not recommended
- by TCT Mobile Limited Batteries (2) and accessories sold with your cellphone are also 3) Modification or repair performed by individuals not authorized by TCT Mobile Limited or its affiliates or your vendor.
 - foods, chemical products, download of files, crash, high voltage, corrosion, oxidation...

Your cellphone will not be repaired in case labels or serial numbers

defect. Repair or replacement may be carried out using reconditioned other than this printed limited warranty or the mandatory warranty provided by your country or jurisdiction

> "In no event shall TCT Mobile Limited or any of its affiliates be liable for indirect, incidental or consequential damages of any nature whatsoever, including but not limited commercial or financial loss or damage, loss of data or loss of image to the full extent those damages can be disclaimed by law

Some countries/states do not allow the exclusion or limitation of indirect, incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or My cellphone turns off by itself exclusions may not apply to you."

Troubleshooting.....

Before contacting the aftersales department, you are advised to follow the

- You are advised to switch off the cellphone from time to time to optimize its performance.
- You are advised to fully charge (III) the battery for optimal Avoid storing large amounts of data in your cellphone as this may

affect the performance of your cellphone and carry out the following checks:

My cellphone will not switch on

- Press y until the screen comes on
- Check the battery charge level
- Check the battery contacts, remove and reinstall your battery, then turn your cellphone back on

My cellphone has not responded for several minutes

- Press the W key
- Remove the battery and re-insert it then switch the cellphone back

My screen is difficult to read Clean your screen

- Use your cellphone in accordance with the recommended conditions
- Check that your keypad is locked when you are not using your
- Check the battery charge leve

23

My cellphone will not charge properly

- Make sure that your battery is not completely discharged; the battery charge indicator can take several minutes and may be accompanied by a quiet whistling sound
- Make sure charging is carried out under normal conditions (0°C valid, etc.)
- Make sure your battery is inserted. It must be inserted before plugging in the charger Make sure you are using an Alcatel battery and charger in the box When abroad check that the electrical current is compatible

My cellphone will not connect to a network

- Try connecting in another location
- Verify the network coverage with your operator
- Check with your operator that your SIM card is valid
- Try selecting the available network(s) manually Try connecting at a later time if the network is overloaded

- Make sure the SIM card has been correctly inserted
- Verify with your operator that your SIM card is 3V or 1.8V compatible: the old 5V SIM cards cannot be used
- Make sure the chip on your SIM card is not damaged or scratched

Unable to make outgoing calls

- Make sure you have dialled a valid number and press the key For international calls check the country and area codes
- Make sure your cellphone is connected to a network, and that the network is not overloaded or unavailable Check your subscription status with your operator (credit, SIM card
- Make sure you have not barred outgoing calls

- Make sure your cellphone is switched on and connected to a network (check for overloaded or unavailable network)
- Make sure you have not forwarded incoming calls

The caller's name does not appear when a call is received • Check that you have subscribed to this service with your operator

- The sound quality of the calls is not optimal You can adjust the volume during a call by means of the key

I am unable to use the features described in the manual Check with your operator to make sure that your subscription

not dialled

Make sure that you have selected the country prefix when calling a

My callers are unable to leave messages on my voicemail

the user is encouraged to try to correct the interference by one or more of the

Connect the equipment into an outlet on a circuit different from that to which

following measures

the receiver is connected.

Regrient or relocate the receiving antenna

Increase the separation between the equipment and receiver

Consult the dealer or an experienced radio/TV technician for help

Make sure your operator's voicemail number is correctly entered in "My numbers

I am unable to send and receive messages MMS. Vox MMS

- Check your cellphone memory available as it might be full
- Verify the server center number or your MMS profile with your
- The server center may be saturated; try again later

The icon is displayed on my standby screen

 You have saved too many short messages on your SIM card; delete some of them or archive them in the product memory

I have already entered 3 incorrect PIN codes Contact your network operator to obtain the PUK code (Personal

Unblocking Key) I am unable to download new files

- Delete some files
- Check your subscription status with your operator

- My cellphone is frozen, can't power on Make sure your battery is not completely used up or damaged Remove your battery, remove your SIM card then reinstall them to
- power on again, if still does not work: Hold down # key and press Power on/off key for a while to reset



- How to make your battery last longer Make sure you follow the complete charge time (minimum 3 hours) After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain
- an exact indication

the cellphone

- Switch on the backlight upon request. Extend email auto-check interval to as long as possible.
- Update weather info. upon demand manually or set its auto-check interval longer

























2010-10-20 8:53:13

25

Always handle your cellphone with care and keep it in a clean and dust-free place

consequence of improper use or use contrary to the instructions contained Over 55°C the legibility of the cellphone's display may be impaired, though this is

en that studies show that using a cellphone while driving a vehicle constitutes a Do not drop, throw or try to bend your cellphone

quested to refrain from using their cellphone when the vehicle is not parked. Use only batteries battery chargers and accessories which are recommended by

When you play games on your cellphone, you may experience occasional In European Union countries:

for several hours before playing again. If you continue to have sore hands, wrists, or arms during or after playing, stop

Before removing the battery from your cellphone, please make sure that the

Observe the following precautions for battery use Do not attempt to open the battery (due to the risk of toxic fumes and burns)

means that these products must be taken to collection points at the end of their life:

- Collection bins at points of sale They will then be recycled, preventing substances being disposition

While there may be differences between the SAR levels of various cellphones and at positions the cellphone at least 2cm away from the body.

eZiText™ and Zi™ are trademarks of Zi Corporation and/or its The World Health Organization (WHO) considers that present scientific information

Unable to receive incoming calls

- Check your subscription status with your operator (credit, SIM card
- Make sure that you have not barred certain calls

Your caller has concealed his/her number

Check the network strength ...

includes this service Make sure this feature does not require an Alcatel accessory When I select a number from my directory, the number

Make sure that you have correctly recorded the number in your

foreign country I am unable to create a file in my directory

Make sure that your SIM card directory is not full; delete some files or save the files in the product directory (i.e. your professional or

Contact your network operator to check service availability.

is a registered trademark of Obigo AB.

I cannot access my voicemail

- Try later if the network is busy
- Contact your network operator to check service availability and check MMS parameters
- operator

"No service" is displayed You are outside of the network coverage area

Check for free space