

Quick Start Guide

For more information about how to use the phone, please go to www.alcatelonetouch.com to download complete user manual. Moreover, from the website you can also consult FAQ, realize software upgrade via PC suite, etc.

ALCATEL one touch

English - CJB31MQALAAA

Your cellphone.....



- Left soft key
- Right soft key
- Answer/Send a call
- Enter Call log
- Press: End a call
 - Return to the main screen
- Press n hold: Power on/off
- Press n hold: Access your voicemail
- Press once: Input a capitalized character
- Press twice: Lock the keyboard in capital letter input mode
- Press: Press once: Input a top-half character
 - Press twice: Lock the keyboard in top-half key input mode
- Fn + B: Access Bluetooth
- Fn + M: Access Music player
- Fn + P: Access Profiles
- Fn + J: Access Java applications
- Navigation key
- Confirm an option (press the middle of the key)
- Press: Enter a space
 - Unlock the screen
- Press n hold: Access language list
 - Lock the screen
- Hold down Fn key, then press Space key to select input method
- Enter symbol table
- Hold down Fn key, then press SYM key to enter emotion table
- Confirm an option
- Enter the next line
- Vibrate alert
- Volume up/down
- Press to enter Music player

- ### 1.1 Status bar icons⁽¹⁾
- Battery charge level**
 - Vibrate alert:** your cellphone vibrates, but does not ring or beep with the exception of the alarm.
 - Bluetooth status (Activated).**
 - Bluetooth status (Connected to an audio device).**
 - Java status (Activated).**
 - Headset connected.**
 - Keypad & LCD touch locked.**
 - Keypad & LCD touch unlocked.**
 - Call forwarding activated:** your calls are forwarded.
 - Alarm or appointments programmed.**
 - Level of network reception.**
 - Wi-Fi connected.**
 - Wi-Fi disconnected.**
 - Voicemail message arrived.**
 - Missed calls.**
 - Stopwatch is active.**
 - Radio is on.**

- Email unread.**
- WAP alerts⁽²⁾.**
- Roaming.**
- SD card scanning in progress.**
- SD card scanning completed.**
- SIM card unavailable.**
- Line switching⁽³⁾:** indicates the selected line.
- GPRS connection status (Activated).**
- GPRS connecting.**
- EDGE connecting.**
- EDGE attached.**
- Music player active.**
- Message receipt in progress.**
- MMS receipt in progress.**
- Sending a SMS.**
- Sending a MMS.**
- Silence mode:** your cellphone does not ring, beep or vibrate with the exception of the alarm.
- SMS unread.**
- MMS unread.**

- ### 1.2 Status list
- Tap the status bar and drag down to open, drag up to close.
To open an application, tap it from the list.
- ### 1.3 Home screen
- #### Adding items
- To add an item from the main menu, you can select one of the following ways:
- Tap and hold an item from the main menu list.
 - Tap **Home** from the tool bar and select "Add widgets/Add shortcuts".
 - Touch and hold an empty area from the main screen, select "Add widgets/Add shortcuts" from the window that opens, then tap the item you want to add to the Home screen.
- #### Editing/Removing items
- To edit/remove an item from the main screen, you can select one of the following ways:
- Long press the application on the Home screen, touch **Edit** (only for my favorites), touch **Remove** to remove, and then confirm by tapping "Done".
- Tap **Home** from the tool bar and select "Delete shortcuts and widgets".

- ### 2 Getting started
- #### 2.1 Set-up
- #### Wallpaper
- To personalize your wallpaper, you can select one of the following two ways:
- Touch and hold an empty area from the Home screen, select "Wallpaper", then tap a folder to select an image as your wallpaper.
 - Tap **Home** from the tool bar, select "Wallpaper", then tap a folder to select an image as your wallpaper.
- #### Installing or removing the SIM card
- You must insert your SIM card to make phone calls. Please power off your cellphone and remove battery before inserting or removing the SIM card.
- Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.
- #### Installing or removing the battery
- Insert and click the battery into place, then close the cellphone cover.
- Unclip the cover, then remove the battery.
- #### Charging the battery
- Connect the battery charger to your phone and outlet respectively.
- To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.

- ### 2.2 Power on your cellphone
- Hold down the **Power** key until the cellphone powers on.
- ### 2.3 Power off your cellphone
- Hold down the **Power** key from the main screen.
- ### 2.4 Using the touchscreen
- Tap** To access an application, tap it with your finger.
- Scroll** Slide the screen to scroll up and down the applications, images, web pages... at your convenience.
- ## 3 Making a call.....
- Enter the desired number on the hardware keypad directly.
- The number you entered can be saved to Contacts by selecting "Save". If you make a mistake, you can delete the incorrect digits by pressing **Back** or **End**.
- To hang up the call, press the **End** key.
- ## 4 Menu arrange.....
- The main menu is designed to vary according to your preference. To access this function, select **Menu arrange** to enter the main menu, then tap **Menu**.
- #### Change the order
- Access the main menu, focus on the main menu item you want to move, and then tap "Options/Move", it will go to the main menu screen and tick "M" will be shown on the main menu you selected, then release it to your favorite destination.

- ## 5 Messaging.....
- #### Show/Hide
- Access "Menu arrange", tap the left check box of the selected menu once to show/hide, then tap "Done" to save the operation.
- ### 5.1 Conversational On (Off) mode
- In conversational on mode, you can view chat history in chronological order. In conversational off mode, you can access the following folders: **Inbox**, **Outbox**, **Sent**, **Drafts**, etc. You can switch between these two modes by selecting "Options/Settings/Conversational mode On (Off)". Conversational mode is set as the default mode and the following instructions are based on this mode.
- ### 5.2 Write message
- Select "Messaging/Write message" to create text/multimedia messages. An SMS will be converted to MMS automatically when: images, videos, audio, slides or attachments are inserted; Subject, CC/BCC/email address is added; or the message contains more than 8 pages of text.
- Specific letters (accent) will increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.
- #### Timer send
- Schedule a SMS/MMS to be sent out at predefined time ("Option/Timer send").
- ## 6 Email
- Your cellphone has an email client with the settings predefined for a few popular email services like - GoogleMail, Yahoo, AOL, etc. Besides this, you can set up other POP3 or IMAP4 email accounts that you may be using.

- ## 7 Palringo (1).....
- Palringo Instant messaging (IM) allows you to chat with other people using Palringo account. You can also connect to other popular IM services through Palringo, like Yahoo, AIM, GG, ICQ, GTalk, iChat etc. Please note that the services accessible to you will depend on your client version and dynamic Palringo server options.
- ## 8 Contacts.....
- ### 8.1 Consulting your Contacts
- To access the Contacts, select "Contacts" from the main menu or tap **Contacts** from tool bar. The location of each contact can be identified by an icon on the left of the contact name.
- ### 8.2 Adding a contact
- You can create a new contact by tapping "Options/Create new".
- #### Birthday reminder
- You can set a birthday reminder when editing contact information. This will remind you at regular intervals during the day prior to the set date.
- ## 9 Call log.....
- ### 9.1 Access
- You may access this function from the main menu "Call log" or by tapping **Call log** from tool bar or pressing **Call log** from the main screen.

- ### 9.2 Available options
- When you tap "Options", you may have access to **Delete**, **Send message**, **Save to Contacts**, **Edit before call**, etc.
- ### 9.2.1 Call settings (1)
- You can access a number of items with this option: **Call waiting**, **Call forwarding**, **Call barring**, **Caller ID**, **Line switching**, **Auto redial**, etc.
- ## 10 Media applications
- ### 10.1 Music player
- To access this function, tap **Music** to enter the main menu and select **Music**. You will have full flexibility of managing music both on your cellphone and SD card.
- ### 10.2 Image viewer.....
- A library links to the images in "My creations" in cellphone to be shown in list, or slide, set as Wallpaper, Power on/off display, and incoming call image, or sent by MMS, Email, Bluetooth.
- ### 10.3 Video player
- "My videos" album contains video clips recorded, received or downloaded. All video clips in this folder can be played, set as Power on/off display, sent, deleted, renamed, sorted, etc.
- ### 10.4 Radio
- Your cellphone is equipped with a radio (1) with RDS (2) functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer Visual Radio service. You can listen to it while running other applications.

- ## 11 Internet (1)
- ### 11.1 Opera.....
- Not only does Opera Mini give you the full Web experience where you stay in touch with your friends, obtain information, do your online banking etc., but it is also designed to save time by using compressed web pages.
- ### 11.2 Wap.....
- Access Wap options: **Homepage**, **Bookmarks**, **Go to URL**, **Last web address**, **Recent pages**, **Offline pages**, **Service inbox**, **Settings**.
- ### 11.3 News
- It is a huge time saver providing news updates from a website in a simple form. Once subscribed to a channel, it gives you the ability to track and manage all your favorite RSS content on your cellphone at anytime, anywhere!
- ### 11.4 Weather
- Your cellphone is equipped with a weather function for consulting up to 3-day forecasts of favorite cities.
- ### 11.5 Facebook
- Facebook is a social utility that connects people with friends and others who work, study and live around them. It provides a number of features with which users may interact: Wall, a space on every user's profile page that allows friends to post messages for the user to see; Pokes, which allow users to send a virtual "poke" to each other; Gifts, a feature allowing users to send virtual gifts which appear on the recipient's profile; Market places, which lets users post free classified goods, etc. To open an account online, please go to: <http://www.facebook.com/>.

- ### 11.6 mTweet
- Twitter is a social networking and microblogging service that has gained notability and popularity worldwide. This feature enables cellphone users to exchange news updates and ideas with a community in the form of messages or posts. Posts are displayed on the author's profile page and delivered to the author's subscribers or followers. To open an account online, please go to: <http://twitter.com/>.
- ## 12 Entertainment.....
- ### 12.1 Stopwatch.....
- The stopwatch is a simple application for measuring time with the possibility to register several results and suspend/resume measurement.
- ### 12.2 Ebook.....
- A bookshelf contains the electronic books (.txt and .pdb file only). While reading the book, you may add bookmark, or reach the text by searching words, phrases (Options/Find, Options/Jump to).
- ### 12.3 Java.....
- Your Alcatel cellphone may include (1) some Java (2) applications and games. You can also download new applications and games to your cellphone.

- ## 13 Camera
- Your cellphone is fitted with a camera for taking photos and shooting videos that you can use in different ways:
- store them in your "File manager/My creations".
 - send them in a multimedia message (MMS) to a cellphone or an email address.
 - send them directly by Email or Bluetooth.
 - customize your main screen.
 - select them as incoming call image to a contact in your directory.
 - transfer them by data cable or microSD card to your computer.
- ## 14 Profiles
- With this menu, you may personalize ringtones for different events and environments.

- ## 15 File manager....
- You will have access to all audio and visual files stored in cellphone or SD card in File manager. You can access a number of items with this option: **My audios**, **My images**, **My videos**, **Ebook**, **My creations**, **Others**, **Phone**, **SD card** and **Memory status**.
- #### Inserting SD card:
- To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downward. Finally, turn down the microSD holder and slide it in the opposite direction to lock it.
- ## 16 Bluetooth™
- Access this feature by tapping **Bluetooth** to enter the main menu, then selecting "Bluetooth".
- ## 17 Wi-Fi (1).....
- To access this function, tap **Wi-Fi** to enter the main menu, and select **Wi-Fi**.

