

 
Quick Start Guide

For more information about how to use the cellphone, please go to www.alcatelontouch.com to download complete user manual. Moreover, from the website you can also consult FAQ, realize software upgrade via PC suite, etc.

Warning: Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Set your cellphone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.

Your cellphone.....


1.1 Keys and connectors

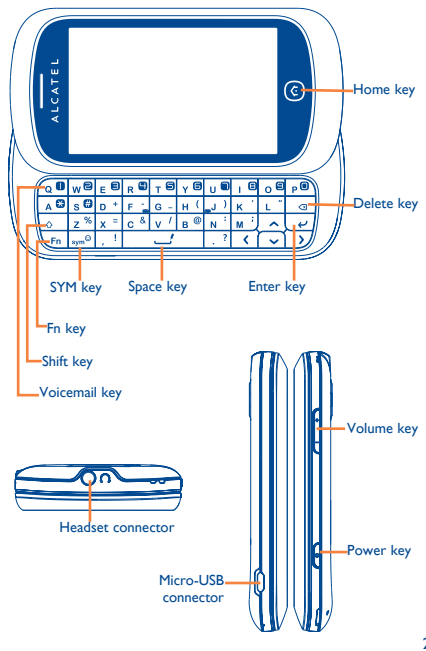

- Return to the previous Home screen
- Press: Reject a call
Lock/unlock the screen
- Press and hold: Power on/off
- Press and hold: Access your voicemail
- Press once: Input a capitalized character
- Press twice: Lock the keyboard in capital letter input mode
- Press: Press once: Input a top-half character
Press twice: Lock the keyboard in top-half key input mode
- Fn + B: Access Bluetooth
- Fn + M: Access Music player
- Fn + P: Access Profiles
- Fn + J: Access Java applications
- Press: Enter a space (on edit mode)
- Press and hold: Access language list (on edit mode)
- Hold down Fn key, then press Space key to select input mode (on edit mode)
- Enter symbol table
- Hold down Fn key, then press sym key to enter emoticon table
- Confirm an option
- Enter the next line
- Press: Volume up/down
Zoom in/out
- Press and hold: Launch touch screen calibration

1.2 Home screen

 You can bring all the items (shortcuts and widgets) you love or use most frequently to your Home screen for quick access.

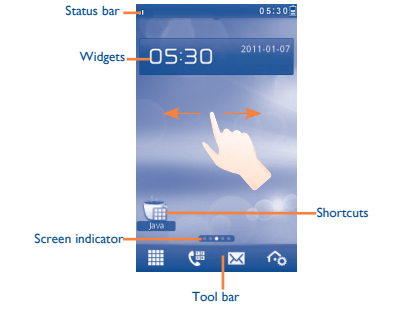

The Home screen is provided in an extended format to provide you with more space for adding widgets and shortcuts. Slide the Home screen horizontally left and right to get a complete view of the Home screen. Small dots at the bottom of the screen indicate which screen you are viewing.

1.2.1 Status bar icons⁽¹⁾

- Battery charge level**
- Vibrate alert:** your cellphone vibrates, but does not ring or beep with the exception of the alarm.
- Silence mode:** your cellphone does not ring, beep or vibrate with the exception of the alarm.
- Flight mode.**
- Bluetooth status (Activated).**

⁽¹⁾ The icons and illustrations in this guide are provided for information purposes only.

- Bluetooth status (Connected to an audio device).**
- Java status (Activated).**
- Headset connected.**
- Keypad & LCD touch locked.**
- Keypad & LCD touch unlocked.**
- Voicemail message arrived.**
- Missed calls.**
- Call in progress.**
- Call forwarding activated:** your calls are forwarded.
- Stopwatch is active.**
- Radio is on.**
- Alarm or appointments programmed.**
- Music player active.**
- Email unread.**
- WAP messages⁽¹⁾.**
- SD card scanning completed.**
- SIM card unavailable.**
- Line switching⁽¹⁾:** indicates the selected line.
- Level of network reception.**
- Roaming.**
- GPRS connection status (Activated).**
- GPRS connecting.**
- EDGE connecting.**
- EDGE attached.**

⁽¹⁾ Depending on your network operator.

- Sending message.**
- Receiving message.**
- SMS unread.**
- MMS unread.**

(Flickering) Message list is full: your cellphone cannot accept any new messages. You must access the message list and delete at least one message on your SIM card.

1.2.2 Status list

Touch the status bar and drag down to open, drag up to close. To open an application, touch it from the list.

1.2.3 Toolbar

Toolbar with 4 fixed shortcuts to access **main menu**, **making a call (Call log/Contacts)**, **Messaging**, **edit the Home screen**.

 
1.2.4 Personalize the Homescreen

You can customize your Home screen by adding/editing/removing/re-organizing widgets & shortcuts and personalize your wallpaper.

2 Getting started

2.1 Set-up

Removing or installing the back cover

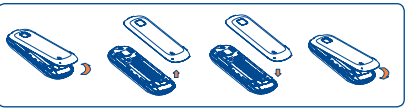

Inserting or removing the SIM card
You must insert your SIM card to make phone calls. Please power off your cellphone and remove battery before inserting or removing the SIM card.

⁽¹⁾ Depending on your network operator.

4 Messaging.....

- 4.1 Access**
You may access this menu using the following options:
- Touch [Message icon] to enter the main menu screen, and then select [Message icon].
- Access from tool bar by selecting [Message icon].
- 4.2 Conversational On (Off) mode**
In conversational on mode, you can view chat history in chronological order. In conversational off mode, you can access the following folders: **Inbox, Outbox, Sent, Drafts, Broadcast SMS, Voicemail and Templates**. You can switch between these two modes by selecting "Switch view mode" via [Switch icon]. Conversational on mode is set as the default mode and the following instructions are based on this mode.
- 4.3 Write message**
Touch [Compose icon] to create text/multimedia messages. Specific letters (accent) will increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.
An SMS will be converted to MMS automatically when: images, videos, audio, slides or attachments are inserted; Subject, CC/BCC/email address is added; or the message contains more than 8 pages of text.

5 Email

Your cellphone has an email client with the settings predefined for a few popular email services like - GoogleMail, Yahoo, AOL, etc. Besides this, you can set up other POP3 or IMAP4 email accounts that you may be using.

6 Palringo⁽¹⁾.....

Palringo Instant message (IM) allows you to chat with other people using Palringo account. You can also connect to other popular IM services through Palringo, like Yahoo, AIM, GG, ICQ, GTalk, iChat etc. Please note that the services accessible to you will depend on your client version and dynamic Palringo server options.

7 Contacts.....

- 7.1 Consulting your Contacts**
To access the Contacts, touch [Contacts icon] from tool bar to enter the main menu, and select "Contacts".
- 7.2 Adding a contact**
You can add a new contact by touching [Add icon].

8 Call log

- 8.1 Access**
You may access this function from the main menu "Call log".
Missed calls
Outgoing calls (Redial)
Answered calls/Rejected calls/Calls rejected by SMS
- 8.2 Available options**
When you touch [Options icon], you can have access to **Delete, Send message, Edit before call**, etc.

8.2.1 Call settings⁽¹⁾

You can access a number of items with this option: **Call waiting, Call forwarding, Call barring, Caller ID, Line switching, Auto redial**, etc.

9 Media applications

- 9.1 Music player**
To access this function, touch [Music icon] to enter the main menu and select [Music icon]. You will have full flexibility of managing music both on your cellphone and SD card.
- 9.2 Image viewer**
A library links to the images in "My creations" in cellphone to be shown in list, or slide, set as wallpaper, power on/off display and incoming call image or sent by MMS, Email, Bluetooth.
- 9.3 Video player**
"My videos" album contains video clips recorded, received or downloaded. All video clips in this folder can be played, set as power on/off display, sent, deleted, renamed, sorted.
- 9.4 Radio**
Your cellphone is equipped with a radio⁽¹⁾ with RDS⁽²⁾ functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer Visual Radio service. You can listen to it while running other applications.

⁽¹⁾ Depending on your network operator.
⁽²⁾ The quality of the radio depends on the coverage of the radio station in that particular area.
⁽³⁾ Depending on your network operator and market.

10 Internet⁽¹⁾

- 10.1 My friends**
It migrates self-contained sub-trees of the websites to let you stay in touch with your friends by flicking through Bebo, Friendster, Hi5, Myspace and Flickr.
- 10.2 Opera**
Not only does Opera Mini give you the full Web experience where you stay in touch with your friends, obtain information, do your online banking etc., but it is also designed to save time by using compressed web pages.
- 10.3 Wap**
Access Wap options: **Homepage, Bookmarks, Go to URL, Last web address, Recent pages, Offline pages, Service inbox, Settings**.
- 10.4 News**
It is a huge time saver providing news updates from a website in a simple form. Once subscribed to a channel, it gives you the ability to track and manage all your favorite RSS content on your cellphone at anytime, anywhere!
- 10.5 Weather**
Your cellphone is equipped with a weather function for consulting up to 3-day forecasts of favorite cities.

⁽¹⁾ Depending on your network operator. May cause additional network charges for data flow to provide this service. Extra fees might also be charged in roaming states.

10.6 Facebook

Facebook is a social utility that connects people with friends and others who work, study and live around them. It provides a number of features with which users may interact: Wall, a space on every user's profile page that allows friends to post messages for the user to see; Pokes, which allow users to send a virtual "poke" to each other; Gifts, a feature allowing users to send virtual gifts which appear on the recipient's profile; Market places, which lets users post free classified goods, etc.
To open an account online, please go to: <http://www.facebook.com/>.

10.7 mTweet

Twitter is a social networking and microblogging service that has gained notability and popularity worldwide. This feature enables cellphone users to exchange news updates and ideas with a community in the form of messages or posts. Posts are displayed on the author's profile page and delivered to the author's subscribers or followers.
To open an account online, please go to: <http://twitter.com/>.

11 Entertainment.....

- 11.1 Stopwatch**
The stopwatch is a simple application for measuring time with the possibility to register several results and suspend/resume measurement.
- 11.2 Ebook**
A bookshelf contains the electronic books (.txt and .pdb file only). While reading the book, you may add bookmark by touching [Bookmark icon] or go to bookmark by touching [Bookmark icon], or reach the text by searching words, phrases (Options/Find, Options/Jump to).
- 11.3 Java**
Your Alcatel cellphone may include⁽¹⁾ some Java™ applications and games. You can also download new applications and games to your cellphone.

⁽¹⁾ Depending on your network operator.

12 Camera

To access the function from the Home screen, touch [Camera icon] from the tool bar to access the main menu and select the [Camera icon] icon.
Your cellphone is fitted with a camera for taking photos and shooting videos.

13 Profiles

With this menu, you may personalize ringtones for different events and environments.

14 File manager.....

You will have access to all audio and visual files stored in cellphone or SD card in File manager. You can access a number of items with this option: **My audios, My images, My videos, Ebook, My creations, Others, Phone, SD card and Memory status**.

 
Inserting and removing the SD card:




Place the MicroSD card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.



After removing the back cover, insert your SIM card according to the graphics shown on the back of the cellphone. To remove the card, press and slide it out.

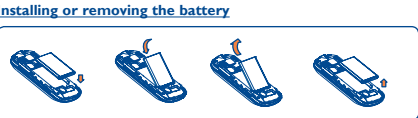

 Installing or removing the battery
Insert and click the battery into place, then close the cellphone cover.
Unclip the cover, then remove the battery.

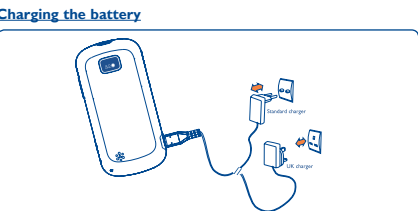

Connect the battery charger to your cellphone and outlet respectively.
To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the power socket; switch off Bluetooth or background-running applications when not in use; reduce the backlight time, etc.

15 Bluetooth™

Access this feature by touching [Bluetooth icon] to enter the main menu, then selecting "Bluetooth".

16 Others

- 16.1 Calendar**
To access this function, touch [Calendar icon] to enter the main menu and select [Calendar icon], there is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked in color.
- 16.2 Calculator**
Access this feature by selecting "Calculator" from the main menu. Enter a number, select the type of operation to be performed, and enter the second number, then touch [=] to display the result.
- 16.3 Notes**
You can create a note in text format by accessing "Notes" from the main menu.
- 16.4 Tasks**
Enables you to easily manage and track the progress of a task with priorities. All the tasks will be sorted by due date.
- 16.5 Clock**
Your cellphone has a built-in alarm clock with a snooze feature.
- 16.5.1 Alarm**
- 16.5.2 World clock**
The World clock shows current local time and the time zone in different cities.

2.2 Power on your cellphone

Hold down the [Power key] until the cellphone powers on.

2.3 Power off your cellphone

Hold down the [Power key] until the cellphone powers off.

2.4 Using the touchscreen

- Touch**
To access an application, touch it with your finger.
- Drag**
Place your finger on the screen to drag the object to the destination.
- Scroll**
Slide the screen to scroll up and down the applications, images, web pages... at your convenience.

3 Making a call.....

To place a call, you can either type the desired number directly on the hardware keypad, or you can touch [Call icon] on the tool bar.

Enter the desired number on the on-screen keypad directly or select a contact from Call log or Contacts by touching [Call icon] or [Contacts icon] respectively, then touch [Call icon] to place the call. Press [End call icon] to return to the previous Home screen. If you want to return to the call screen, touch [Call icon]. The number you entered can be saved to Contacts by selecting [Save icon]. If you make a mistake, you can delete the incorrect digits by touching [Delete icon].

To hang up the call, press the [End call icon] key.

16.5.3 Date and time

Allows you to have settings of date and time, including 12/24h format.

16.6 Converter

You can use the Weight and Length conversion by selecting the unit you wish to convert via [Unit icon], then touch to input the digits. Finally confirm with [Confirm icon].

16.7 Voice recorder

Accessing "Voice recorder" from the main menu allows you to make voice or sound recordings.

17 Settings

From the main menu, select the menu icon [Settings icon] and select the function of your choice in order to customize your cellphone: **Phone settings, Call settings, Security, Network, Connectivity and Default Browser**.

18 Making the most of your cellphone.....

- PC suite**
You can download PC suite for free from the website. The PC suite includes:
- **Backup/restore**
You can backup the important data in your cellphone and restore them when needed.
- **Multimedia Personalization**
Customize your cellphone with images, animations and melodies.

• Messaging

You can compose SMS/MMS easily on your PC and transfer them to your cellphone.

Supported Operating Systems

Windows 2000/XP/Vista/Windows 7.

One Touch Upgrade

Using One Touch Upgrade tool you can update your cellphone's software from your PC. Download One Touch Upgrade from ALCATEL website (www.alcatelone-touch.com) and install it on your PC. Launch the tool and update your cellphone by following the step by step instructions (refer to the User Guide provided together with the tool). Your cellphone's software will now have the latest software.

All personal information will be permanently lost following the update process. We recommend you backup your personal data using PC Suite before upgrading.

Webcam (1)

You can use your cellphone as a webcam for instant messaging on your PC.

- Connect your cellphone to PC via USB cable.
- Go to **"My computer"** folder on your PC and find USB video device (Under Scanners & Cameras).







19 Latin input mode

There are two text entry methods that can be used to write messages.

 
- Normal: this mode allows you to type a text by choosing a letter or a sequence of characters associated with a key.
- TouchPal mode: This mode can perform predictive input in virtual keypad and supports multi-language input.

(1) The using of webcam may vary according to the operating system of your PC.

Keyboard inputting

-  **Key:**
- Press once: Input a capitalized character
 - Press twice: Lock the keyboard in capital letter input mode
-  **Key:**
- Press once: Input a top-half character
 - Press twice: Lock the keyboard in top-half key input mode
-  **Key:**
- Enter symbol table
 - Hold down Fn key, then press sym key to enter emotion table
-  **Key:**
- Press: Enter a space
 - Press and hold: Access language list
 - Hold down Fn key, then press Space key to select input mode
-  **key:**
- Press: Delete one by one
 - Press and hold: Delete all
-  **key:**
- Confirm an option
 - Enter the next line

Touch inputting

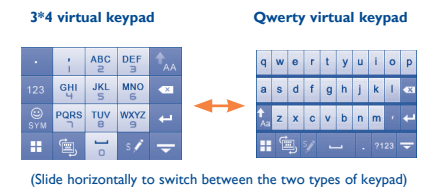

(Slide horizontally to switch between the two types of keypad)

17

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Your cellphone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it. As mobile devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or usb data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the cellphone at least 1.5 cm away from the body.

• LICENCES

Obigo® is a registered trademark of Obigo AB.



microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

one touch 888A Bluetooth QD ID B0XXXX



TouchPal™ and CooTek™ are trademarks of Shanghai HanXiang (CooTek) Information Technology Co., Ltd. and/or its Affiliates.



Java™ and all Java™ based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.



Opera Mini™ is a registered trademark of Opera Mini.



Facebook and the f Logo are trademarks of Facebook, Inc., and are used under license.



Twitter and the T Logo are trademarks of Twitter, Inc., and are used under license.

25

(1) Contact your network operator for service availability.

18



- Switch mode of input method.
- Switch between ABC/abc/Abc.
- Access to the symbol and number table.
- Access to all symbols.
- Touch once to delete one by one.
 - Long touch to delete all.
- Options for more operations.
- Press and hold 0-9 to input number.
- Switch to a new line (in SMS, Email, etc.).
- Close input keypad.
- Switch between 3*4 virtual keypad and Qwerty virtual keypad.

3*4 virtual keypad

Qwerty virtual keypad

