


ALCATEL

onetouch VIEW
 INSTRUCTION

Manufacturer: Huizhou TCL Mobile Communication Co., Ltd.
Technical Service Hotline: 400 810 0588
Address: 70 Huifeng 4th Road, Zhongkai High- Tech Development Zone,
Huizhou, Guangdong Province
www.alcatelonetouch.com

YOUR TV, SMARTER!

CONTENTS

I	Devices and accessories	01
II	Images of onetouch VIEW Set-top Box	01
III	IR remote controller	03
IV	How to connect onetouch VIEW Set-top Box	04
V	How to set up onetouch VIEW Set-top Box	05
VI	How to operate the device	
1	Turn on the device	05
2	Settings	06
3	Network functions	07
4	Local Video	09
5	Local Music	10
6	Local Picture	11
7	Application Management	12
8	Internet Video	12
9	Game	13
10	Alcatel app store	14
VII	Trouble Shooting	15
VIII	Caution	16

I. Devices and accessories

Devices and accessories include: Alcatel onetouch VIEW Set-top Box, HDMI wire and adapter, and IR remote controller.



Alcatel onetouch VIEW



HDMI wire and adapter

 


IR remote controller

II. Images of Alcatel onetouch VIEW Set-top Box



Back side

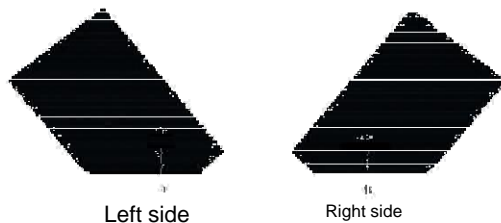

- 1 Power socket (5V DC In): for power supply through a 5V/2A adapter.
- 2 Optical fiber interface: for connection with external high-fidelity acoustic system.
- 3 HDMI (High-definition Multimedia Interface): to connect an onetouch VIEW Set-top Box with a TV set with an HDMI connector for the display of HD contents (remember to switch the TV to HDMI mode).
- 4 CVBS analogue video interface: to connect the CVBS port of Alcatel onetouch VIEW Set-top Box with the AV port of a TV set with the video connector (yellow) of the RCA cable (usually known as AV connectors) for the transmission of video signals from the TV.
- 5 L: left sound channel (analogue), usually the white AV connector, for the output of audio signals of the TV set.
- 6 R: right sound channel (analogue), usually the red AV connector, for the output of audio signals of the TV set.
- 7 ETHERNET: Internet interface, for access to the Internet to enable high-speed network access experience.

 
- 8 USB A: for connection with flash disks, mobile hard drives, wireless mice, wireless keyboards, and other devices with USB2.0 interfaces.
- 9 USB B: for connection with flash disks, mobile hard drives, wireless mice, wireless keyboards, and other devices with USB2.0 interfaces.
- 10 SD CARD slot: for the reading of information in SD cards

Notes

The device enables Internet connection with an embedded Wi-Fi module, as well as a cable modem.




III. IR remote controller

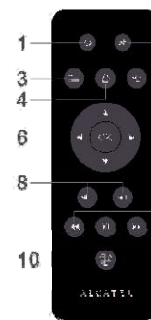

- 1 **POWER ON/OFF:** to switch the device **between POWER ON and OFF modes. The white indicator is on when the device is in the POWER ON mode, and the red indicator is on when it is in the POWER OFF mode.**
- 2 **MUTE:** the device is switched into the MUTE mode when the button is pressed.
- 3 **MENU:** press the button to enter the setup mode, or inform the control panel, or initiate quick search or management programs, or add applications. Press the button to view setup options when another screen is being displayed
- 4 **HOME:** press the button to return to the main screen, or press down the button to return to the latest-visited application list.

- 5 RETURN: return to the previous screen or menu.
- 6 OK: confirm the icon selected.
- 7 DIRECTION: including left, right, up, down keys.
- 8 VOLUME: for volume control.
- 9 MEDIA PLAY: including play, fast forward, fast backward and pause keys.
- 10 WEB: onetouch Internet surfing.

 IV. How to connect onetouch VIEW Set-top Box

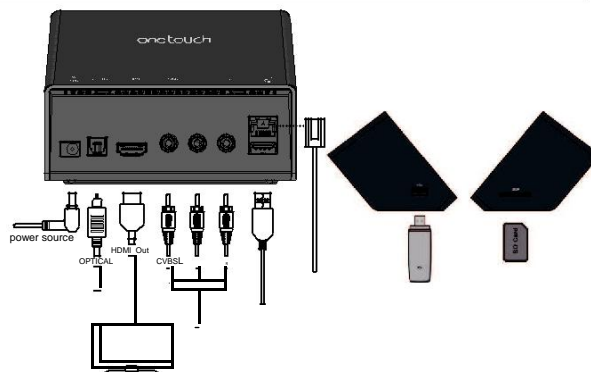

How to connect onetouch VIEW Set-top Box with the TV set

 
V. How to set up onetouch VIEW Set-top Box

Please set up the device in accordance with the following procedures.

- 1 Make sure that the device and all accessories are installed with power supply, including two 7# batteries for the IR remote controller, and an adapter for the device.
- 2 Install the Video connector: use an HDMI connector or RCA cable to connect the device with the TV set for the output of HD or analogue AV signals.
- 3 Install the Audio connector: use an optical cable, or the RCA audio connector to connect the device with the audio system. If the HDMI connector is already installed and the device is switched to HDMI output mode, the audio signal output will be available automatically.
- 4 Set up network connection: The device enables Internet connection with a cable modem or an embedded Wi-Fi module.

VI. How to operate the device


- 1 Turn on the device

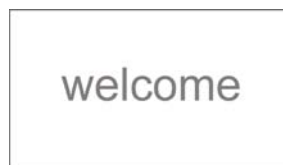


Turn on the device. You will see the welcome screen and the main menu in 40 seconds. Main menu options include local video, free video, games, applications, setup, application store, music, image and browser.

2 Settings

 ◆ Setup icons

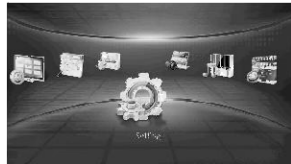


◆ Setup screen

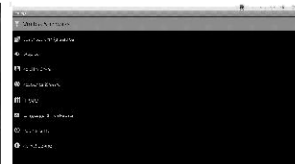 

◆ Set up wireless network connection Open Wi-Fi



 View and connect to wireless networks available. If the network selected is encrypted, you may need to enter your password or other IDs (you may need to contact your network operator for details).

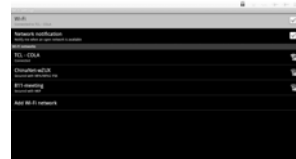

The Wi-Fi icon appears on the top right of the screen after the setup of Wi-Fi connection.

◆ Setup a wired network connection



Enter the ETHERNET screen to automatically view and connect to wired networks.

◆ Other setups

Administration applications



Other setups include administration applications (installation and uninstallation), language and keyboard (language setup and keyboard setup), about the device (version) and privacy setups.

3 Network functions

◆ Network icons on the main screen



Users may use the network functions to view news, watch video or play games on the Internet.



Main screen of network functions (with various websites arranged by classes, including browsers, most-viewed, video, news, sports, bloggers, military, etc.)



Google Chrome appears when the browser icon is opened.



When the "most-viewed" icon is opened, a number of portals and video sites, including sina.com, qq.com and Baidu appear.



4 Local Video

 
◆ The Local Video icon on the main screen.



The device supports AVI, RMVB/RM, WMV, TS, MKV, MOV, M2TS, TP, MPEG, MPG, MP4, VOB, ISO, DAT, ASF and FLV formats. Local Video enables users to view 1080P HD videos with resolutions up to 1920*1080.




Enter Local Video and it will search all the video formats that can be played in all the storage, such as U disk, SD card.

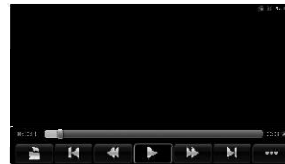

Select a video to play. The MEDIA PLAY supports a number of functions (fast forward, fast backward, pause, play and next).

5 Local Music

 ◆ The Local Music icon on the main screen

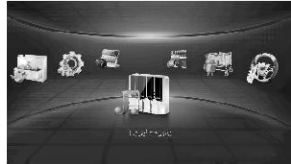

Music formats supported include MP3,WMA,WAV,ACC, FLAC and AC3. Local Music enables music playing while the user is surfing the Internet or using other functions.



Click the Local Music icon, and this screen appears (with a number of options, including album, song, artist, add music, and now playing).



This screen appears when a song is selected.

6 Local Picture

◆ The Picture icon on the main screen

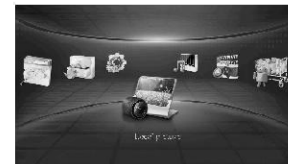 


Image formats supported include: bmp, jpg and gif. Local Image allows the viewing of electronic albums.



Click Local Image, and the submenu appears, each with folders of images.



Select a folder and view the images in it.

7 Application Management

- ◆ The Application Management icon on the main screen



Onetouch VIEW is driven by Android 2.3. The screen allows application downloading and installation to experience all of the functions enabled by Android, including gaming, office work and social activities.

8 Online Video

- ◆ The Online Video icon on the main screen



Online Video integrates free TV, video and radio information online.



Click Online Video and three icons: Muzee Radio, Muzee TV and Muzee Video appears, representing online radio, online TV and online video respectively.



Click Muzee TV and this screen appears, offering TV selections by categories, including TOP100, Local Selected, Top-Genre, Top-region, Top-language, Genre, Region, Language, Favorites and History.



Click Muzee Video and this screen appears, offering Video selections by categories, including TOP100, Local Selected, Top-Series, Top-Genre,

Top-language, Series, Genre, Language, Favorites and History.

9 Game

- ◆ The Game icon on the main screen



The device supports two types of games: 1) APK games downloaded from Android Market, e.g. "Angry Birds" and "Plants vs. Zombies", and 2) interactive games, e.g., AIVWI and sports++.



The Game Hall screen shows every game installed. You may select the ones you like.

10 Alcatel app store

◆ The Alcatel app store icon on the main screen



Click "Application Store" and the APK download screen appears. You can download and install the APK applications you like.

VII. Trouble Shooting

Q: Why is my composite video connector or HD connector not shown?

A:

1. Check whether the connectors of different colors are installed as indicated in the instruction;
2. Check whether the input mode has been set up for signal reception from the mainframe. Make sure to the video input mode is set up properly.
3. Check whether the video connector is installed correctly.

Q: Why can't I access the Internet after upgrade?

Click "Setup", and re-configure network access setup.

A:

Q: How to install the software applications?

A:

1. Copy the applications in a USB or SD card;
2. Click "Applications" on the main screen and select "Install Applications";
3. Select /mnt/sda (USB) or /mnt/sdcard (SD card);
4. Select the application you want to install and click "Install".

Q: Why can't the application stored be displayed in full screen?

A: Some programs have a fixed resolution, which might be inconsistent with that of the device. In this case, the application won't be displayed in full screen.

Q: How to make it easier to visit my favorite websites?

A: Click the browser to enter the webpage. Press the menu button on the remote controller. Move the cursor to "Add Bookmark Here". Enter name and address, and click "OK".

VIII. Caution

In case of any of the following exceptions or failures, turn off the device and unplug the power socket immediately. Contact our designated service staff for the repair of the device. DO NOT repair it yourself to avoid accidents.

- ◆ The device smokes, or gives off odd smell or sound.
- ◆ Liquid or metal objects get into the device.
- ◆ There's no image or sound after the power supply is plugged and unplugged several times.
- ◆ The housing of the device is damaged in a drop or collision.

Protect the power cable and plug carefully to prevent fire or electric shocking accident.

- ◆ Do not cover the power cable with heavy objects.
- ◆ Do not fix the power cable with metal nails.
- ◆ Be careful not to damage, refit, bend, twist, extend, or bake the power cable when plugging or unplugging it.
- ◆ Please contact our service staff if the core of the power cable is exposed or broken.
- ◆ If the power cable cannot be plugged in, or is too loose when plugged in, replace your power socket to avoid electric shocking or fire accident due to exposure of the metal part.

Instructions for the storage of the device:

- ◆ Do not put the device on tumbling or tilt surfaces to avoid drop or rolling down, which might result in injury or failure of the device.
- ◆ Keep the device away from liquid or small metal objects, which might cause fire or electric shocking accident when they get inside.
- ◆ Do not put any candle or oil lamp on the device to prevent fire accidents.
- ◆ Do not use the device near windows, or in the bathroom to avoid fire or electric shocking accident due to moisture.

Instructions for the use of the device:

- ◆ The device uses high-voltage current inside its housing. To avoid fire and electric shocking accident, do not open the housing, or attempt to repair or refit the device. None of the parts shall be repaired by the user himself. Please contact our service staff for any repair work.
- ◆ Please take action to prevent any object (metal or flammable) from getting into the device from the ventilation hole to avoid fire or electric shocking accidents.
- ◆ If it is necessary to use the same power supply socket for a number of devices, please make sure that the total power does not exceed the rated power of the power socket or the power cable to avoid fire accident.
- ◆ DO NOT touch the power cable or power plug in times of lightning to avoid electric shock accidents. Use power supplies that fit the device or those recommended in the instructions to avoid fire or electric shock accidents.
- ◆ Be alerted when using the device in conditions of unstable voltages, and be prepared to cut off power supply whenever necessary.

Clean the power plug and socket routinely, as dust and foreign substances would cause fire when they get wet.

- ◆ Working environment.
Temperature: 0-40°C Humidity: 95%

Your TV, Smarter!

TCL TV BOX

CE safety guidance

Due to the used enclosure material, the TCT Smart TV BOX shall only be connected to a USB Interface of version 2.0 or higher. The connection to so called power USB is prohibited.

The adapter shall be installed near the equipment and shall be easily accessible.

When charging, please place the phone in an environment that has a normal room temperature and good ventilation. It is recommended to charge the phone in an environment with a temperature that ranges from 0°C~35°C. Please ensure to use only the charger offered by the manufacturer. Using unauthorized charger may cause danger and violate the authorization of the phone and the guarantee article.

The maximum operating ambient temperature of the equipment declared by the manufacturer is 40°C

EU Regulatory Conformance

Hereby, TCT Mobile Limited declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC(referred to as R&TTE Directive): Article 3.1a, 3.1b and 3.2

CE 0700 

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU)

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.