


Quick Start Guide

For more information about how to use the phone, please go to www.alcatelone-touch.com to download complete user manual (English version only). Also on our website you can find helpful FAQs (English version only).

Your mobile.....

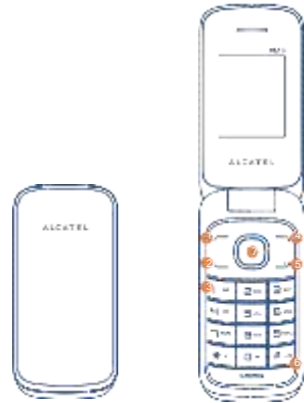

- 1 Left softkey
- 2 Answer/Send call Call log
- 3 Voicemail (press and hold) Right softkey
- 4 Switch on/Switch off End call
- 5 Vibrate alert (press and hold)
- 6 Navigation key: Menu/Confirm an option
- 7 Messages
- 8 Calendar
- 9 Profiles
- 10 Alarm

1.1 Keys

- Navigation key
Confirm an option (press the middle of the key)
- Answer/Send call
In idle screen:
Access call log (Redial) (press)
- Switch on/Switch off the telephone (press and hold)
End call
Return to idle screen
- Left softkey
- Right softkey
- Access your voicemail (press and hold)
- In Edit mode:
- Press: access the symbols table
- Press and hold: enter zero
- In Edit mode:
- Press: change input methods
- Press and hold: access the language list
- In idle screen:
- Press: #
- Press and hold: activate/deactivate the vibrate mode
In Edit mode:
- Press: (space)

1.2 Main screen icons ⁽¹⁾

- Battery charge level.
- Vibrate alert: your phone vibrates, but does not ring or beep.
- Headset connected.
- Call forwarding activated: your calls are forwarded.
- Alarm or appointments programmed.
- Level of network reception.
- Voicemail message arrived.
- Missed calls.
- Radio is on.
- Roaming.
- SIM card missing.
- Music activated.
- Silence mode: your phone does not ring, beep or vibrate with the exception of the alarm.
- SMS unread.
- Flight mode.

2 Getting started.....

2.1 Set-up

Removing and installing the back cover



Removing and installing the battery



Inserting and removing the SIM card



Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out.

Charging the battery



Connect the battery charger to your phone and outlet respectively.

- The charging may take about 20 minutes to start if the battery is flat.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The outlet must be near to the phone and easily accessible (avoid electric extension cables).
- When using your telephone for the first time, charge the battery fully (approximately 3 hours). You are advised to fully charge the battery (100%).
- To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Bluetooth when not in use; reduce the backlight time, etc.

The charge is complete when the animation stops.

2.2 Power on your phone

Hold down the key until the phone powers on.

2.3 Power off your phone

Hold down the key from the main screen.

3 Calls.....

3.1 Making a call

Dial the desired number then press the key to place the call. If you make a mistake, you can delete the incorrect digits by pressing the right softkey.

To hang up the call, press the key.

Making an emergency call

If your phone is covered by the network, dial emergency number and press the key to make an emergency call. This works even without a SIM card and without typing the PIN code.

3.2 Calling your voicemail ⁽¹⁾

To access your voicemail, hold down the key.

3.3 Receiving a call

When you receive an incoming call, press the key to talk and then hang up using the key.

3.4 Available functions during the call

During a call, you can use your directory, your calendar, text messages, etc. without hanging up or dropping the call.

PROTECT YOUR HEARING
To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

4 Contacts.....

4.1 Consulting your contacts

To access the **Contacts** from the main screen, press the key and select the icon from the menu.

4.2 Adding a contact

You can add a new contact to phone or SIM card by selecting "Add contact".

5 Messages.....

5.1 Create message

From the main menu select "Messages" to create text message. You can type a message and you can also modify a predefined message in **Templates**. While writing a message, select "Options" to access all the messaging options. You can save your messages that you send often to **Drafts**.

Specific letters (accent) will increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

6 Call log.....

6.1 Access

You can access the function using the following options:

- Select from main menu
- Press the send key from Home screen

6.2 Available options

When you press "Options", you can have access to **View, Send SMS, Save to Contacts, Edit before call, Add to blacklist, Add to whitelist, Delete** etc.

7 Music.....

Access this feature from the main menu by selecting "Music". You will have full flexibility of managing music on memory card. Make sure your memory card well inserted before activating music.

8 FM radio.....

Your phone is equipped with a radio ⁽¹⁾ with RDS functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer Visual Radio service. You can listen to it while running other applications.

9 My files.....

You will have access to all audio and visual files stored in memory card in **My files**. You can access a number of items with this option: **My audios, My images, My videos, Other files**, etc.

Inserting and removing the memory card:



To insert the microSD card with the golden contact downward. To remove the card, press and slide it out.

10 Settings.....

From the main menu, select the menu icon and select the function of your choice in order to customize your telephone: **Phone settings, Call settings, Security, Network, Restore default**.

11 Tools.....

11.1 Alarm

Your mobile phone has a built-in alarm clock with a snooze feature.

11.2 Calculator

Enter a number, select the type of operation to be performed, and enter the second number, then press "=" to display the result.

11.3 Calendar

Once you enter this menu from the main menu, there is a monthly-view calendar for your view.

11.4 Voice alarm

With this menu, you may create the voice file and set it as the alarm.

11.5 Notes

You can create a note in text format by accessing "Tools Notes" from the main menu.

11.6 Call filter

Enable blacklist, all callers in the list will be automatically blocked. Enable whitelist, only callers in the list can be connected. You are allowed to add 50 contacts to each list from Contacts, Call log, Messages or to add directly by pressing key.

11.7 Services

Contact your network operator to check service availability.

12 Profiles.....

With this menu, you may personalize ringtones for different events and environments.

⁽¹⁾ The icons and illustrations in this guide are provided for information purposes only.

⁽¹⁾ Contact your network operator to check service availability.

13 Making the most of your mobile.....

ONE TOUCH Upgrade

Using ONE TOUCH Upgrade tool you can update your phone's software from your PC.

Download ONE TOUCH Upgrade from ALCATEL ONE TOUCH website (www.alcatelone-touch.com) and install it on your PC. Launch the tool and update your phone by following the step by step instructions (refer to the User Guide provided together with the tool).

Your phone's software will now have the latest software.

All personal information will be permanently lost following the update process. We recommend you backup your personal data before upgrading.

14 Latin input mode...

To write messages, there are two writing methods:

- Normal: this mode allows you to type a text by choosing a letter or a sequence of characters associated with a key.
- Predictive with the eZi mode: this mode speeds up the writing of your text.
- + key in edit mode
Press: access the symbols table
Press and hold: enter zero

PROTECT YOUR HEARING
To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

⁽¹⁾ The quality of the radio depends on the coverage of the radio station in that particular area.

