

 
# **EC01 (E-Card) Quick Start Guide**

**ALCATEL**  
**onetouch®**

CJB3430ALAAA

# Your E-Card.....

## 1.1 Keys and connectors

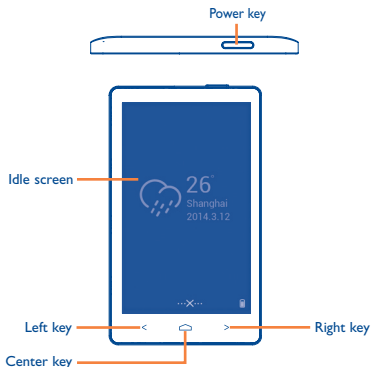

### < Left key

- Press to turn to the last page.
- Press to mute the ringtone when there's an incoming call.

### > Right key

- Press to turn to the next page.
- Press to reject the ringtone when there's an incoming call.

### ⌂ Center key

- Press to adjust font size.

## **Power key**

- Press: Switch between idle screen and previous application screen.
- Press and hold to power on/off.

## **Disconnected indicator**

- It will be shown to remind your E-card is disconnected.

## 1.2 Installation

Download and install two APKs on your phone.



iReader is a APK with reading program.



ONETOUCH E-CARD is a APK which connects and transfer data between phone and E-Card, it need to match with iReader.

## 1.3 Getting started

### 1.3.1 Power on your phone

 
Hold down the **Power** key until the phone powers on. It will take a few seconds before the screen lights up.

### 1.3.2 Power off your phone

Hold down the **Power** key.

### 1.3.3 Charging the battery

Connect the battery charger to your phone and mains socket respectively.





The charging status bar will not appear if your battery charge is very low. To reduce power consumption and energy waste, once the battery is fully charged, disconnect your charger from the plug.

# 2 iReader.....



  Launch **iReader** application on your phone, open a book on bookshelf, and touch **Transfer** button. If you E-card is connected with your phone successful, this book will be projected on E-card. Then you can start reading on E-card.

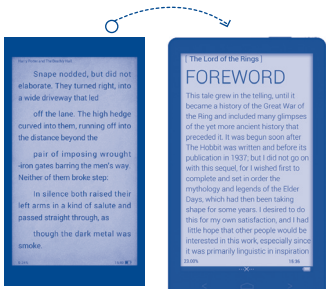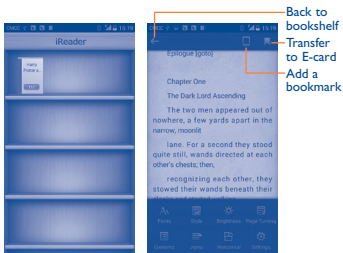

# 3

## ONETOUCH E-card

### 3.1 Notification

 
In reading mode or idle, if there's incoming call, new mail, new message and alarm, you can see notification on E-card.

Open ONETOUCH E-card on phone and select activation mode for these notifications.


- When reading
- Always
- Never

If you activate notification on your E-card, you can do further operation.


#### Incoming call

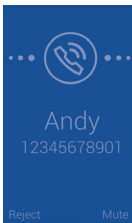

#### New message

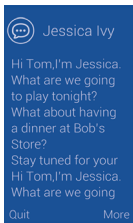 

### New mail

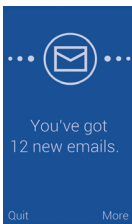 

### Alarm



## 3.2 Weather

Open ONETOUCH E-card, select Weather update to change interval.

# 4 Pairing.....

You have two ways to connect you E-card with mobile phone.

- Bluetooth
- NFC

When you launch **iReader** on phone and touch **Transfer** button, it will indicate you and switch to relevant menu and make connection.

# Troubleshooting.....

Please refer to the instructions below before contacting our after-sales service:

## 1. Pairing Failures

Since signal interference may occur with Bluetooth connections, the pairing times may differ from case to case. If pairing attempts keep failing, please try the following suggestions before re-connecting:

- A. Reboot Bluetooth;
- B. Reboot your cellphone;
- C. Check whether it is charged;
- D. Log out of your E-Card and log in again.

## 2. Battery not Charged

Please check whether the Corebox inserted correctly into the charger (refer to the picture in section 1.2).

After the battery is totally consumed, it will enter a pre-charging period. After 3 to 5 minutes' charging, it will enter a normal charging period (the charging light will indicate normally).

## 3. Vibration and LED lights not working

Charge and confirm that the battery works, then start pairing. If the pairing fails, refer to "Pairing Failures". If the pairing succeeds, check the indicator lights and the vibrator by knocking.

4. Unexpected vibration or blink: this may be caused by misoperation.

## 5. Factory reset

If the instructions above do not solve your issue, try resetting your Corebox as a last resort. Fit the Corebox into the charger, then insert a paper clip or similar alternative into the Reset hole. Push slightly until a click is heard, then all 5 LED indicator lights will blink together, followed by the 1st light blinking.

# Safety and use.....

It is recommended to read all safety content before using E-Card. The E-Card manufacturer is not liable for results caused by improper usage or failure to follow this manual.

Please carefully read through and follow the instructions below:

- Pay attention to any warning.
- Don't attempt to open the Corebox. Under inappropriate operation, the product and the battery can be hazardous to the human body and the environment.
- Don't disturb the normal working of E-Card.
- Don't clean E-Card with corrosive cleaning products.
- Don't place E-Card in dishwashers, washing machines or dryers.
- Don't expose E-Card to extreme temperatures.
- Don't expose E-Card to prolonged direct sunlight.
- Don't place E-Card close to fire.
- Don't throw E-Card into fire. This may cause the battery to explode.
- Don't attempt to disassemble E-Card. The components cannot be repaired.
- Don't allow children to play with E-Card. Small components may present a choking hazard to children.



# General information .....

- **Internet address:** <http://www.alcatelonetouch.com>
- **Address:** Room 1910-12A, Tower 3, China HK City, 33 Canton Road, Tsimshatsui, Kowloon, Hong Kong

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The entire copy of the Declaration of Conformity for your telephone can be obtained through our website: [www.alcatelonetouch.com](http://www.alcatelonetouch.com).

# CE | 588

## • LICENCES



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

**ALCATEL ONETOUCH EC01 Bluetooth  
Declaration ID B0XXXXXX**

XXX

(NFC)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

- **Regulatory information**

The following approvals and notices apply in specific regions as noted.

ALCATEL is a trademark of ALCATEL-Lucent  
and is used under license by  
TCT Mobile Limited.

© Copyright 2014 TCT Mobile Limited  
All rights reserved

TCT Mobile Limited reserves  
the right to alter material  
or technical specification  
without prior notice.