

USER'S MANUAL

Menu

Your phone has a wide range of functions that is grouped in menus and submenus. Users can access these functions by navigation key and selection keys.

Menu Tree

1 Call Records

- 1 Missed calls
 - 1 Call
 - 2 Store
 - 3 Erase
- 2 Received Calls
 - 1 Call
 - 2 Store
 - 3 Erase
- 3 Dialed Calls
 - 1 Call
 - 2 Store
 - 3 Erase
- 4 Call Timers
 - 1 Last Call Timer
 - 2 Total Received Calls
 - 3 Total Dialed Calls
 - 4 Total Calls
 - 5 Reset All Timers

2 Messages

- 1 Read Messages
 - 1 Inbox
 - 1 Edit
 - 2 Send
 - 3 Erase
 - 2 Outbox
 - 1 Read
- 2 Write Messages

1 Only Send

2 Only Save

3 Voice Mail

1 Voice Mail Number

2 Dial to VM Server

4 Message Setup

1 Text Message

1 Service Center

2 Message Type

1 Text

2 Fax

3 Email

3 Message Expiry

1 1 hour

2 6 hours

3 12 hours

4 24 hours

5 72 hours

6 1 Week

7 Maximum

2 Public Setup

1 Reply Path

1 Enable

2 Disable

2 Status Path

1 Enable

2 Disable

5 Broadcast Message

1 Read

2 Setup

3 Channel

4 Language

3 Ring Melody

1 Ring Mode

1 Melody

2 Vibrate then Melody

3 Vibrate

4 Light

- 2 Ringer
 - 1 Volume
 - Volume 0~5
 - 2 Type
 - Melody 1~20
- 3 Keypad Tone
 - 1 Tone
 - 2 Beep
 - 3 Off
- 4 Message Alert
 - 1 On
 - 2 Off
- 5 Minute Minder
 - 1 On
 - 2 Off
- 6 Download Melodies

5 Extras

- 1 Calculator
- 2 World Time
- 3 Alarm
 - 1 Time
 - 2 Enable/Disable
 - 3 Alarm Type
- 4 Game
 - 1 Slot Machine
 - 2 Draw Poker
 - 3 Black Jack
- 5 Cyber Health
 - 1 Bio Rhythm
 - 2 Fatness
 - 3 Pink Schedule
 - 4 Calories

6 Network Features

- 1 Call Divert
 - 1 Divert Always
 - 2 On Busy
 - 3 No Reply
 - 4 Unreachable

- 5 Cancel all
- 2 Call Barring
 - 1 All Outgoing Calls
 - 2 All International Calls
 - 3 International Except to home
 - 4 All Incoming Calls
 - 5 Incoming (Roam)
 - 1 Interrogate
 - 2 Activate
 - 3 Deactivate
 - 6 Cancel All
 - 7 Change Password
- 3 Call Waiting
 - 1 Check Settings
 - 2 Activate
 - 3 Deactivate
- 4 Net Selection Mode
 - 1 Automatic Selection
 - 2 Manual Selection

7 Settings

- 1 Display
 - 1 Animations
 - 1 Power On Screen
 - 2 Idle Screen
 - 3 Power Off Screen
 - 2 Backlight
 - 1 Short
 - 2 Long
 - 3 Off
 - 3 LCD Contrast
 - 0 – 100 (in increments of 5)
 - 4 SW Version
- 2 Language
 - 1 English
 - 2 Spanish
 - 3 Simplified Chinese
- 3 Call Settings
 - 1 Any Key Answer
 - 1 On

- 2 Off
 - 2 Auto Redial
 - 1 On
 - 2 Off
 - 3 Flip Answer Mode
 - 1 On
 - 2 Off
 - 4 Caller ID
 - 1 Send
 - 2 Hide
- 4 Security Settings
 - 1 Phone Lock
 - 1 Enable
 - 2 Disable
 - 3 Change Password
 - 2 PIN Check
 - 1 Enable
 - 2 Disable
 - 3 Change PIN1
 - 3 SIM Lock
 - 1 Enable
 - 2 Disable
 - 3 Change Password
 - 4 FDN Mode
 - 1 Enable
 - 2 Disable
 - 5 Change PIN2
- 5 Time/Date
 - Date
 - Time
 - Place
 - 12Hour or 24 Hour
- 6 Select Band
 - 1 Select EGSM/DCS
 - 2 Select PCS
- 7 Default Settings
 - Enter Password

8 Data Service

- 1 Internet Access
- 2 Data Service
 - 1 Enable Data
 - 2 Disable Data
 - 3 Check Data Status

9 Phonebook

- 1 Search
 - 1 SIM
 - 2 ME
- 2 Add
 - 1 SIM
 - 2 ME
- 3 Delete All
 - 1 SIM
 - 2 ME
- 4 Storage Status
 - 1 SIM: Total
Used
Free
 - 2 ME: Total
Used
Free
- 5 Own Number
 - 1 Display
 - 2 Edit

Call record

Call Record

This network feature automatically keeps track of numbers dialed and received, and the time you've spent in those calls.

-Missed Calls

-Received Calls

-Dialed Calls

-Call Timers

Last Call Timer

Total Received Calls

Total Dialed Calls

Total Calls

Reset All Timers

Missed Calls

List of phone calls you did not answer

- 1 Choose **Call Record** and press **Select**
- 2 Highlight **Missed Calls** and press **Select**
- 3 Scroll through the missed calls and Press **Select** to view the details
- 4 Press **Menu** for three options
 - **Call** – Call the number user has chosen
 - **Store** – Store the phone number user has chosen
 - **Erase** – Erase the phone number user has chosen
- 5 Press **Cancel** to go back to the previous screen,
-OR-
Press **End** to go back to Main Screen

Received Calls

List of phone numbers you answered

- 1 Choose **Call Record** and press **Select**
- 2 Highlight **Received Calls** and press **Select**
- 3 Scroll through the Received Calls and Press **Read** to view the details
- 4 press **Menu** for three options
 - **Call** – Call back the number user has chosen
 - **Store** – Store the phone number user has chosen
 - **Erase** – Erase the phone number user has chosen
- 5 Press **Cancel** to go back screen back,
-OR-
Press **End** to go back to Main Screen

Dialed Calls

List of phone numbers you dialed

- 1 Choose **Call Record** and press **Select**
- 2 Highlight **Dialed Calls** and press **Select**
- 3 Scroll through the Dialed Calls and Press **Read** to view the details
- 4 press **Menu** for three options
 - **Call** – Call back the number user has chosen
 - **Store** – Store the phone number user has chosen
 - **Erase** – Erase the phone number user has chosen
- 5 Press **Cancel** to go back screen back,
-OR-
Press **End** to go back to Main Screen

Call Timers

Viewing and resetting all the call timers

Last Call Time

Time spend on last call

- 1 Choose **Call Record** and press **Select**
- 2 Highlight **Call Timers** and press **Select**

- 3 Choose **Last Call time** and press **Select** to view the status
- 4 Press **Reset** to reset timer
- OR-
- Press **Back** to exit without resetting

Total Received Calls

Total time spend on received calls

- 1 Choose **Call Record** and press **Select**
- 2 Highlight **Call Timers** and press **Select**
- 3 Choose **Total Received Calls** and press **Select** to view the status
- 4 Press **Reset** to reset timer
- OR-
- Press **Back** to exit without resetting

Total Dialed Calls

Total dialed time spend on dialed calls

- 1 Choose **Call Record** and press **Select**
- 2 Highlight **Call Timer** and press **Select**
- 3 Choose **Total Dialed Calls** and press **Select** to view the status
- 4 Press **Reset** to reset timer
- OR-
- Press **Back** to exit without resetting

Total Calls

Total time spend on incoming and out going calls

- 1 Choose **Call Record** and press **Select**
- 2 Highlight **Call Timer** and press **Select**
- 3 Choose **Total Calls** and press **Select** to view the status
- 4 Press **Reset** to reset timer
- OR-
- Press **Back** to exit without resetting

Reset All Timer

Resetting all timers

- 1 Choose **Call Record** and press **Select**
- 2 Highlight **Call Timer** and press **Select**
- 3 Choose **Reset All Timer** and press **Select**
- 4 When **Reset All Timers?**
 - Press **Select** to reset timer
 - OR-
 - Press **Cancel** to exit without resetting

Message

The message service allow users to send short text messages to the device that can receive short text messages, such as other phones, computers, fax machines, and pagers.

-Read Messages

- | **Inbox**
- | **Outbox**

-Write Messages

-Voicemail

- | **Voice Mail Number**
- | **Dial to VM Server**

- Message Setup

- | **Text Message**
- | **Public Setup**

- Broadcast Message

- | **Read**
- | **Setup**
- | **Channel**
- | **Language**

When a message has arrived, the phone beeps and the message icon is displayed in the top line.



Read Messages

Checking your INBOX and Outbox messages

Inbox

Checking Inbox messages

- 1 Choose **Messages** and press **Select**
- 2 Highlight **Read Messages** and press **Select**
- 2 Choose **Inbox** and press **Select**
- 3 Scroll through the messages and press **Read** to view the full message
- 4 Press **Option** for seven options
 - 1 **Reply**
 - 2 **Delete**
 - 3 **Dial Back**
 - 4 **Save Number**
 - 5 **Edit**
 - 6 **Forward**
 - 7 **Delete All**
- 5 Press **Back** to go back a screen,
-OR-
Press **End** to go back to Main Screen

1 Reply

After editing the message you want to send press **Send** to reply.

2 Delete

Delete the current message.

3 Dial Back

User can call back the sender's number.

4 Save Number

The user can save the sender's number in **Phonebook**.

5 Forward

After editing the message you want to send press **Send** to forward received message to other person.

6 Delete All

Delete all of the messages in the inbox.

Outbox

Checking your Outbox messages

All the saved messages are saved in outbox. The user can send one of these messages to other person after editing. These messages can also be saved or deleted

1 Choose **Messages** and press **Accept**

2 Choose **Read Messages** and press **Select**

3 Choose **Outbox** and press **Select**

4 Scroll through the messages and press **Select** to view the full message, Select **Send** to send to other person

5 Press **Select** for two options

- **Delete** – Deleting current message
- **Save** – Saving current message

6 Press **Back** to go back screen back,
-OR-

 
Press **End** to go back to Main Screen

Write Messages

Writing short message to send and save

1 Choose **Messages** and press **Select**

2 Highlight **Write Messages** and press **Select**

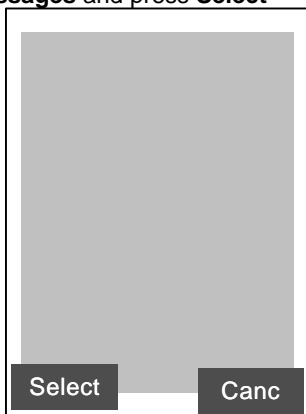

3 After editing the message press **Select** for two Options

- **Only Send**

You can input number manually

-Or-

Press **Browse** for the phonebook

After choosing the phone number you want to send message to, press **Select** to send the message

- **Only Save**

It will automatically save to the outbox

4 Press **Back** to go back screen back,

-OR-

Press **End** to go back to Main Screen

Voicemail

Voicemail

Voice Mail Number

Viewing voicemail number

1 Choose **Messages** and press **Select**

2 Highlight **Voice mail** and press **Select**

3 Choose **Voice mail Num** and press **Select**

4 After viewing the Voice Mail Number

5 Press **Back** to go back screen back,

-OR-

Press **End** to go back to Main Screen

Dial to VM Server

Dialing voice mail

- 1 Choose **Messages** and press **Select**
- 2 Highlight **Voice mail** and press **Select**
- 3 Choose **Dial to VM Server** and press **Select**
- 4 After listening to Voice Mail
- 5 Press **Back** to go back screen back,
-OR-
Press **End** to go back to Main Screen

Message Setup

Setting message setups

Text Msg

Setting Text Messages set up

- 1 Choose **Messages** and press **Select**
- 2 Highlight **Message Setup** and press **Select**
- 3 Choose **Text Msg** and press **Select**
- 4 Press **Select** for three options
Service Center – View the service center number
Message Type – View the message type
Message Expiry – Setting expiry between 1 hour to 1 week
- 5 Press **Cancel** to go back screen back,
-OR-
Press **End** to go back to Main Screen

Ring Melody

Ring Melody

This menu provides options so the user can set the audio parameters.

-Ring Mode

- Melody
- Vibrate + Melody
- Vibrate
- Light

-Ringer

- Volume
- Type

-Keypad Tone

- Tone
- Beep

- | Off
- Message Alert
- | On
- | Off
- Minute Minder
- | On
- | Off
- Download Melodies

Ring Mode

Setting type of ring for incoming calls



Melody

Setting melody for the ring

- 1 Choose **Ring Melody** and press **Select**
 - 2 Highlight **Ring Mode** and press **Select**
 - 3 Scroll through and press **Melody**
 - 4 Press **Select** to save the setting
- OR-
- Press **Cancel** to exit without saving

Vibrate and Melody

Setting vibrate then melody for the ring

- 1 Choose **Ring Melody** and press **Select**
 - 2 Highlight **Ring Mode** and press **Select**
 - 3 Scroll through and press **Vibrate + Melody**
 - 4 Press **Select** to save the setting
- OR-
- Press **Cancel** to exit without saving

Vibrate

Setting only vibrate for the ring

- 1 Choose **Ring Melody** and press **Select**
 - 2 Highlight **Ring Mode** and press **Select**
 - 3 Scroll through and press **Vibrate**
 - 4 Press **Select** to save the setting
- OR-
- Press **Cancel** to exit without saving

Light

Setting only light for the ring

- 1 Choose **Ring Melody** and press **Select**
 - 2 Highlight **Ring Mode** and press **Select**
 - 3 Scroll through and press **Light**
 - 4 Press **Select** to save the setting
- OR-
- Press **Cancel** to exit without saving

Ringer

Adjusting volume and type of the ringer

Volume

Adjusting your ringer volume

- 1 Choose **Ring Melody** and press **Select**
- 2 Highlight **Ringer** and press **Select**
- 3 Choose **Volume** and press **Select**

4 Use up/down function key to adjust the volume you want and Press **Select** to save the setting

 
-OR-

Press **Cancel** to exit without saving

Type

Selecting your ringer type

- 1 Choose **Ring Melody** and press **Select**
- 2 Highlight **Ringer** and press **Select**
- 3 Choose **Type** and press **Select**

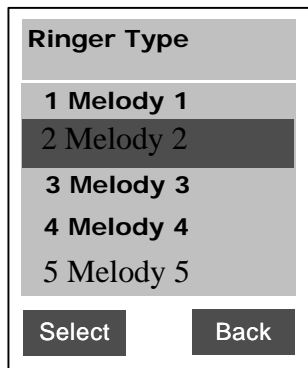

4 Use up/down function key to choose you want and Press **Select** to save the setting

-OR-

Press **Cancel** to exit without saving

Keypad Tone

Selecting keypad tone

- 1 Choose **Ring Melody** and press **Select**
- 2 Highlight **keypad tone** and press **Select**
- 3 Choose from three options
Tone
Beep

Off

- 4 Press **Select** to save the setting
- OR-
- Press **Cancel** to exit without saving

Message Alert

Turning on or off Message alert

- 1 Choose **Ring Melody** and press **Select**
- 2 Highlight **Message Alert** and press **Select**
- 3 Choose from two options

On

Off

- 4 Press **Select** to save the setting
- OR-
- Press **Cancel** to exit without saving

Minute Minder

Turning on or off minute minder

- 1 Choose **Ring Melody** and press **Select**
- 2 Highlight **Minute Minder** and press **Select**
- 3 Choose from two options

On

Off

- 4 Press **Select** to save the setting
- OR-
- Press **Cancel** to exit without saving

Extras

Extras

 
- Calculator
- World Time
- Alarm
- Games

Slot machine
Draw Poker
Black Jack

- Cyber Health

Bio Rhythm
Fatness
Pink Schedule
Calories

Calculator

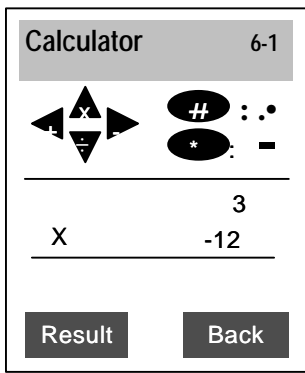

- The bottom of the screen is used to enter the numbers and to display the results. The keys **0** to **9** are used to enter the numbers and “*” and “#” key to enter a decimal point and a minus/plus sign.
- The **CLR** key corrects the last entry. The **Back** soft key allows the user to go back to the **Extra** menu.

World Time



- This feature allows you to view the current time in major cities (over 20) around the world.
- Scroll through the cities using the navigation key. The screen displays the city name, current date and time.
- When the **Select** soft key is pressed, answer box is displayed to choose so you can save or go back.
- The **Cancel** soft key allows the user to go back to the **Extra** menu without any change.

Alarm

This allows the user to set alarm.

Scroll down to choose time, status, and ring tone.

Use left/right pads to change time or choose from disable/daily/once or the ring tones.

 
Games

Slot machine




- 3 number keys are used for betting.
 - '1' key :
Key function is betting one.
 - '2' key :
Key function is betting max.
 - '3' key:
Key function is starting machine.
- Max betting limited to 3.

Draw Poker

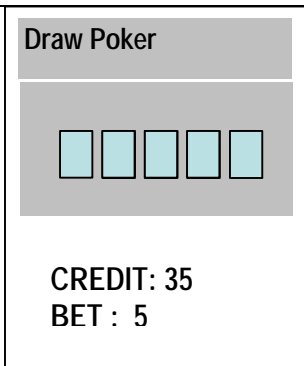


- 2 navigation keys are used for betting.
- 5 number keys are used for card selecting.
- Enter key is used for dealing cards.
- Navigation keys
 - Up: Increase bet one.
 - Down: Decrease bet one.
- 1~5 key: This key locks or unlock cards.

 Black Jack

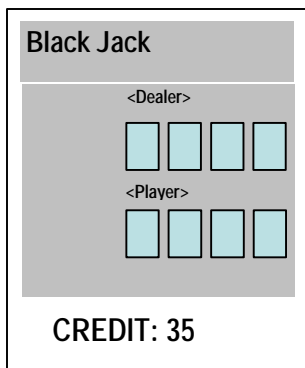

 - 2 number keys are used for gaming.
- 2 navigation keys are used for betting.
- Navigation keys
 - Up: Increase bet one.
 - Down: Decrease bet one.
- '1' key : Key function is starting or drawing game.
- '2' key : Key function is standing game.
- If you get same number card, you select split card.

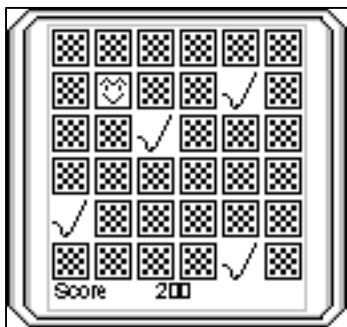

- OK key is used to Select a pixel and view front side.
- There are 18 pairs of two same pictures.
- The user should press Arrow and OK key to find all pairs.

- Score is 300 points on start, the score will decrease 50 points when the user select wrong one after selecting a picture.
- If user select is right, points increase 100.
- If the score is smaller than 0 then the game will be over.

Network Features

Network Features

-Call Divert

- Divert Always
- On Busy
- No Reply
- Unreachable
- Cancel all

-Call Barring

- All Outgoing Calls
- All International Calls
- International except to home
- All Incoming Calls
- Incoming (Roam)
- Cancel All
- Change password

-Call Waiting

- Check Settings
- Activate
- Deactivate

-Net Selection Mode

- Automatic Selection
- Manual Selection

Call Divert

- 1 Choose **Network features** and press **Select**
- 2 Highlight **Call Divert** and press **Select**
- 3 Choose from five options

- Divert Always
- On Busy
- No Reply
- Unreachable

- | **Cancel all**
- 4 Press **Select** to save the setting
- OR-
- Press **Cancel** to exit without saving

Call Barring

- 1 Choose **Network features** and press **Select**
- 2 Highlight **Call Barring** and press **Select**
- 3 Choose from seven options
- | **All Outgoing Calls**
All International Call
International except to home
All Incoming Calls
Incoming (Roam)
Cancel All
Change Password
- 4 Press **Select** to save the setting
- OR-
- Press **Cancel** to exit without saving

Call Waiting

- 1 Choose **Network features** and press **Select**
- 2 Highlight **Call Waiting** and press **Select**
- 3 Choose from three options
- | **Check Settings**
Activate
Deactivate
- 4 Press **Select** to save the setting
- OR-
- Press **Cancel** to exit without saving

Net Select Mode

- 1 Choose **Network Features** and press **Select**
- 2 Highlight **Net Select Mode** and press **Select**
- 3 Choose from two options
- | **Automatic Selection**

- | **Manual Selection**
- 4 Press **Select** to save the setting
- OR-
- Press **Cancel** to exit without saving

Settings

Settings

-Display

Animations
Back Light
LCD Contrast
SW Version

-Language

English
Spanish
Simp. Chinese (Simplified)

-Call Settings

Any Key Answer
Auto Redial
Flip Answer Mode
Caller ID

-Security Settings (Enter Code)

Phone Lock (Enter Password)
PIN Check
SIM Lock
FDN Mode
Change PIN2

-Time/Date

Date
Time
Place
12Hour or 24 Hour

-Select Band

Select EGSM/DCS
Select PCS

-Default Settings
Enter Password

Display

Changing and viewing Animations, Backlight, LCD Contrast, my number, and SW version.

Animations

Changing Animation settings

Starting Up Animations

- 1 Choose **Display** and press **Select**
 - 2 Choose **Animations** and press **Select**
 - 3 Choose **Power On Screen** and press **Select**
 - 4 Choose an animation
 - 5 Press **Select** to save the setting
- OR-
- Press **Cancel** to exit without saving

Idle Screen

- 1 Choose **Display** and press **Select**
 - 2 Choose **Animations** and press **Select**
 - 3 Choose **Idle Screen** and press **Select**
 - 4 Choose an animation
 - 5 Press **Select** to save the setting
- OR-
- Press **Cancel** to exit without saving

Power Off Screen

- 1 Choose **Display** and press **Select**
- 2 Choose **Animations** and press **Select**
- 3 Choose **Power Off Screen** and press **Select**
- 4 Choose an animation
- 5 Press **Select** to save the setting
-OR-
Press **Cancel** to exit without saving

Backlight

Setting the duration of the backlight

- 1 Choose **Display** and press **Select**
- 2 Choose **Backlight** and press **Select**
- 3 Choose from three options
Short
Long
Off
- 4 Press **Select** to save the setting
-OR-
Press **Cancel** to exit without saving

LCD Contrast

Setting the LCD contrast

- 1 Choose **Display** and press **Select**
- 2 Choose **LCD Contrast** and press **Select**
- 3 Use up/down function key to adjust the LCD Contrast you want and Press **Select** to save the setting
-OR-
Press **Cancel** to exit without saving

SW Version

Viewing SW Version

- 1 Choose **Display** and press **Accept**
- 2 Choose **SW Version** and press **Select**

Language

Choosing Language for the phone

- 1 Choose **Settings** and press **Select**
- 2 Choose **Languages** and press **Select**
- 3 Choose from three options
English
Spanish
Simp. Chinese (Simplified)
- 4 Press **Select** to save the setting
-OR-
Press **Cnancel** to exit without saving

Call Settings

Changing call settings

Any key Answer

Turning on or off any key answer

- 1 Choose **Settings** and press **Accept**
- 2 Choose **Call Settings** and press **Select**
- 3 Choose **Any key Answer** and press **Select**
- 4 Choose between two options
On
Off
- 5 Press **Select** to save the setting
-OR-
Press **Cancel** to exit without saving

Auto Redial

Turning on or off auto redial

- 1 Choose **Settings** and press **Accept**
- 2 Choose **Call Settings** and press **Select**
- 3 Choose **Auto Redial** and press **Select**
- 4 Choose between two options

On
Off

- 5 Press **Select** to save the setting
-OR-
Press **Cancel** to exit without saving

Flip Answer Mode

Turning on or off answer mode

- 1 Choose **Settings** and press **Accept**
- 2 Choose **Call Settings** and press **Select**
- 3 Choose **Flip Answer Mode** and press **Select**
- 4 Choose between two options
On
Off
- 5 Press **Select** to save the setting
-OR-
Press **Cancel** to exit without saving

Caller ID

Turning on or off caller ID

- 1 Choose **Settings** and press **Accept**
- 2 Choose **Call Settings** and press **Select**
- 3 Choose **Caller ID** and press **Select**
- 4 Choose between two options
Send
Hide
- 5 Press **Select** to save the setting
-OR-
Press **Cancel** to exit without saving

Security Settings

Phone Lock

- 1 Choose **Settings** and press **Accept**
- 2 Choose **Security Settings** and press **Select**
- 3 Choose **Phone Lock** and press **Select**
- 4 Choose between three options

Enable
Disable
Change Password

- 5 Press **Select** to save the setting
-OR-
Press **Cancel** to exit without saving

Pin Check

- 1 Choose **Settings** and press **Accept**
2 Choose **Security Settings** and press **Select**
3 Choose **Pin Check** and press **Select**
4 Choose between three options
Enable
Disable
Change PIN 1
5 Press **Select** to save the setting
-OR-
Press **Cancel** to exit without saving

SIM Lock

- 1 Choose **Settings** and press **Accept**
2 Choose **Security Settings** and press **Select**
3 Choose **SIM Lock** and press **Select**
4 Choose between three options
Enable
Disable
Change Password
5 Press **Select** to save the setting
-OR-
Press **Cancel** to exit without saving

FDN Mode

- 1 Choose **Settings** and press **Accept**
2 Choose **Security Settings** and press **Select**
3 Choose **FDN Mode** and press **Select**

- 4 Choose between two options
Enable
Disable
- 5 Press **Select** to save the setting
-OR-
Press **Cancel** to exit without saving

Change PIN 2

- 1 Choose **Settings** and press **Accept**
- 2 Choose **Security Settings** and press **Select**
- 3 Choose **Change PIN 2** and press **Select**
- 4 Enter PIN2 and press **Select**
-OR-
Press **Cancel** to exit without saving

Time/Date

- 1 Choose **Settings** and press **Accept**
- 2 Choose **Time/Date** and press **Select**
- 3 Choose **Phone Lock** and press **Select**
- 4 Enter Date, time, place, and time format
- 5 Press **Select** to save the setting
-OR-
Press **Cancel** to exit without saving

Select Band

- 1 Choose **Settings** and press **Select**
- 2 Choose **Select Band** and press **Select**
- 3 Choose from two options
Select EGSM / DCS
Select PCS

Default Settings

- 1 Choose **Settings** and press **Select**
- 2 Choose **Default Settings** and press **Select**
- 3 Enter **Phone Password**:

Data Service

Data Service

-Internet Access

-Data Service

Enable Data
Disable Data
Check Data Status

Internet Access

Accessing Internet

- 1 Choose **Data Service** and press **Select**
 - 2 Choose **Internet Access** and press **Select** to Access the internet
- OR-
Press **Cancel** to exit without saving

Data Service

Setting Data Service

- 1 Choose **Data Service** and press **Select**
- 2 Choose between three options
 - Enable Data**
 - Disable Data**
 - Check Data Status**
- 3 Press **Select** to save the setting
 - OR-
 - Press **Cancel** to exit without saving

Phonebook

Phonebook

- Search
- Add
- Delete All
- Storage Status
- Own Number


Search

Searching for the contact in the phonebook

- 1 Choose **Phonebook** and press **Select**
- 2 Highlight **Search** and press **Select**
- 3 Choose between two options
 - SIM**

ME

4 Input the first alphabet or name of the person you wish to call and press **Select**

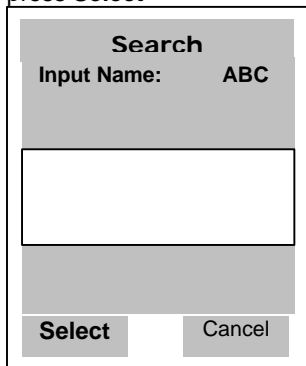

Search

Input Name: ABC

Select Cancel

5 Press **Select** to call that person

-OR-

Press **Cancel** to change the name and phone number

Add

Adding new contact entry to the phonebook

1 Choose **Phonebook** and press **Select**

2 Highlight **Add** and press **Select**

3 Input name of the person you and press **Select**

Search

Input Name: ABC

Select **Cancel**

4 Input phone number of the person you and press **Select**
-OR-
Press **Edit** to change the name and phone number again

Delete All

Deleting all the entries in the phonebook

- 1 Choose **Phonebook** and press **Select**
- 2 Choose **Delete All** and press **Select**
- 3 Choose between **No** and **Yes** to delete the phonebook and press **Select** to confirm

Storage Status

Viewing Storage status of the phonebook memory

- 1 Choose **Phonebook** and press **Select**

2 Choose **Storage Status** and press **Select** to view the status of storage

Own Number

Viewing own number

1 Choose **Phonebook** and press **Select**

2 Choose **Display** and press **Select** to view own phone number

3 Choose **Edit** and press **Select** to change own number

FCC RF Exposure Information

WARNING! Read this information before operating the phone

In August 1996 the Federal Communications (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters.

Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

CAUTION

Use only the supplied or and approved antenna. Use of unauthorized antennas, modifications could impair call quality, damage the phone or result in violation of FCC regulations. Do not use the phone with the damaged antenna. If the damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement of the antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.6 inches (1.5cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories

containing metallic components should not be used. Body-worn accessories that cannot maintain 0.6 inch (1.5cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions:

(1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that cause undesired operation.

Do not disassemble.

Do not short-circuit.

Do not exposure to high temperature : 60 (140)