
U1A User's Manual

INDEX

 
Declaration.....	3
A. Appearance Introduction.....	4
B. Initial Operation.....	5
1. HARDWARE CONNECTING INSTRUCTION	4
2. OS INTERFACE.....	5
3. MANAGEMENT SOFTWARE ICON.....	6
4. DELETE ICON	6
5. DRAG TO THE DESKTOP	7
6. RETURN, HOMEPAGE, PROGRAM, PROPERTIES	8
7. STATUS BAR	8
8. PROGRAMME TOOL BUTTOM.....	9
C. Programmer, Tools Icon Management.....	9
D. Setting	11
1. WIFI SETTING	11
2. USB TO RJ45 LAN ADAPTER SETTING	12
E. Install/delete APK (Program)	12
1. Unknown Source APK (Program) Set Up	12
2. INSTALL APK (PROGRAM)	13
3. DELETE APK (PROGRAM)	13
F. Picture, Video, Filing Management, Webpage.....	14
1. SET UP MEDIA FILE SEARCHING FUNCTION.....	14
2. HOW TO PLAY HIGH DEFINITION MEDIA PLAYER	15
3. FILEING MANAGEMENT. COPY, CUT, DELETE, RENAME	15
4. MUSIC PLAYER.....	17
5. VISIT THE WEBSITE.....	7
G. Language and Input.....	17
1. SELECT LANGUAGE AND USUAL INPUT METHOD.....	17
2. KEYBOARD AND MOUSE.....	18
3. SWITCH INPUT METHOD.....	19
H. Question& Answer.....	20
I. Specifications.....	21

Declaration

- The user manual includes all the information of safe and correct operation instruction. To avoid accident and product damaged, please make sure go through all the content carefully before using the product.
- Please keep the product away from high temperature, humid and dusty environment.
- Do not drop or crash the product.
- Do not cut off power of the device when it is formatting or upgrading. Otherwise it will cause operation system error.
- Do not dismantle the device. Do not clean it by alcohol, thinner and Benzene.

1. We keep the right to upgrade and modify the product.
2. Disclaimer: We only take the responsibility to provide the product warranty and after service. The users have to take care of their data in the device by themselves. We do not responsible for any data lost or related lost.
3. The product is not water-proof.
4. All the pictures in the instruction are just for reference.

A. Appearance Introduction



Left side panel



Right side panel

Bottom side

A: HDMI Jack-connect to HD TV set HDMI Host;

B: DC-IN Jack-5V/500mA~2A;

C: USB Host-play movies, pictures and music in USB Disk

and USB portable HD, connect Air Mouse;

D: USB OTG Host-connect PC USB host through USB cable

While use U1A as a USB disk, copy data from each device;

E: Factory Default key-when electrifying your U1A, press this

Key 10 seconds, then release the button.

F: TF Card Slot-Play Media file in TF (micro SD);

G: LED-light state-the LED keep lighting when U1A was electrified.

B. Initial operation

Connection instruction for Hardware

1. Connect to the TV set or LCD monitor .Set up the TV data receive mode to HDMI port , (Refer to TV set user manual)

2. Suggest using Air mouse or 2.4G wireless mouse and keyboard. Plug 2.4G receiver on USB Host connector. Or Plug on USB OTG port by port converter. If only mouse plugged, the device will provide soft keyboard in operation system. If the device detected the physical keyboard, the soft keyboard will be

hiding by OS automatically.

3. Mouse left button for "OK", right button for *return", rolling for page up and down. Hold left button to pull icon or copy & paste file. Hold middle button for Properties.

1. OS interface

Connect power supply and devices, the booting information will show up within 1min.




2. Management Software Icon

Hold any icon and pull it could move it to any position you like



3. Delete Icon

Hold the icon and red mark "X"- it

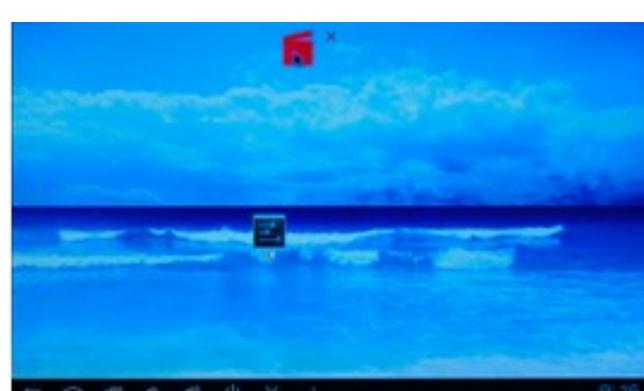


throw it into the
will be removed

4. Drag to the desktop

Hold the arrow on any blanket space of the desktop, move it to left or right could move to next desktop. Rolling the mouse is same operation.



 5. Return, Homepage, program, properties



-  Return button: click to return to the upper level directory
-  Homepage button: Click it anytime to return to homepage
-  Program button: Click to check the entire running program
-  Properties button: Click it will show up different in different software. It


is similar functions with Windows properties button

6. Status bar

The right bottom corner is status bar. It shows the status of T-Flash Card, USB connection. Time. WiFi and Download ...and so on.



Click status bar, the hide menu will bound up

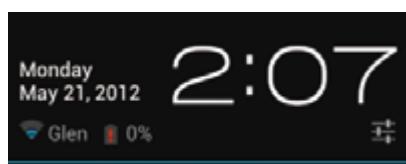

Click  this icon . it will be show up more options




7. Program Tool button


It shows up right top  corner of desktop

C. Program, Tools icon management

- ✓ Click  to show up all the installed program and setup tools icon

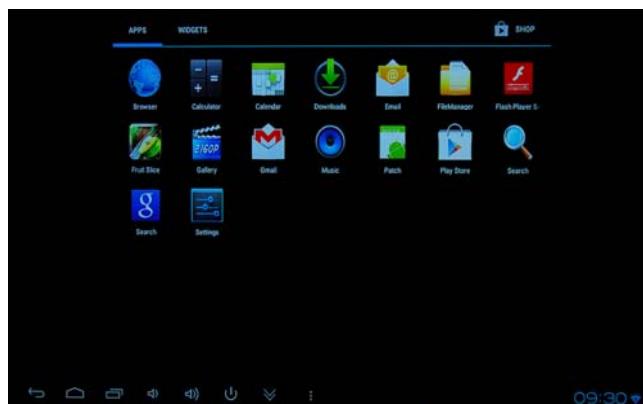

 
- ✓ If the first desktop page files with icon, then pull or rolling mouse move it to second desktop page.
- ✓ You could launch these programs or set up directly, or hold this and throw them to desktop to make shortcut.

- ✓ Click it  then hold any button to make shortcut on desktop



D. Setting

It is in Tool bar. Click to show it up.

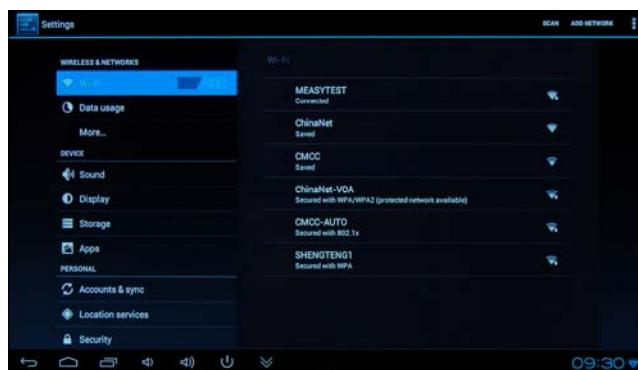

1. Wi-Fi Setting



2. USB to RJ45 LAN adapter setting

If there is no Wi-Fi and have to use cable to access Internet. Please buy USB2.0 LAN Adapter. And plug it on USB Host or OTG ports. Connect RJ45 LAN Cable; click *setting*->'More -> "Ethernet> tick "Use Ethernet"



E. Install/delete program

1. Set up "Unknown sources"

Please install Google market program as priority, If have to install Google, un-define program, Please click setting → security → "Unknown sources"



2. Install APK (Program)

Please download different application software from APK. After program downloaded, just click it to install. You could also install Android program from other storage device. (Downloaded program will show up on status bar.




Please click **Downloads** to find downloaded software package. hen Click to install.

3. Delete APK (Program)

a. Click "setting"-> "Apps", it will show up all the installed program list

b. Click "Uninstall" icon need to delete


c. Click uninstall button will be OK.

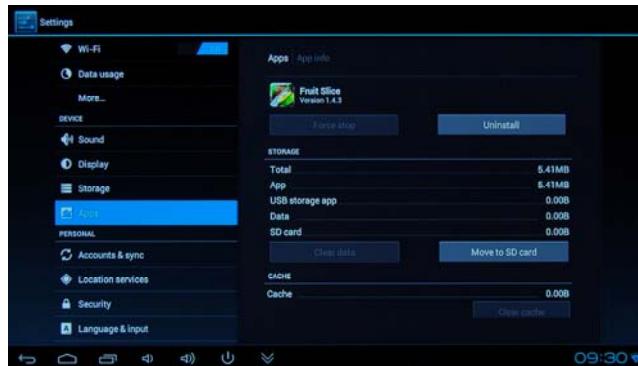

F. Picture, Video, Filing management, Webpage


1. Set up media file searching function.

The device has the media searching function, but running this function will slow down the system speed. Setting SD card and USB device searching function, please referring to following picture

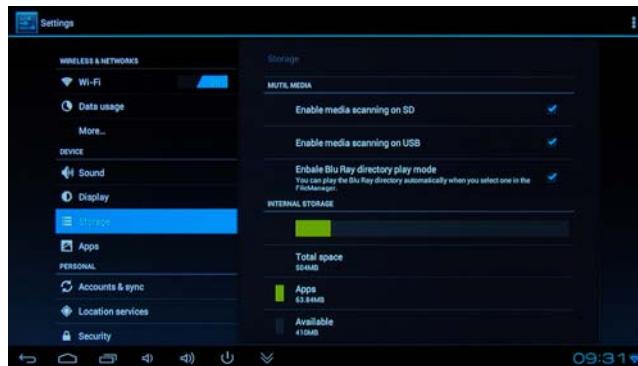


2. How to play High definition media player

Click below Icon, the tool will display Video and Audio file as category

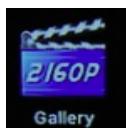

3. File management: Copy, Cut, Delete, Rename

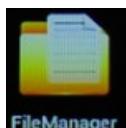


The device has strong function for filing. Classification of manage

documents in Storage, SD Card and External HDD. Please click "Setting" ->File manage


After running file manage tool, click or hold object file or folder, it will display the menu as below



Please select copy, cut from the menu. There red frame will show on the top of screen. Click and hold the object folder, (Attention: Must be folder)

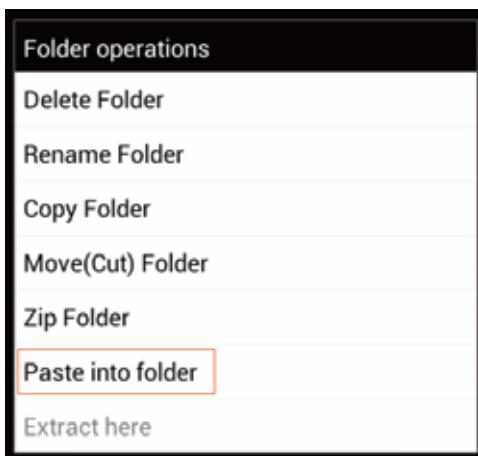

4. Music Player

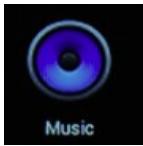Click "Setting" ->  "Music"

5. Visit the website

Please set up Wi-Fi to access to internet. There is Android default browser or other browser is also available to download. Click "Setting" ->"browser"




Android display all the web pages label on the top of browser. Click“+”, to add new page. Click "X" to close page.

G. Language and Input

1. Select language and usual input method.

The devices are including 54 different languages. Please Click 'setting' —>"Language and input"

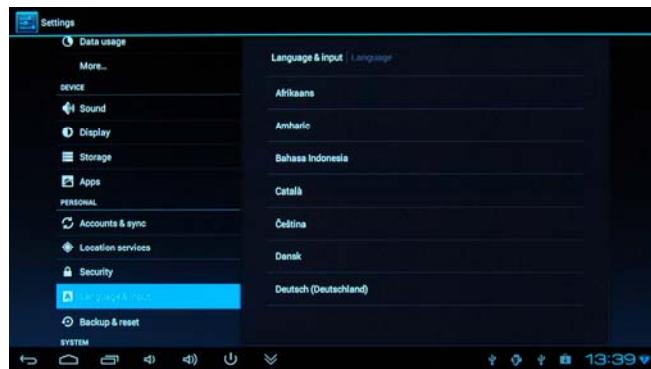


Different area users please select the suitable input software according. And make some setting under this Item

2. Keyboard and Mouse

Device will show up the soft keyboard if it is only connected with mouse. And the soft keyboard will be hiding once the hardware keyboard is detected by the device.



 3. Switch input method

Please click below  icon to select input method:

It will display all the options as below picture. Please select the suitable one



H. Question&Answer

Screen flicker or unstable working: please check if the HDMI connector has been connected tightly

.Can not start device: please download OS file from official website to refresh the device OS. Make sure all the important data has been backup before process it. If the issue still can not be solved, please contact the distributor which you bought from

.Keep restarting system automatically: Please check if the device get enough shortage supply. Sometimes, external HDD cause power , Please plug additional power supply for external HDD or other external devices

.Can not find file in SD card or pen drive: Please check all the connection of the device. And make sure you have tick the item of SD and USB Host in "Setting' Refer to 6.1

I. Specifications:

Model No.	U1A
CPU	Allwinner A10 1GHz Cortex-A8
GPU	2D/ 3D/ OpenGL ES2.0(AMD Z430)/OpenVG1.1(AMD Z160)@27M TRI/sec
Operation system	Android 4.0
DDR RAM	1GB
Nand Flash	4GB(8GB/16GB optional)
Network device	Wireless 802.11 b/g/n, (Option RJ45)
Storage device	Support External storage via USB host /Support External storage via TF card
Android APP	YouTube, Twitter, Angry Bird, Office, Gmail, Browser, Skype, Youku, Tudou, QQ.....
Language	Multi-languages
USB Interface	USB 2.0 host, USB Storage device
Video	Video Decoding: MPEG1/2/4,H.264,VC-1,Divx. Xvid.RM6/9110,VP6 Video Formats: MKV,TS,TP, M2TS.RM/RMVB.BD-ISO,AVI, MPG, VOB. DAT, ASF,TRP. FLV etc full formats

Video Formats	WMV/ASF/MP4/3GP/3G2M4V/AVI/MJPEG/RV 10/DIVX/VC-1/MPEG-2/ MPEG-4/H.263/H.264/1280*720P HD 30 fps.1080P/720*480 D1 30fps
Audio Formats	AAC, AAC+, eAAC+, AMR-NB, AMR-WB, QCP, MP3, WMA, WAV, MIDI, M4A
Video Output	1920.1080P,720P,576P,480P,Super HD 2160P,3D Film
Interfaces	Video: HDMI1.4 Storage: USB-HOST(USB1). USB OTG(USB2).TF
Picture Formats	JPG, BMP, GIF, TIFF, PNG
Subtitle supported	SRT, SUB, IDX, SSA, SMI
Power Adapter	External adapter
Dimension	91x 32x 11.8mm
Weight	0.25kg with accessory

《 Warranty Card 》

Dear users, first of all, thank you very much for choosing Measy products. In order to give you more satisfaction, please read this warranty card, fill out and keep the card after you purchase our products.

User Name	
Address	
ZIP Code	
Contact	
TEL	
Product Item	
Purchasing Date	
Dealer Name	
Dealer Address	

Sales Department (Stamp): _____

《Warranty Instruction 》

Consumers purchase our products lawful, If you find some performance fault which caused by non-artificial damage, can enjoy the following commitments which provided by our company

1. The warranty products must include warranty card, the purchasing invoice labeled the product model and other documents.
2. The warranty card only can be effective after made seal by the sales. Warranty cards are kept by the user, we will not make up if lost. The altered card and expired card are not invalid.
3. From the purchasing date, if you find any performance fault which caused

by non-artificial damage, you can enjoy free warranty service.

The following circumstances can not enjoy free warranty services;

1. Damage caused by negligence or accident.
2. Damage caused by failing to note the requirements, proper use, maintenance of the manual.
3. Damage cause by using, such as shell breakage.
4. The machine barcode torn up or destroyed, then we hard to recognize the goods.
5. Damage caused by force majeure, such as dismantling the machine without agreement.
6. Burn the software from third part secretly.
7. Our company or our authorized centers will get more materials cost and maintenance costs from you if your device can not meet the conditions of the warranty card.

Brand: MEASY **Website:** [Http://www.measy.com.cn](http://www.measy.com.cn)

FCC Statement

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Exposure Statement:

This equipment complies with fcc radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.