

ST1009X 10.1" SmartTab User Guide

07/11/2016

smarttab®

2-IN-1 TABLET

ST1009X User Guide

In the box

- 10.1" tablet
- Keyboard
- User guide
- Charger
- Micro USB cable

Care & safety precautions

- During charging, keep your device and charger near room temperature for efficient battery charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.
- The included charger is intended for indoor use only.
- Do not use the tablet or charger in wet or damp environments.
- Do not use the tablet in rain or other wet locations.
- Have someone else inspect or repair or modify the tablet yourself.
- Do not use the tablet in rain or other wet locations.
- Avoid pulling any liquid on the tablet.
- Do not attempt to dry the tablet with an external heat source.
- Do not use the tablet in rain or other wet locations.
- Use a soft, lint-free cloth to clean the tablet and display.
- Avoid getting moisture in open ports.
- Do not use household cleaners, solvents, alcohol, or abrasives to clean the tablet.
- Do not use the tablet for longer and safe conditions. If there is any damage or broken parts, remove the tablet from use.
- If any liquid is spilled on the tablet or keyboard, immediately remove the product from use and contact Customer Support.
- It is not possible for users to be triggered by light flashes or patterns such as those on computer or TV screens. To reduce exposure to this potential hazard, always use the tablet in an appropriate distance from the screen and take 10- to 15-minute breaks every hour.
- Cards could be a choking hazard.
- Hazard of death or children under 3 years of age.
- Children pulling on the cord could cause the computer monitor or other equipment to which the device is connected to fall with possibility of property damage, serious injury or death. Adult supervision required during use.
- Long-term exposure to loud sounds, at high volume, may result in permanent hearing loss.
- When using headphones or earbuds, it is recommended that the product is listened to at lower volumes for shorter periods of time. Set the volume while in a quiet environment; turn the volume down if you cannot hear the people speaking near you. Limit the listening time to 90 minutes, followed by a quiet period. The louder the volume, the less time required before your hearing may be affected.
- If you experience ringing in your ears or hear muffled speech, stop listening and have your hearing checked.

Buttons, ports & hardware

- 1 Power button
- 2 Volume buttons
- 3 Front camera
- 4 Rear camera
- 5 Microphone jack
- 6 DC charger port
- 7 Micro SD card slot
- 8 Reset button
- 9 Pogo pins
- 10 Speaker
- 11 Touchpad

Expanding the storage

Inserting a Micro SD card

The tablet supports Micro SD cards up to 64GB (not included). To install a Micro SD card into the tablet, carefully insert the card as shown below into the card slot until it clicks and locks into place.

To remove the Micro SD card, gently press it inward to eject.

Specifications:

- 10.1" IPS display (800 x 1280)
- Android 6.0 Marshmallow
- 64-bit, Intel quad-core processor
- 1GB RAM
- 32GB internal storage* (expandable up to 64GB)
- Front + rear cameras
- Wi-Fi 802.11 b/g/n
- Bluetooth 4.0

*Actual internal memory may vary depending on the operating system of the device and the preloaded apps.

Charging

Connect the tablet to a wall outlet using the included power adaptor as shown below.

Battery Tips:

- Turn off Wi-Fi when it's not in use.
- Lock the tablet (turning the display off) to shorten charging time.
- To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings panel.
- It is recommended to keep the brightness level at 50% or under if the tablet is in use while charging.

Power ON / OFF & Reset

Turning on the tablet
Press & hold the Power button until the startup screen appears.

Power off the tablet
Press & hold the Power button until the "Power off" option appears.

Lock the tablet (standby)
Briefly press the Power button. (Lock the tablet to conserve the battery.)

Unlock the tablet
Briefly press the Power button, and slide the "Lock icon" up.

Resetting the tablet
If the tablet malfunctions or freezes, you can use the reset button to restart it.

To reset the tablet, take a metal pin (such as the end of a paper clip) and gently push the recessed reset button on the side of the tablet as shown below.

The tablet will restart.

Turning on

- 1 Press and hold the Power button to get started.
- 2 Follow the initial setup wizard prompts.
- 3 To use the Google Play store, sign into or create a Google account.

Google Play™

Google Play™ is a digital content experience from Google where you can find and enjoy your favorite music, movies, TV shows, books, and Android™ apps and games. It's your entertainment hub; you can access it from the web or from your Android device, and all your content is instantly available across your devices.

Home Screen

Widgets

To add a widget, press and hold anywhere on the home screen, and select the "Widgets" option.

Press and hold widgets to place them on the home screen as shown below.

Notifications panel

Swipe down from the top edge of the screen to display the Notifications panel where you can browse and reply to your emails, check software updates, reminders and more.

Quick Settings panel

Swipe down **twice** from the top edge of the screen to expand and access the Quick Settings panel, where you can easily enable/disable Wi-Fi, Bluetooth, Airplane mode and other settings.

Wi-Fi and Bluetooth™

To enable/disable Wi-Fi or Bluetooth™, simply tap the icons on the Quick Settings panel as shown below.

To access more settings options, select the Settings icon.

Cast screen

Show your tablet's screen on devices with Miracast Wireless display capabilities:

1. Turn on the Miracast feature on your Miracast supported TV or Miracast dongle (not included).
2. Connect your tablet to the same Wi-Fi network as your Miracast enabled TV.
3. Go to Settings > Display > Cast and tap on "1".

4. Select "Enable wireless display", then select the available display that will appear.

Optimal video performance is achieved with videos that are 720p or under.

Keyboard Dock

To dock the tablet to the keyboard, align the tablet and the keyboard, then slide the tablet into the dock as shown below.

To undock the tablet from the keyboard, firmly hold the keyboard as shown below, then gently pull the tablet upwards.

The tablet will automatically recognize the keyboard when docked properly.

IMPORTANT

The touchpad does not have a mechanical click. Tap to select.

Correct Tap the touchpad to select

Incorrect Don't push down on the touchpad

Legal information

FCC Part 15:

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment. Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits. The Specific Absorption Rate (SAR) limit set by the FCC is 1.6 W/kg, the highest SAR value reported by the FCC for this device is 1.20 W/kg and complies with this limit.

Information Regarding Exposure to Radio Frequency Energy

Your device is designed and manufactured not to exceed the emission limits for exposure to RF energy set by the Federal Communications Commission of the United States (FCC). Information on your device can be found on the FCC website under the Display Grant section of <http://www.fcc.gov/etfs> after searching on the FCC ID for your device, which can be found on the back of the device.

If your electronic device has internal memory in which personal or other confidential data may be stored, you may want to perform a data sanitation process before you dispose of your device to ensure another party cannot access your personal data. Data sanitation varies by the type of product and its software, and you may want to research the best sanitation process for your device before disposal. You may also check with your local recycling facility to determine the data sanitation process using the recycling process.

Battery Disposal & Recycle

This device contains a lithium-ion battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal. ☎ 1-800-621-8887

SmartTab is a registered trademark of Southern Telecom Inc.

Intel, Intel Logo, Intel Atom, Intel Inside, Intel Inside logo, are trademarks of Intel Corporation in the U.S. and/or other countries. Android, Google, Google Play and other marks are trademarks of Google Inc.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. All other trademarks and trade names are those of their respective owners.

Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER

This Product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") for a limited period of time. This warranty is void if the product is used for commercial purposes, is altered, repaired, or modified, or if the product is used in a manner not intended by the manufacturer.

To obtain warranty services:

- Call the Customer Support number located below, or go to our website portal to receive an SR# number.
- Provide proof of date of purchase within the package (dated label of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address on the box, a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Customer Support: ☎ 1-877-768-8481 (Toll Free) Monday - Friday, 9AM - 5PM (EST) www.southerntelecom.com

Shipping address of the authorized service center is: Southern Telecom, Inc. 14633rd Street Brooklyn, NY 11232

Warranty service not provided:

- Your product will be repaired or replaced at our option, for the same or similar model of equal value (replacement by the vendor center determines this product is defective. Products received damaged as a result of shipping will require you file a claim with the carrier).
- This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.
- NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTION PARTIES DISCLAIM ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON FROM OUR COMPANY OR ANY DISTRIBUTOR SHALL APPLY TO THIS PRODUCT. SPECIAL DAMAGES, INCIDENTAL DAMAGES OR CONSEQUENTIAL DAMAGES SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS CAUSED BY THE USE, MISUSE OR IMPROPER USE OF THE PRODUCT, EXCEPT AS SOLELY HEREIN AND OTHER WARRANTIES, SHALL APPLY NOT WITHSTANDING THE FOREGOING. CONSUMER RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THE WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.
- Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or limit on damages, so limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary by state to state or province to province. Contact your authorized retailer to determine if another warranty applies.