

PMID1000: User Manual

08/10/2012

In the box

Location of controls

Basic operation

Charging the battery

Connect the tablet to a wall outlet using the included AC adapter.

Turning on the tablet

Press and hold the **Power** button on the Power settings widget to turn on the tablet.

Turning off the tablet

For quick power-off, you can select the "Power" button on the Power settings widget to turn off the tablet.

Unlock (enter) the tablet

Slide the "Lock" bar to the right.

Lock (standby) the tablet

To lock or stand-by the tablet, simply press the **Home** button (Back the device to conserve the battery).

Battery tips

- Turn off Wi-Fi when it's not in use.
- Lock the tablet; the display will no longer charge time.
- To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the settings app.

Home screen

On the Home screen, you can place app shortcuts and widgets.

Home screen (left)

Polaird Media widget

Home screen (center)

Polaird Home widget

Home screen (right)

Polaird Settings widget

Access apps & widgets screen

Press **Home** to access the Apps & widgets screen.

Placing apps & widgets on the Home screen

Press and hold the app or widget and take it as shown below.

Removing shortcuts or widgets

Press and hold the app or widget and take it as shown below.

App screen

Swipe the screen left or right to access other Home screens.

Widgets screen

Swipe the screen left or right to access other Home screens.

Place an app shortcut on the Home screen

Press and hold the app or widget and take it as shown below.

Lock screen

You can always bring the widgets back from the Widgets screen.

Status Bar

The Status Bar is available on all screens and apps of the tablet.

Connecting to Wi-Fi & downloading apps

Setting up Wi-Fi

To browse web sites, use e-mail and download apps, you must first connect the tablet to the internet.

Setting up Wi-Fi

- Swipe the Home screen to the left to access the Polaird Settings widget.
- Select "Wi-Fi Setup".
- Select a network.
- When the tablet is connected to a network, the Wi-Fi icon will appear on the Status Bar and "Connected" will appear under the selected network.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Downloading an App Store

To access a large library of free and paid apps and games, you need to download an app store. We have provided links to several app stores that can be easily accessed by selecting the "Download App Stores" option on the Settings widget.

Download and installing apps

After downloading the selected app store, it is possible to download and install apps directly to the tablet. These apps will appear on the Apps screen.

Games

Sometimes, while playing games, the sensor on the tablet may not function correctly. This results in games not being downloadable. To correct this problem, follow the steps below.

Games

- Open "Settings".
- Select "Display".
- Select "Accelerometer Coordinate System".
- The default setting is "Default Coordinate System". This setting works for most games.
- In case your game is not functioning properly, select for the "Free" or "Lib" version of an app and testing a before purchasing the app.

Games

Sometimes, while playing games, the sensor on the tablet may not function correctly. This results in games not being downloadable. To correct this problem, follow the steps below.

Camera and video chat

Front facing camera

Select **Camera** on the apps screen to go to camera mode. It is possible to take pictures or videos with the built-in front or rear facing camera.

Camera app

Access pictures & videos on the gallery app where the pictures and videos are stored.

Video chat

Use the built-in front facing camera to video chat with friends and family. There are many different services that offer video chat, which are available on the app screen.

Camera mode

Return to camera mode.

Camera Video

Share pictures to Email, Facebook or Twitter.

Web browsing

Select **Browser** on the Home or Apps screen. You must connect to Wi-Fi before accessing the web.

Web browsing

Select **Browser** on the Home or Apps screen. You must connect to Wi-Fi before accessing the web.

Web browsing

Select **Browser** on the Home or Apps screen. You must connect to Wi-Fi before accessing the web.

Web browsing

Select **Browser** on the Home or Apps screen. You must connect to Wi-Fi before accessing the web.

Web browsing

Select **Browser** on the Home or Apps screen. You must connect to Wi-Fi before accessing the web.

Transferring and managing files

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Browsing files

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

HDMI cable & USB stick

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Restore

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

FRONT

BACK

internet tablet

Customer Support
1-877-786-8463 (Toll Free)
55 polairdtablet@polairdtablet.com
Monday - Friday, 9AM - 5PM (EST)