

PMID705X: User Manual

08/30/2012

In the box

Tablet, User Manual, USB Cable, AC Adapter, Mic

Location of controls

Front Camera, Back Camera, Speaker

Basic operation

Charging the battery:

Connect the tablet to a wall outlet using the included AC adapter. The tablet may also be charged by connecting it to a computer using the USB cable. However, it will take much longer to fully charge.

Turning on the tablet

Press and hold the **Q** button until the startup screen appears.

Turning off the tablet

For quick power-off, you can select the "Power" button on the Powered Settings widget to turn off the tablet.

Unlock (enter) the tablet

Slide the "Lock icon" to the right.

Lock (standby) the tablet

To lock or protect the tablet, clearly press the **Q** button (lock the device to conserve the battery).

Battery Tips:

- Turn off Wi-Fi when it's not in use.
- Lock the tablet the display will start charging time.
- To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings app.

Home screen

On the Home screen, you can place app shortcuts and widgets.

Home screen (left): Polaris Media widget

Home screen (center): Polaris Home widget

Home screen (right): Polaris Settings widget

Access apps & widgets screen

Press **≡** to access the Apps & widgets screens.

Placing apps & widgets on the Home screen

Press & hold an app or widget to place it on one of the Home screens.

Removing shortcuts or widgets

Press and hold the app or widget and slide it as shown below.

App screen

Press the **Q** icon to return to the Home screen.

Widgets screen

Swipe the Apps & Widgets screen left or right to access Home screens.

App screen

Place an app shortcut on the Home screen.

Home screen

Press and hold the app or widget and slide it as shown below.

Widgets screen

You can always bring the widgets back from the Widgets screen.

Connecting to Wi-Fi & downloading apps

Setting up Wi-Fi

To browse web sites, use e-mail and download apps, you must first connect the tablet to the internet.

To set up Wi-Fi, use the "Powered Settings" widget on the Home screen.

1. Swipe the Home screen to the left to access the Polaris Settings widget.
2. Select "Wi-Fi Setup".
3. Select a network.
4. If required, enter the correct password and select "Connect".
5. When the tablet is connected to a network, the Wi-Fi icon will appear on the Status Bar and "Connected" will appear under the selected network.

Download and installing apps

After downloading and installing apps, it is possible to download and install apps directly to the tablet - these apps will appear on the Apps screen.

Games

Sometimes, while playing games, the sensor on the tablet may not function correctly. This results in games not being downloadable. To correct this problem, follow the "Special device" option.

Games

Open "Settings" > "Display" > "Accelerometer Coordinate System."

Games

Open "Settings" > "Display" > "Accelerometer Coordinate System."

Games

Open "Settings" > "Display" > "Accelerometer Coordinate System."

Camera and video chat

Front facing camera

Select **Q** on the apps screen to go to camera mode. It is possible to take pictures or videos with the built-in front facing camera.

Camera mode

Zoom in, Toggle Front & Rear camera, Take picture / video, Settings, Zoom out.

Camera Video

Share pictures to Email, Facebook or Twitter. To share pictures to Email, Facebook or Twitter, you must have an account and be logged in. For Email, an account must be set up for this option to appear.

Video chat

Use the button, front facing camera to video chat with friends and family. There are many different services that offer video chat, which are available on the app screen.

Camera and video chat

Front facing camera

Select **Q** on the apps screen to go to camera mode. It is possible to take pictures or videos with the built-in front facing camera.

Camera mode

Zoom in, Toggle Front & Rear camera, Take picture / video, Settings, Zoom out.

Camera Video

Share pictures to Email, Facebook or Twitter. To share pictures to Email, Facebook or Twitter, you must have an account and be logged in. For Email, an account must be set up for this option to appear.

Video chat

Use the button, front facing camera to video chat with friends and family. There are many different services that offer video chat, which are available on the app screen.

Web browsing

Select "Browser" on the Home or Apps screen. You must connect to Wi-Fi before accessing the web.

Setting up e-mail

Select "Email" on the Home or Apps screen and follow the instructions to set up your email accounts on the tablet. You must connect to Wi-Fi before accessing or setting up email accounts.

Photo gallery

Select "Gallery" on the Home or Apps screen to access pictures and videos stored on the tablet or Micro SD card.

Viewing pictures

Pinch to enlarge or shrink, and swipe to go to previous or next pictures.

Watching videos

While playing a video, tap the display to access the video controller. Tap the display again to hide the controller.

Share pictures to Email, Facebook or Twitter

Pinch to enlarge or shrink, and swipe to go to previous or next pictures.

Share: Share the selected picture through Email, Facebook, or Twitter.
Trash: Delete the selected picture.
Menu: Slide down, view and more.

Transferring and managing files

Inserting Micro SD card

The tablet supports Micro SD cards up to 32GB (not included).

To install a Micro SD card into the tablet:

1. Insert the card face up into the card slot until it clicks and locks into place.
2. Once the card is mounted, the card icon appears on the Status Bar.
3. To access the Micro SD card, select "File Manager" from the Apps screen.

Conserving Internal Memory!

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

File Manager

Copy media files from your computer to the Micro SD card.

File Manager

Copy media files from your computer to the Micro SD card.

File Manager

Copy media files from your computer to the Micro SD card.

Browsing files

File Manager

To view, open, copy or delete files on the internal memory, go to the folder you want to access.

File Manager

To view, open, copy or delete files on the internal memory, go to the folder you want to access.

File Manager

To view, open, copy or delete files on the internal memory, go to the folder you want to access.

Multimedia

Music

Access music files stored on the tablet.

Music

Access music files stored on the tablet.

Music

Access music files stored on the tablet.

Settings

Settings app

Open "Settings" > "Display" > "Accelerometer Coordinate System."

Settings app

Open "Settings" > "Display" > "Accelerometer Coordinate System."

Settings app

Open "Settings" > "Display" > "Accelerometer Coordinate System."

Online help

Online help screen

Select "Online Help" on the Apps screen to access online help.

Software updates

Software update

Select "Software Update" on the Settings screen to check for updates.

Resetting

Reset

Press and hold the **Q** button and the **Q** button until the "Reset" screen appears.

Restore

Backup & reset

Select "Backup & reset" on the Settings screen to back up data.

Legal information

FCC Part 15

This device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

This product is supplied and distributed new by AIT, Inc. ("AIT") to the original consumer purchaser is warranted by AIT against defects in material and workmanship for a period of one year from your date of purchase ("Warranty").

IN NO EVENT WILL AIT, ITS MANUFACTURERS, DISTRIBUTORS OR FLA/PHOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES SUCH AS BUSINESS, SAVINGS, DATA OR RECORDS LOSS, BUT NOT LIMITED TO, DAMAGES OF ANY KIND, INCLUDING REASONABLE ATTORNEY'S FEES, ARISING OUT OF THIS PRODUCT, EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY.

Customer Support

Monday - Friday: 9AM - 10PM (EST)
1-877-789-8481 (Toll Free)
support@polaroid.com

FRONT

BACK