



 
PB1009X for Fred Meyer: User Guide

08/09/2017

BC

In the box



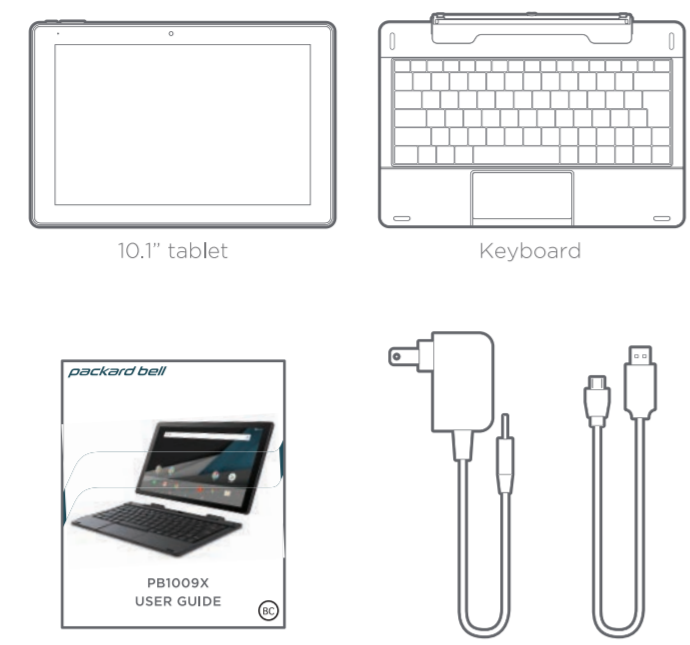

10.1" tablet
Keyboard
User guide
Charger
Micro USB cable


Care & safety precautions

• During charging, keep your device and charger near room temperature for efficient battery charging.
• New batteries are not fully charged.
• New batteries or batteries stored for a long time may take more time to charge.
• The included charger is intended for indoor use only.
• Do not use the tablet or charger in wet or damp areas.
• Do not use the tablet or charger for an extended period of time.
• Do not attempt to disassemble, repair or modify the tablet yourself.
• Do not use the tablet or charger for an extended period of time.
• Avoid pulling any liquid on the tablet.
• Do not use the tablet or charger with all cables and turn off the tablet.
• Do not attempt to use the tablet with an external power source.
• Unplug all cables and turn off the tablet before cleaning.
• Use a soft, lint-free cloth to clean the tablet and display.
• Avoid getting moisture in open ports.
• Do not use household cleaners, solvents, alcohol, or abrasives to clean the tablet.
• Do not use the tablet for paper and safe conditions. If there is any damage, or broken parts, remove the tablet from use.
• If you notice the screen (display) is cracked or cracked, immediately remove the product from use and contact Customer Support.
• It is not possible for screens to be triggered by light flashes or patterns such as those on computer or TV screens. To reduce exposure to this potential hazard, always maintain an appropriate distance from the screen and take 10- to 15-minute breaks every hour.
• Cords could be a strangulation hazard.
• Keep out of reach of children under 3 years of age.
• Children pulling on the cord could cause the computer monitor or other equipment to which the device is connected to fall with possibility of property damage, serious injury or death. Adult supervision required during use.
• Long-term exposure to loud sounds, at high volume, may result in permanent hearing loss.
• When using headphones or earbuds, it is recommended that the product is listened to at lower volumes for shorter periods of time. Set the volume while in a quiet environment, turn the volume down if you cannot hear the people speaking near you. Limit the listening time to 90 minutes, followed by a quiet period. The louder the volume, the less time required before your hearing may be affected.
• If you experience ringing in your ears or hear muffled speech, stop listening and have your hearing checked.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

	WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN	
THE LIGHTNING BOLT WITH ARROWHEAD SYMBOL, WITHIN AN EXPLANATORY TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED ENERGIC PARTS THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.	WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICE TO QUALIFIED SERVICE PERSONNEL.	THE EXCLAMATION POINT WITHIN THE TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF HAZARDOUS OPERATING AND MAINTENANCE CONDITIONS. READ AND FOLLOW THE INSTRUCTIONS ACCOMPANYING THE PRODUCT.

 
Buttons, ports & hardware

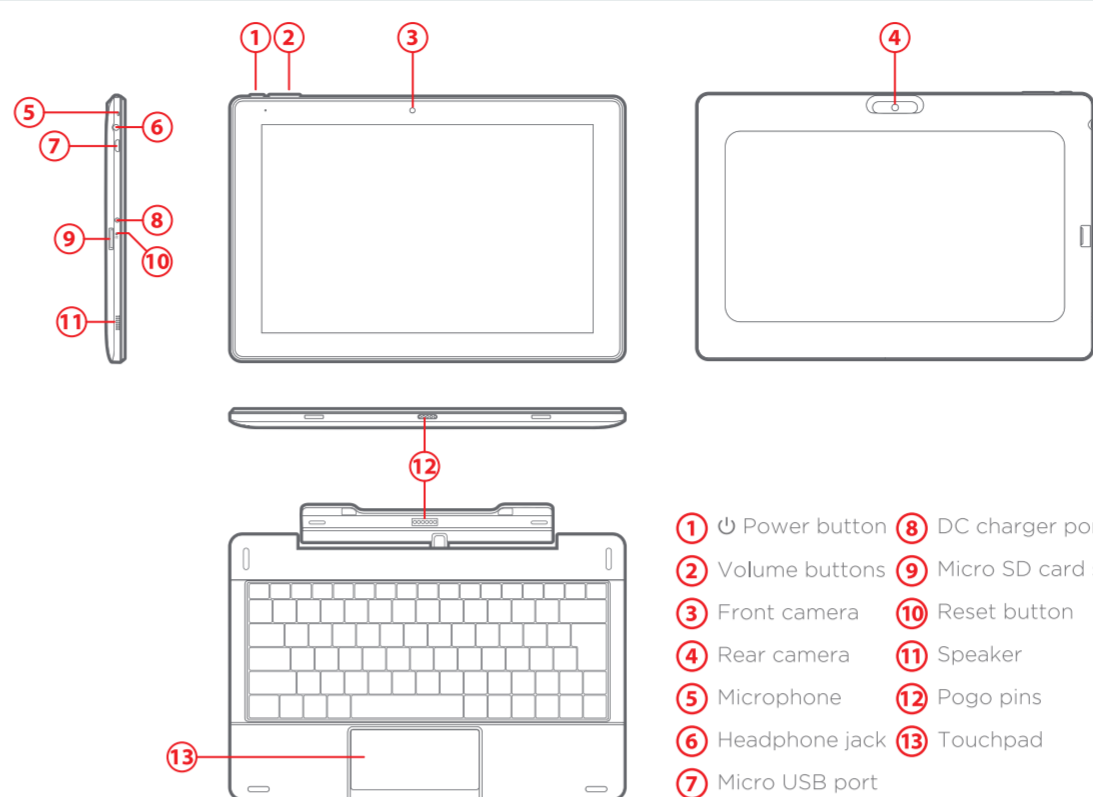

1 Power button
2 Volume buttons
3 Front camera
4 Rear camera
5 Microphone
6 Headphone jack
7 Micro USB port
8 DC charger port
9 Micro SD card slot
10 Reset button
11 Speaker
12 Pogo pins
13 Touchpad

Expanding the storage

 Inserting a Micro SD card
The tablet supports Micro SD cards up to 64GB (not included).
To install a Micro SD card into the tablet, carefully insert the card as shown below into the card slot until it clicks and locks into place.
To remove the Micro SD card, gently press it inward to eject.

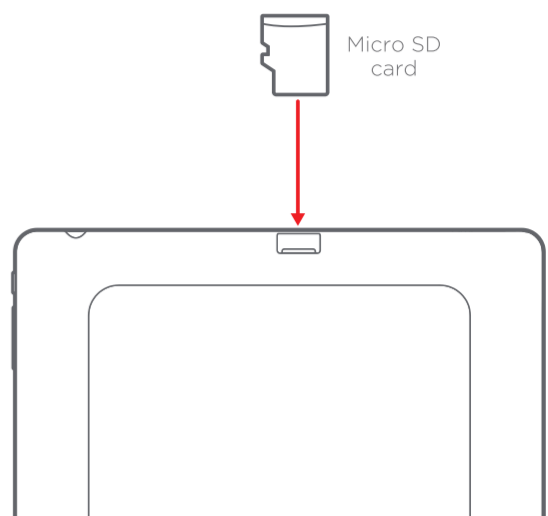


Specifications:

- 10.1" IPS display (1280 x 800)
- Android 7.0 Nougat
- 64-bit Intel quad-core processor
- 1GB RAM
- 32GB internal storage* (expandable with optional Micro SD™ card)
- 5,000 mAh Li-Ion battery
- Front + rear cameras
- Wi-Fi 802.11 b/g/n
- Bluetooth 4.0

*Actual internal memory may vary depending on the operating system of the device and the preloaded apps.

Charging

 
Connect the tablet to a wall outlet using the included power adaptor as shown below.

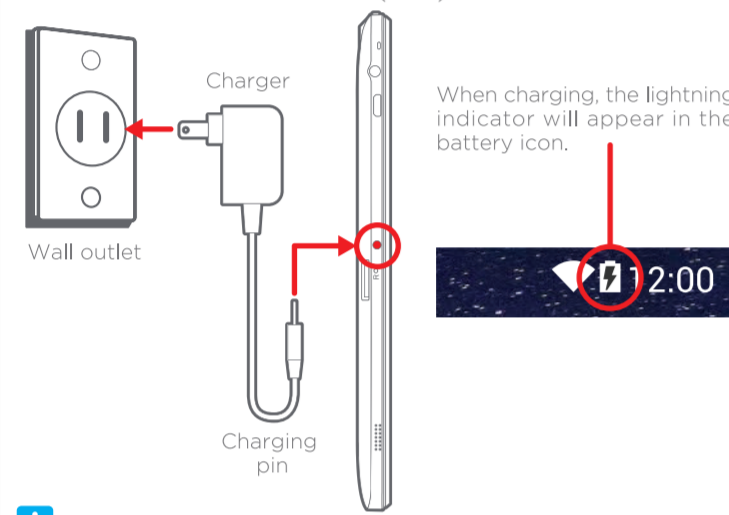



Battery Tips:

 
- Turn off Wi-Fi when it's not in use.
- Lock the tablet (turning the display off) to shorten charging time.
- To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings panel.
- It is recommended to keep the brightness level at 50% or under if the tablet is in use while charging.

Power ON / OFF & Reset

Turning on the tablet
Press & hold the  button until the startup screen appears.

Power off the tablet
Press & hold the  button until the "Power off" option appears.


Lock the tablet (standby)
Briefly press the  button. (Lock the tablet to conserve the battery).

Unlock the tablet
Briefly press the  button, and slide the "Lock icon" up.


Resetting the tablet
If the tablet malfunctions or freezes, you can use the reset button to restart it.

To reset the tablet, take a metal pin (such as the end of a paper clip) and gently push the recessed reset button on the side of the tablet as shown below.

 The tablet will restart.

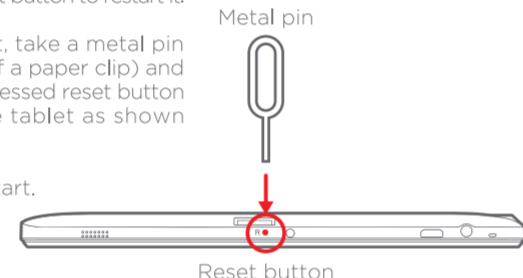


Turning on

1 Press and hold the  button to get started.


2 Follow the initial setup wizard prompts.

 3 To use the Google Play store, sign into or create a Google account.

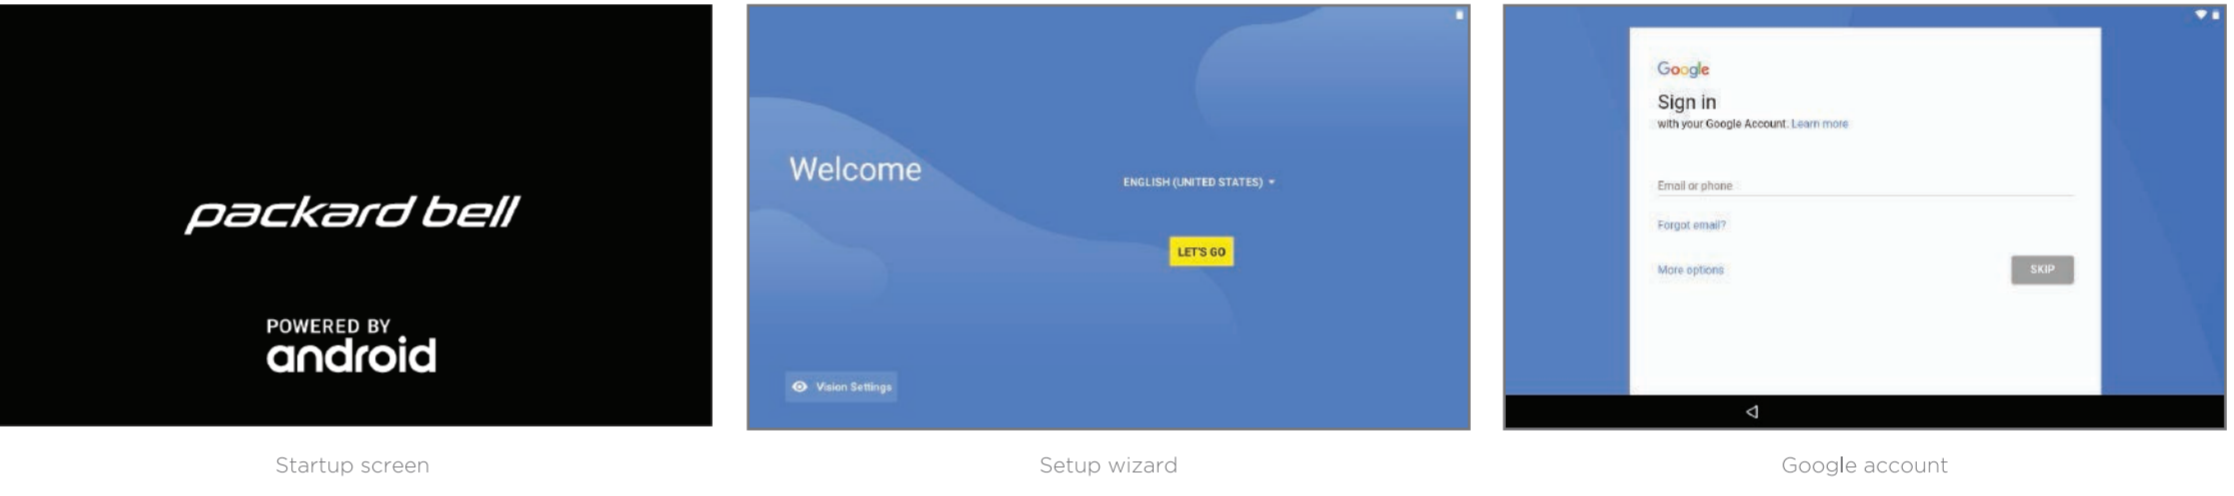

If you use Gmail, you already have a Google account — if not, you can create an account now.

 
Google Play

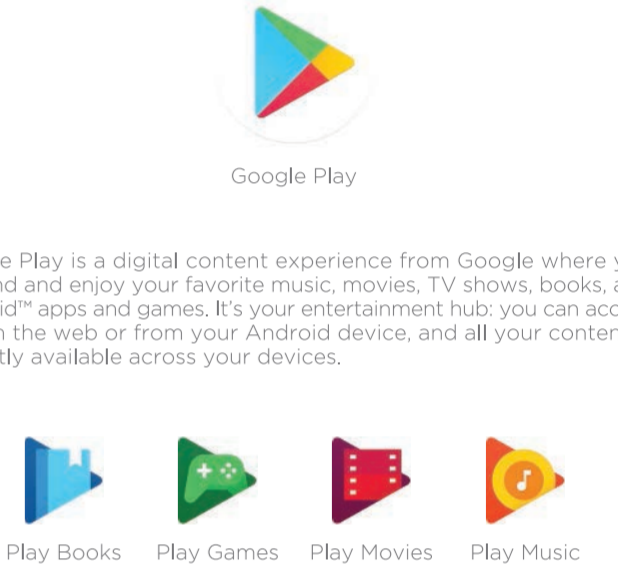


Google Play is a digital content experience from Google where you can find and enjoy your favorite music, movies, TV shows, books, and Android™ apps and games. It's your entertainment hub; you can access it from the web or from your Android device, and all your content is instantly available across your devices.

Home Screen

 Press and hold widgets to place them on the home screen as shown below.

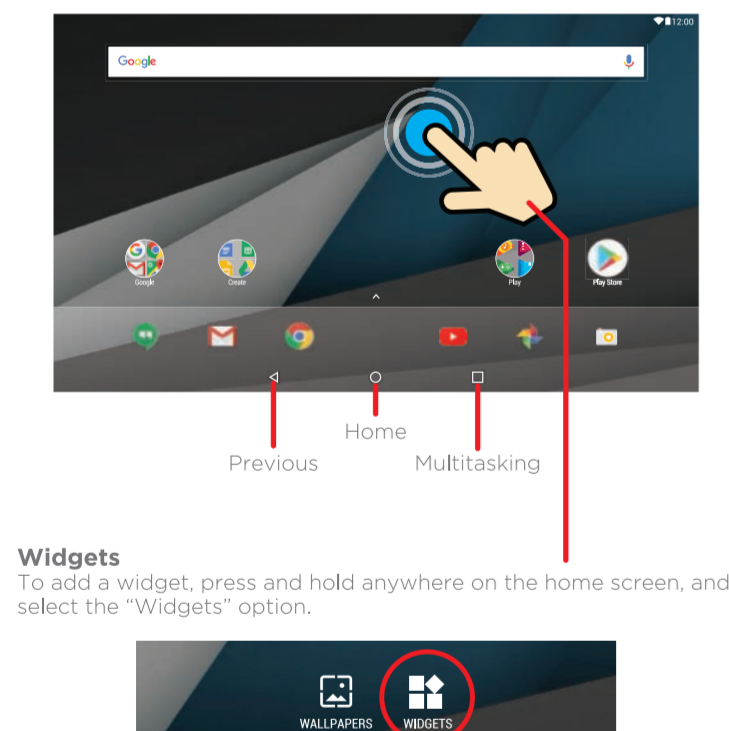


 Widgets
To add a widget, press and hold anywhere on the home screen, and select the "Widgets" option.

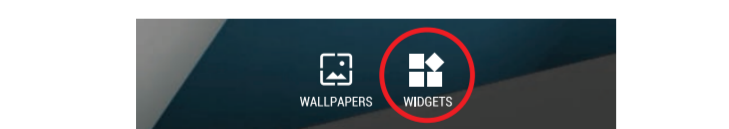


Notifications and Quick Settings

  Notifications panel
Swipe down from the top edge of the screen to display the Notifications panel where you can browse and reply to your emails, check software updates, reminders and more.

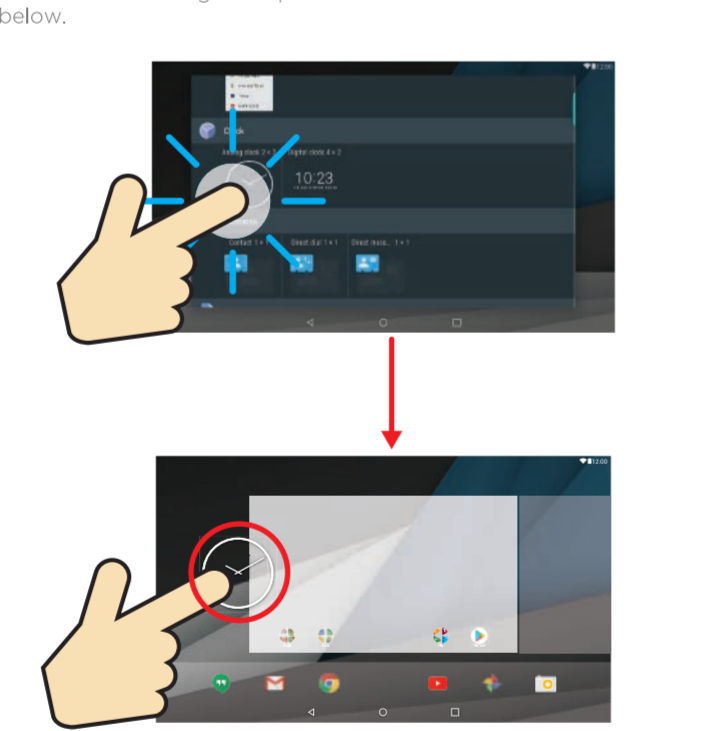


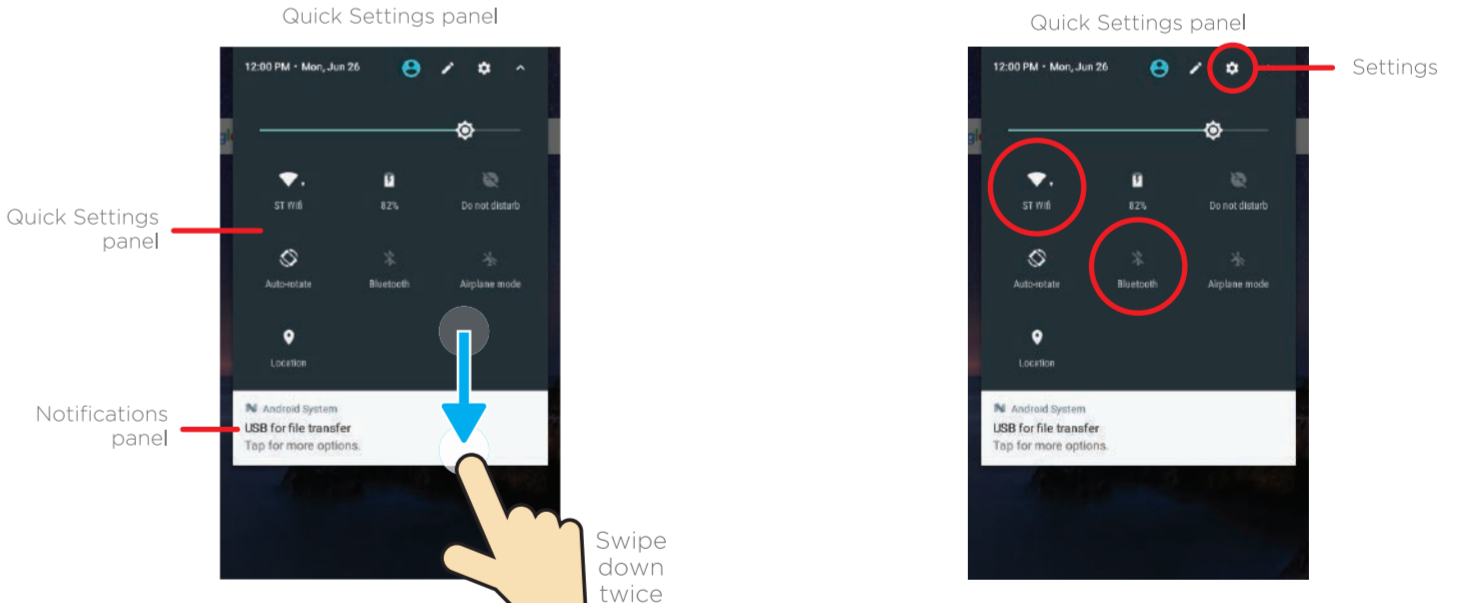 
Quick Settings panel
Swipe down twice from the top edge of the screen to expand and access the Quick Settings panel, where you can easily enable/disable Wi-Fi, Bluetooth, Airplane mode and other settings.

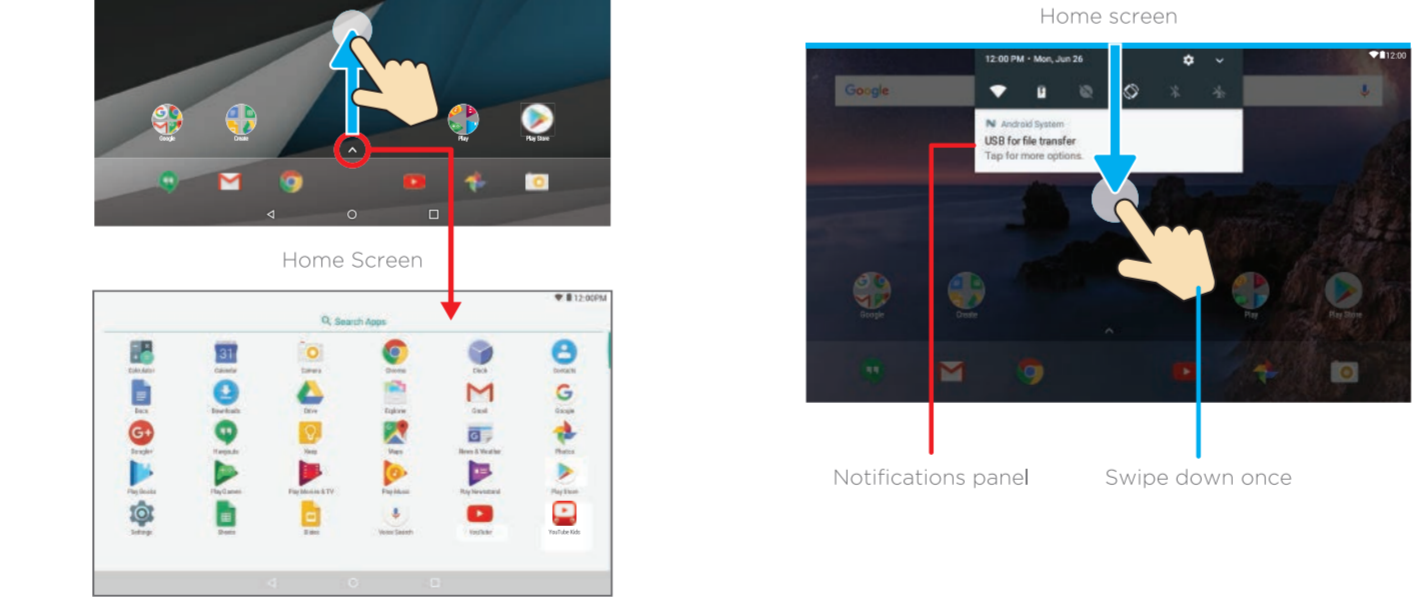

Connecting

Wi-Fi and Bluetooth®
To enable/disable Wi-Fi or Bluetooth®, simply tap the icons on the Quick Settings panel as shown below.

 
To access more settings options, select the  icon.




Cast screen

Show your tablet's screen on devices with Miracast Wireless display capabilities:

1. Turn on the Miracast feature on your Miracast supported TV or Miracast dongle (not included).
2. Connect your tablet to the same Wi-Fi network as your Miracast enabled TV.
3. Go to Settings > Display > Cast and tap on "I".

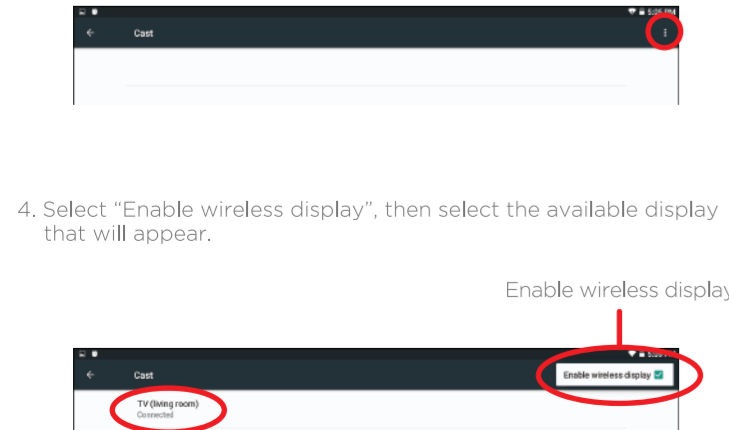

 4. Select "Enable wireless display", then select the available display that will appear.

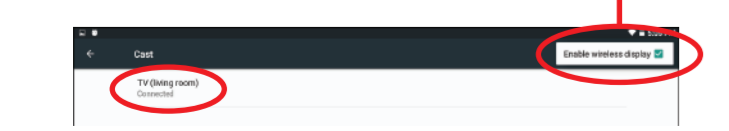

Optimal video performance is achieved with videos that are 720p or under.

Keyboard Dock

To dock the tablet to the keyboard, align the tablet and the keyboard, then slide the tablet into the dock as shown below.

To undock the tablet from the keyboard, firmly hold the keyboard as shown below, then gently pull the tablet upwards.

The tablet will automatically recognize the keyboard when docked properly.



Important: The touchpad does not have a mechanical click. Tap to select.

Correct: Tap the touchpad to select.

Incorrect: Do not push down on the touchpad.

Legal information

FCC Part 15: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment. Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. *This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. *Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

Information Regarding Exposure to Radio Frequency Energy
Your device is designed and manufactured not to exceed the emission limits for exposure to RF energy set by the Federal Communications Commission of the United States (FCC). Information on your device is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/ovr/> after searching on the FCC ID for your device, which can be found on the back of the device.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

Battery Disposal & Recycle
This device contains a lithium-ion battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.

Designed and distributed by Southern Telecom Inc. 5601 1st Avenue Brooklyn, NY 11208 © 2017 All Rights Reserved. Made in China. Packard Bell, Google Play, the Google Play logo and other marks are trademarks of Google. The **Bluetooth** word mark and logos are owned by the Bluetooth SIG, Inc. All other trademarks and trade names are those of their respective owners.

This device complies with Part 15 of the FCC Rules and Industry Canada (Interference-Restricted) standards. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Attention Canada (CIC) Cet appareil ne cause pas d'interférence nuisible et doit accepter toute interférence radioélectrique qu'il peut subir. Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas provoquer d'interférences et (2) cet appareil doit accepter toute interférence, y compris celles pouvant causer un mauvais fonctionnement de l'appareil.

Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER
This Product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:
Product Type: Tablet, Territory: United States/Canada, Parts Warranty: 1 Year, Labor Warranty: 1 Year

To obtain warranty service:
• Call the Customer Support number located below, or go to our website portal to receive an SRQ number.
• Provide proof of the date of purchase within the package (dated bill of sale).
• Prepay all shipping costs to the authorized service center, and remember to insure your return.
• Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
• Describe the defect or reason you are returning the product.

Customer Support:
1-877-768-8481 (Toll Free) Monday - Friday: 8AM - 10PM (EST) www.southerntelecom.com
Click on "Product Support"

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:
Customer Service Dept. 36
425 Southern Telecom
400 Kennedy Drive
Sayreville, NJ 08872

Warranty service not provided:
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmwares. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY TO THIS PRODUCT. ALL WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE VOIDED IN THE EVENT ANY UNAUTHORIZED PERSON OPENS, ALTERS OR REPAIRS THIS PRODUCT. ALL PRODUCTS BEING RETURNED TO THE AUTHORIZED SERVICE CENTER FOR REPAIR MUST BE SUITABLY PACKAGED.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or any limitations on warranties, or limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

