

In the box

USB Cable
AC Adapter

Location of controls

- Power
- Volume Up
- Volume Down
- Home
- Microphone
- Camera
- Headset Jack
- Micro-USB

Charging the battery

Connect the USB cable to the phone and the AC adapter to a power outlet. The battery will be charged.

Turning on the tablet

Press the Power key. The screen will turn on and the lock screen will appear.

Unlocking the tablet

Slide the lock screen to the right to unlock the tablet.

Locking the tablet

Press the Power key to lock the tablet.

Home screen

The home screen displays the icons for the apps and widgets you use most often. You can customize the home screen by adding or removing icons and widgets.

Home screen layout

Press and hold an icon to move it. Press and hold the Home key to add a new icon.

Home screen widget

Press and hold a widget to add it to the home screen. Press and hold the Home key to add a new widget.

Adding apps & widgets to home

Press and hold the Home key to add a new icon or widget to the home screen.

Removing shortcuts or widgets

Press and hold an icon or widget to remove it from the home screen.

Connecting to Wi-Fi & downloading apps

Setting up Wi-Fi

Go to Settings > Network & Internet > Wi-Fi. Turn on Wi-Fi. Select a Wi-Fi network. Enter the password if required.

Downloading apps

Go to the Google Play Store. Search for an app. Tap the app icon to download it.

Internet

Use the browser to access the internet. Tap the browser icon on the home screen.

Camera and video chat

Camera mode

Tap the camera icon to open the camera. Tap the shutter key to take a picture.

Video chat

Tap the video chat icon to start a video chat. Tap the video chat icon to end a video chat.

Multimedia

Music

Tap the music icon to open the music player. Tap the play/pause button to play or pause the music.

Video

Tap the video icon to open the video player. Tap the play/pause button to play or pause the video.

Camera and video chat

Camera mode

- Flash
- Camera
- Shutter
- Zoom
- Gallery
- Camera mode
- Camera view

Video chat

- Video chat
- Video chat view

Web browsing

Tap the browser icon to open the browser. Tap the address bar to enter a URL. Tap the search button to search the internet.

Setting up e-mail

Go to Settings > Accounts & sync > Add account. Select an email provider. Enter your email address and password.

Photo gallery

Tap the photo gallery icon to open the photo gallery. Tap a photo to view it. Tap the share icon to share the photo.

Transferring and managing files

Inserting Micro SD card

Insert the Micro SD card into the slot. Tap the notification to open the storage settings.

Connecting the tablet to a PC or Mac

Connect the USB cable to the tablet and the PC or Mac. Tap the notification to open the USB settings.

Conserving Internal Memory!

Remove unnecessary files and apps to free up space. Tap the notification to open the storage settings.

Browsing files

Tap the file manager icon to open the file manager. Tap a file to view it. Tap the share icon to share the file.

Settings

Tap the settings icon to open the settings. Tap a setting to change it.

Online help

Tap the online help icon to access the online help. Tap the online help icon to report a problem.

Restore

Tap the restore icon to restore the tablet. Tap the restore icon to restore the data.

Specifications

- Display: 7.0" (177.8 mm) diagonal, 1280 x 800 pixels
- Processor: 1.5 GHz
- RAM: 1 GB
- Storage: 16 GB
- Camera: 5.0 MP
- Battery: 2000 mAh

Legal Information

Read the legal information for more details. Tap the legal information icon.

Limited Warranty

Read the limited warranty for more details. Tap the limited warranty icon.

