



# P10: QSG

**Polaroid** 10.1" Tablet In the box Buttons, ports & hardware

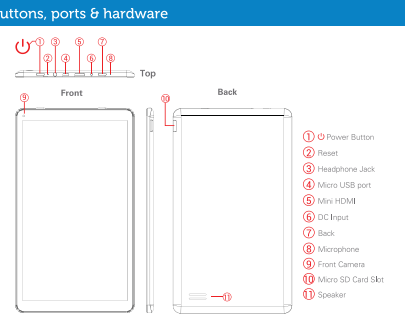

**Quick Start Guide  
Model: P10**

**10.1" Tablet**

**Quick Start Guide**

**AC Adaptor**

**USB Cable**

**Front** **Top** **Back**

1 Power Button  
2 Reset  
3 Headphone Jack  
4 Micro USB port  
5 Mini HDMI  
6 DC Input  
7 Back  
8 Microphone  
9 Front Camera  
10 Micro SD Card Slot  
11 Speaker

**Google Play™** **Charging the tablet** **Power ON / OFF** **Connecting**

Google Play enables you to store up to 20,000 songs for free and buy millions of new songs. It's home to 1,000,000 Android™ apps and games. It houses the world's largest selection of eBooks. It's where you can rent thousands of movies including new releases and HD titles. It's how you buy and experience digital entertainment on your Android device and any web browser on any computer.

To take advantage of these features please login or set up a Google™ account, this can be done in the setup wizard the first time you power on the tablet.

**Turning on the tablet**  
Press & hold the **Q** button until the startup screen appears.

**Power off the tablet**  
Press & hold the **Q** button until the "Power off" options appear.

**Lock the tablet (standby)**  
Briefly press the **Q** button. Lock the tablet to conserve the battery.

**Unlock the tablet**  
Briefly press the **Q** button, and slide the "Lock icon" to the right.

**Lock icon**

**Micro SD Slot**


**Slide down**

**Startup screen**

**Lock screen**

**Home screen**

**Charging the tablet:**  
Connect the tablet to a wall outlet using the included AC adaptor as shown below.

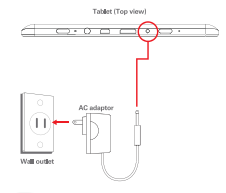

**Lock icon**

**Micro SD Slot**

**Slide down**

**Startup screen**


**Lock screen**

**Home screen**

**Battery Tips:**

- Turn it **OFF** when it's not in use.
- Lock the tablet turning the display off to shorten charging time.
- To optimize battery time and performance, adjust the "Brightness" and "Screen Timeout" options in the Settings panel.

**Home screen** **Apps screen** **Widgets**

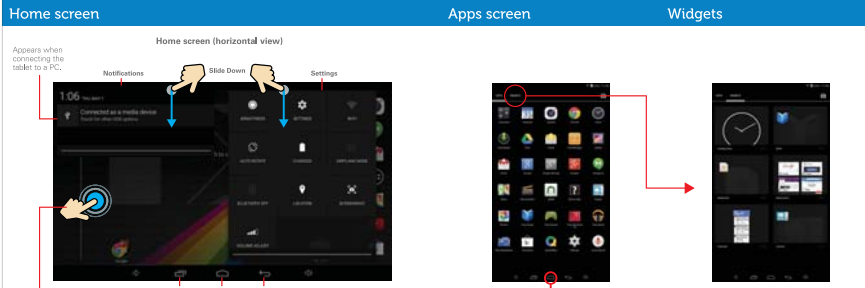

**Home screen (horizontal view)**

Appear when connecting the tablet to a PC.

Notifications

Slide Down

Settings

Press & hold to change wallpaper.

Multi-tasking

Home

Previous

Press the **Q** icon to return to the Home screen.

Press & hold widgets to place them on the Home screen.

**Micro SD card**

The tablet supports Micro SD cards up to 64GB (not included). To install a Micro SD card into the tablet, insert the card as shown below into the card slot until it clicks and locks into place. To remove the Micro SD card, gently press it inward to eject.

**HDMI®**

You can connect the tablet to an HD display with a mini HDMI to HDMI cable (not included).

**To connect:**

1. Connect the mini end of the HDMI cable to the HDMI port of the tablet.
2. Connect the other end of the HDMI cable to the HDMI port of the TV or display.
3. Select the correct input on your TV.
4. The tablet display is now shown on your TV or display.

**Legal information**

©2013 Polaroid. All rights reserved. This document is provided as a guide only. It is not intended to be used as a substitute for legal advice. It is not intended to create an attorney-client relationship. It is not intended to be used as a substitute for legal advice. It is not intended to create an attorney-client relationship. It is not intended to be used as a substitute for legal advice. It is not intended to create an attorney-client relationship.

**Limited warranty**

The Limited Warranty covers the hardware components of the Polaroid P10 Tablet. The Limited Warranty does not cover software, accessories, or any other items that are not part of the original equipment. The Limited Warranty is provided "as is" and does not cover any damage caused by misuse, accidents, or natural disasters.