


P1000 User Guide

2015 1229



Polaroid 10.1" Tablet

P1000
User Guide

In the box

- 10.1" Tablet
- P1000 user Guide
- Charger
- Keyboard Case / Stand
- USB Cable

Care & safety precautions

- During charging, keep your device and charger near room temperature for efficient battery charging.
- New batteries are not fully charged.
- Use batteries or batteries stored for a long time may take more time to charge.
- The included charger is intended for indoor use only.
- Service should only be provided by an authorized service provider.
- Never attempt to disassemble, repair or modify the tablet yourself.
- Do not use the tablet in rain or other wet locations.
- Avoid sliding any liquid on the tablet.
- In case the tablet gets wet, unplug all cables and turn off the tablet.
- Do not attempt to dry the tablet with an external heat source.
- Unplug all cables and turn off the tablet before cleaning.
- Use a soft, lint-free cloth to clean the tablet and display.
- Avoid using abrasive or caustic cleaners.
- Do not use household cleaners, solvents, alcohol, or abrasives to clean the tablet.
- Business check the tablet for proper sale conditions. If there is any damage, or broken parts, remove the tablet from use.
- For any reason the screen (display) is fractured or cracked, immediately remove this product from use and contact Customer Support for replacement.
- It is not possible for screens to be triggered by light flashes or patterns such as those on computer or TV screens.
- Screen damage due to the potential hazard, always use in a well-lit room, at an appropriate distance from the screen and take 10-15 minute breaks every hour.
- Cords could be a strangulation hazard.
- Keep out of reach of children under 3 years of age.
- Children pulling on the cord could cause the computer monitor or other equipment to which the device is connected to fall with possibility of property damage, serious injury or death. Adult supervision required during use.
- Long-term exposure to loud sounds, or high volume, may result in permanent hearing loss.
- When using headphones or earbuds, it is recommended that the product is listened to at lower volumes for shorter periods of time. Set the volume while in a quiet environment; turn the volume down if you cannot hear the people around you.
- Limit the listening time to 30 minutes, followed by a quiet period. The lower the volume, the less time required before your hearing may be affected.
- If you experience ringing in your ears or hear muffled speech, stop listening and have your hearing checked.

 
WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THE PRODUCT TO RAIN OR MOISTURE.

WARNING: TO REDUCE THE RISK OF ELECTRICAL SHOCK DO NOT OPEN

THE CHARGING PLUG WITH AN ATTACHED CORD, DO NOT ATTEMPT TO ALTER THE USER TO PREVENT OR REDUCE LATER "UNDESIRABLE VOLTAGE" HARMFUL PRODUCTS. INCLUDE THAT THE SUFFICIENT PROTECTION TO PREVENT A RISK OF ELECTRICAL SHOCK TO PERSONS.

THE DECLARATION OF THE PRODUCT IS AVAILABLE AT THE FOLLOWING URL: www.polaroid.com

Buttons, ports & hardware

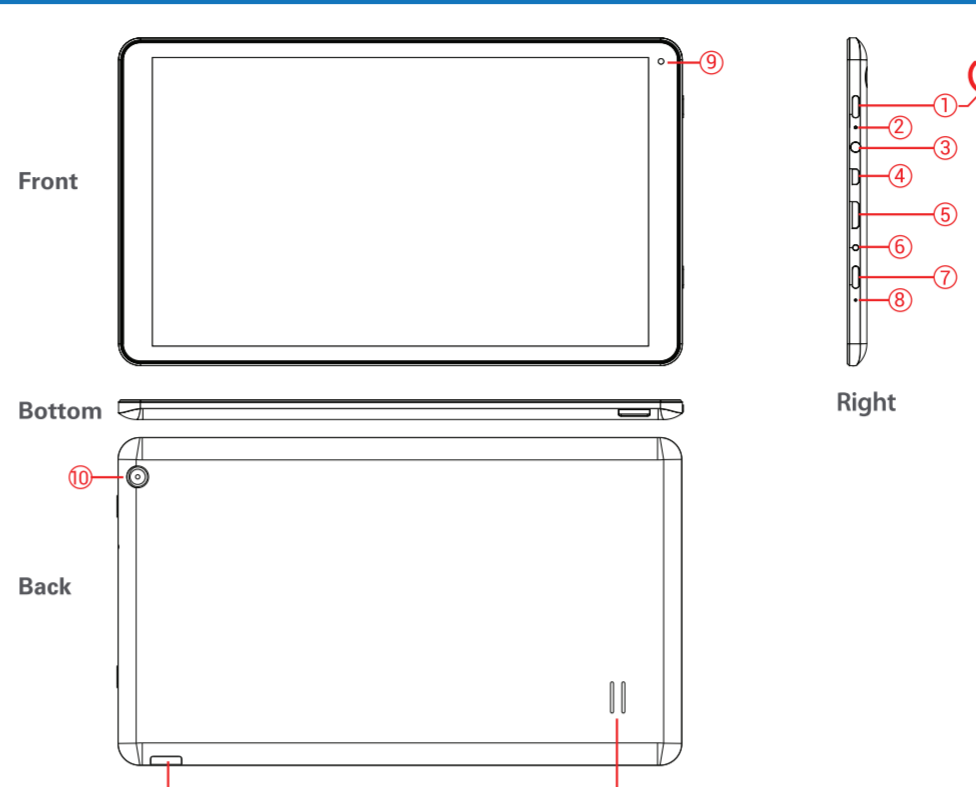 


- Power Button
- Reset
- Headphone Jack
- Micro USB port
- Mini HDMI
- DC Input
- Back
- Microphone
- Front Camera
- Rear Camera
- Micro SD Card Slot
- Speaker

Expanding the storage

 
Inserting a Micro SD card
The tablet supports Micro SD cards up to 64GB (not included). To install a Micro SD card into the tablet, carefully insert the card as shown below into the card slot until it clicks and locks into place.

To remove the Micro SD card, gently press it inward to eject.

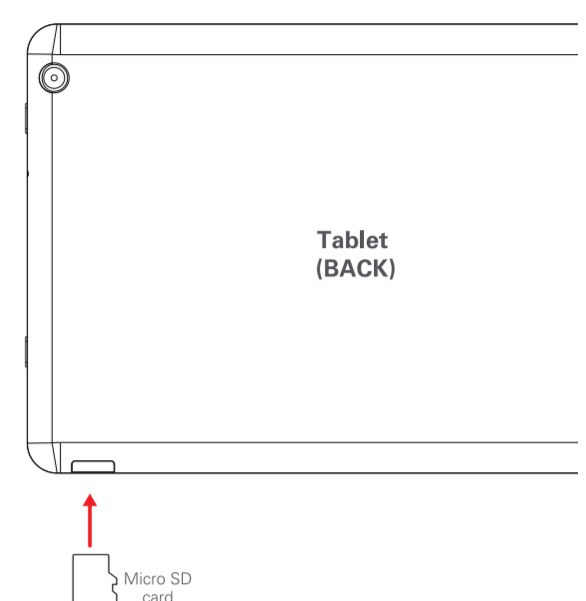

Charging

Connect the tablet to a wall outlet using the included charger & USB cable as shown below.

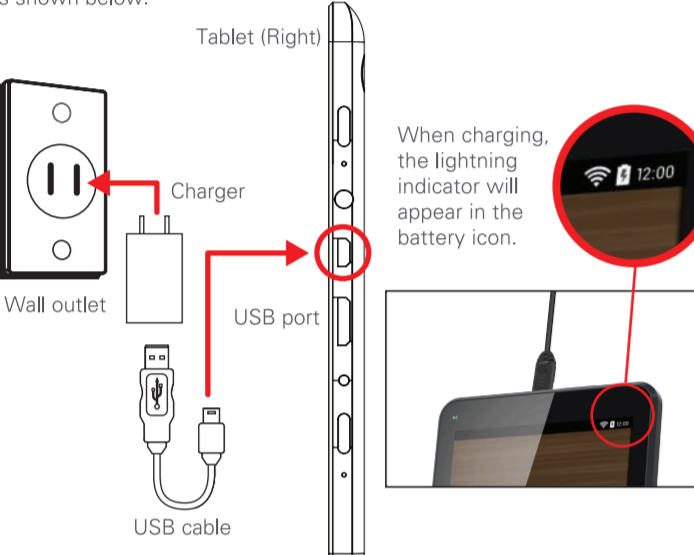

Battery Tips:

- Turn off Wi-Fi when it's not in use.
- Lock the tablet from the display off to shorten charging time.
- To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings panel.

 
 
Power ON / OFF

Turning on the tablet
Press & hold the Power button until the startup screen appears.

Power off the tablet
Press & hold the Power button until the "Power off" option appears.

 
 
 
Lock the tablet (standby)
Briefly press the Power button. (Lock the tablet to conserve the battery).

Unlock the tablet
Briefly press the Power button, and slide the "Lock icon" up.

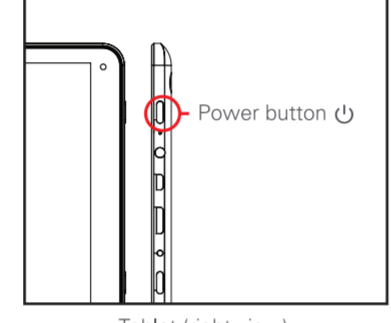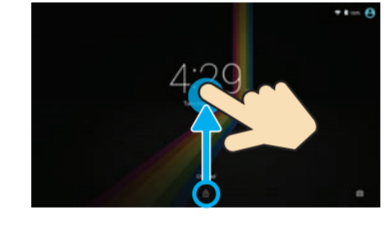
Turning on

- Press and hold the Power button to get started.
- Follow the initial setup wizard prompts.
- To use the Google Play store, sign into or create a Google account.

Google Play™

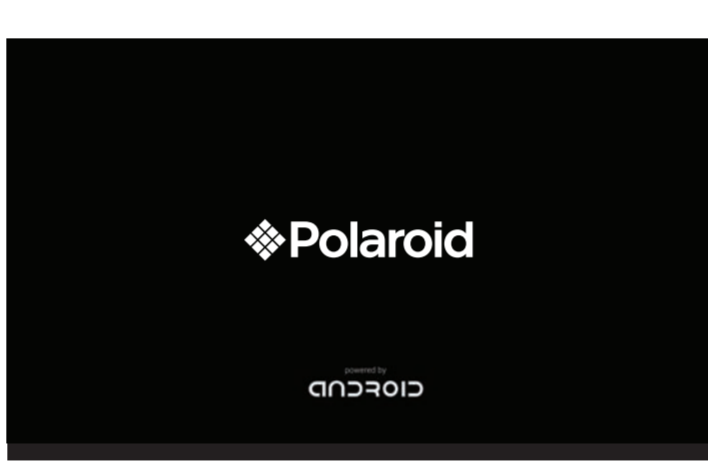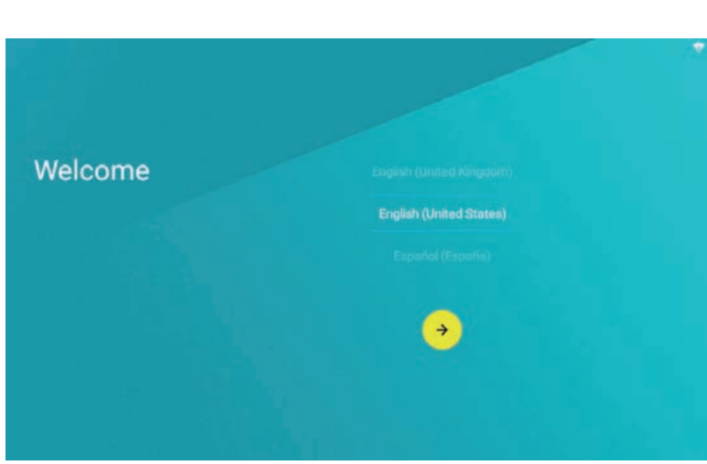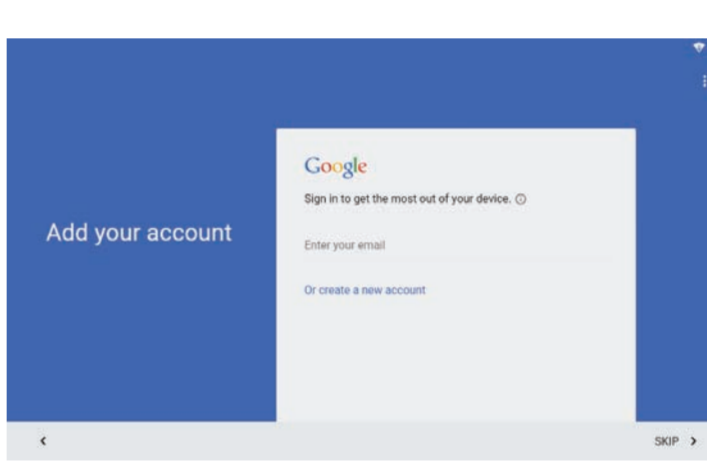Google Play™ is a digital content experience from Google where you can find and enjoy your favorite music, movies, TV shows, books, and Android™ apps and games. It's your entertainment hub you can access from the web or from your Android device, and all your content is instantly available across your devices.

 


i If you use Gmail™, you already have a Google account —if not, you can create an account now.

Home Screen

Widgets
To add a widget, press and hold anywhere on the home screen, and select the "Widgets" option.

Press and hold widgets to place them on the home screen as shown below.

 
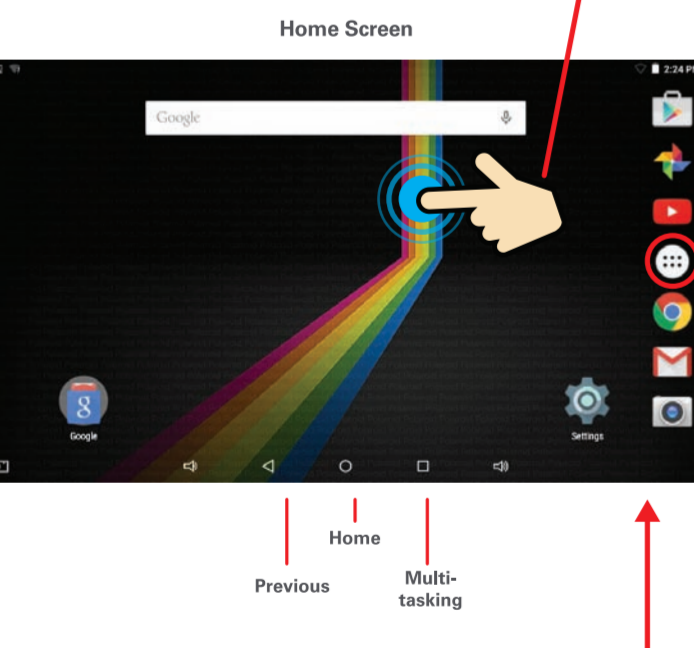 


Home screen navigation: Previous, Home, Multi-tasking, Back to Home Screen.

Notifications and Quick Settings

Notifications panel
Swipe down from the top edge of the screen to display the Notifications panel where you can browse and reply to your emails, check software updates, reminders and more.

 
Quick Settings panel
Swipe down twice from the top edge of the screen to expand and access the Quick Settings panel, where you can easily enable/disable Wi-Fi, Bluetooth, Airplane mode and other settings.

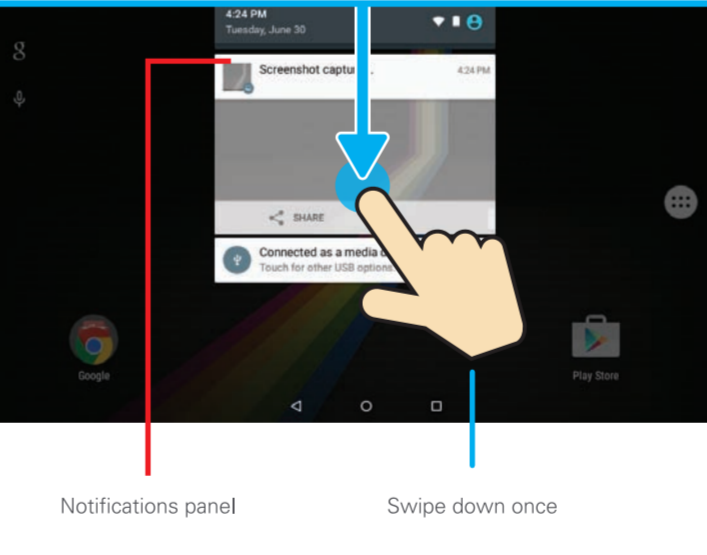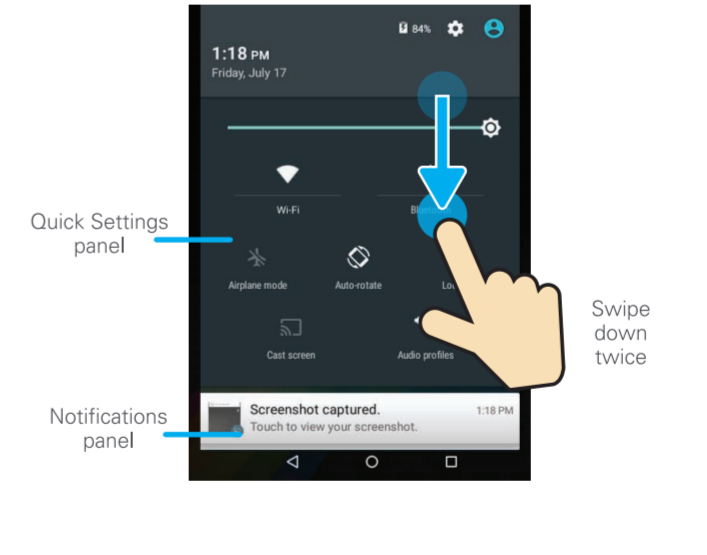Connecting

 
Wi-Fi and Bluetooth®
To enable/disable Wi-Fi or Bluetooth®, simply tap the icons on the Quick Settings panel as shown below.

To access more settings options, select the Settings icon.

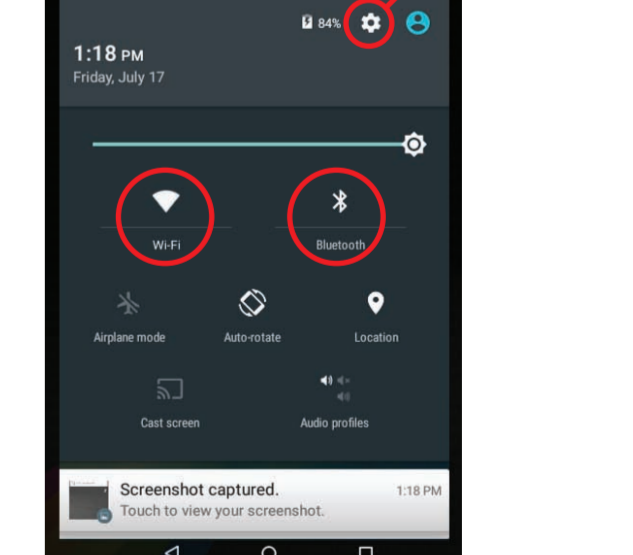 


Keyboard Case

- Insert the tablet into the case.
- Tuck the belt in as shown below.
- Connect the USB cable to the micro USB port.

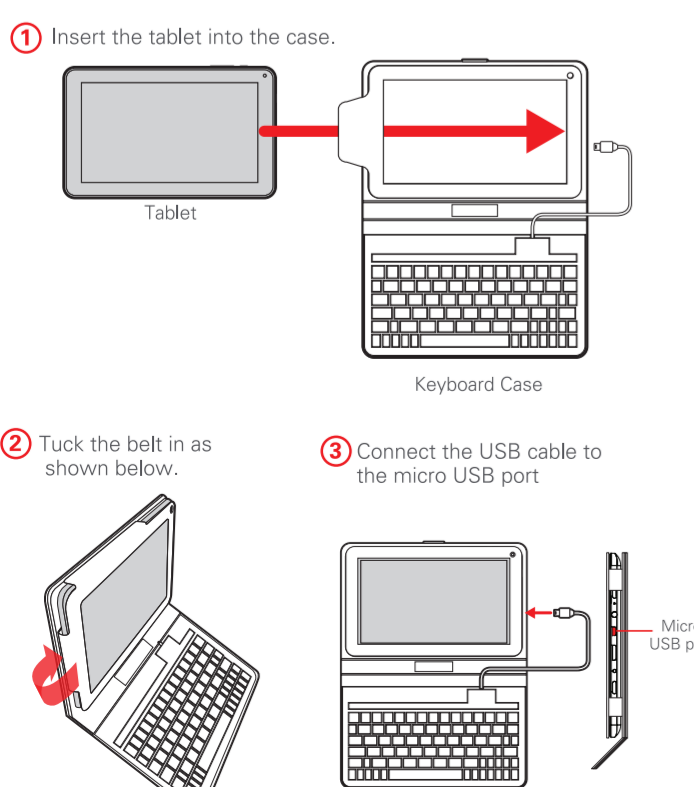

HDMI®

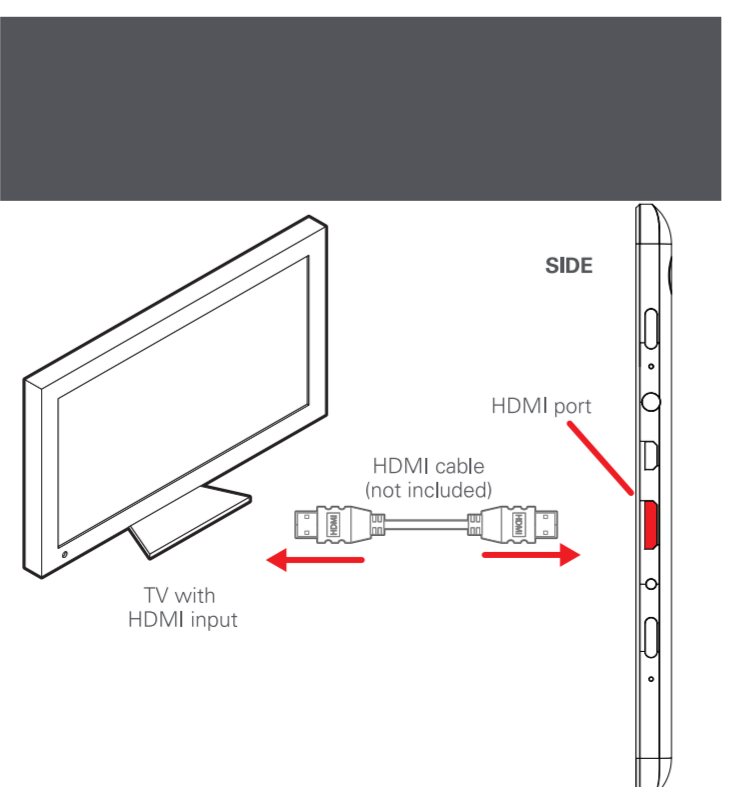

HDMI cable (not included)

Legal information

FCC Part 15:
This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

Information Regarding Exposure to Radio Frequency Energy
Your Device is designed and manufactured not to exceed the emission limits for exposure to RF energy set by the Federal Communications Commission of the United States (FCC). Information on your Device is on file with the FCC and can be found under the Supplier's section of the following website: www.fcc.gov

PLIP IP Holdings, LLC, its subsidiaries and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulatory, directives or other government laws in the area where you reside. Please check with local authorities at the retailer where you purchased this product to determine a location where you can appropriately dispose of the product. You may also go to www.polaroid.com and reference Social Responsibility <http://www.polaroid.com/social-responsibility> to learn more about the specific laws in your area and to locate a collection facility near your home.

Battery Disposal & Recycle
This device contains a lithium battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal. #R000020803

Designed by Southern Telecom / Made in China
Distributed by AT&T, Inc. 5400 West Loop South, Suite 11222
© 2016 All Rights Reserved.

Polaroid, Polaroid & Flex, Polaroid Color Spectrum and Polaroid Classic Border Logo are trademarks of PLIP IP Holdings, LLC. Used under license. PLIP IP Holdings, LLC does not manufacture this product or provide any Manufacturer's Warranty or Support. www.polaroid.com

Android, Google, Google Play and other marks are trademarks of Google Inc. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. All other trademarks and trade names are those of their respective owners.

Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER
The Product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer or venditor by AT&T, Inc. (AT&T) to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:
Product Type: Tablet - Standard, United States / Canada
Parts Warranty: 1 Year, Labor Warranty: 1 Year

To obtain warranty service:

- Call the Customer Support number located below, or go to our website portal to receive an SRQ number.
- Provide proof of the date of purchase within the package (dated list of sales).
- Pay for all shipping costs to the authorized service center, and member to insure your return.
- Include a return shipping address (SO, Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Customer Support:
Monday - Friday 8AM - 5PM (EST) www.southern telecom.com
Click on "Product Support"

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines the product is defective. Products repaired/damaged as a result of shipping will require you to file a claim with the carrier. The shipping address of the authorized service center is:
Southern Telecom, Inc.,
Attention: Customer Service (2nd Floor)
SAC, 5400 West Loop South,
Brooklyn, NY 11222

Warranty service not provided:
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modifications including software modifications such as the installation of custom firmwares. This warranty is voided in the event of any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THAT THE SUPPLIER'S DESCRIBED ABOVE, SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIM ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE, AND ANY OTHER WARRANTIES OR GUARANTEES GIVEN BY ANY PERSON, PRINT OR OTHERWISE WITH RESPECT TO THE PRODUCT SHALL BE VOIDED IN THE EVENT OF ANY UNAUTHORIZED REPAIR OR MODIFICATION TO THE PRODUCT. THE DISTRIBUTOR'S LIABILITY FOR DEFECTIVE PRODUCTS SHALL BE LIMITED TO THE ORIGINAL PURCHASE PRICE - AT THE DISCRETION OF THE DISTRIBUTOR. THE EXCLUSIVE REMEDY OF THE CONSUMER, IN ANY EVENT, SHALL BE LIMITED TO THE ORIGINAL PURCHASE PRICE. PLIP IP HOLDINGS, LLC IS NOT LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES, SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, REVENUE, DATA OR INFORMATION, OR ANY OTHER DAMAGES, INCLUDING REASONABLE ATTORNEY'S FEES. THE CONSUMER'S REMEDY AGAINST DISTRIBUTION SHALL NOT BE LIMITED TO THE ORIGINAL PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine a possible warranty applicability.