

Polaroid 7" Tablet In the box Buttons, ports & hardware

Quick Start Guide Model : Q7

7" Tablet

Quick Start Guide

AC Adaptor

USB Cable

1 Micro USB port
2 HDMI
3 Reset
4 Headphone Jack
5 Micro SD
6 Front Camera
7 Power
8 Volume
9 Rear Camera
10 Speaker

Google Play™ **Charging the tablet** **Power ON / OFF** **Connecting**

Google Play enables you to store up to 20,000 songs for free and buy millions of new songs. It's home to 1,000,000 Android apps and games. It houses the world's largest selection of eBooks. It's where you can rent thousands of movies including new releases and HD titles. It's how you buy and experience digital entertainment on your Android device and any web browser on any computer.

Charging the battery: Connect the tablet to a wall outlet using the included AC adaptor and USB cable as shown below.

Turning on the tablet Press and hold the **Power** button until the startup screen appears.

Power off the tablet Press & hold the **Power** button until the "Power off" options appear.

Lock the tablet (standby) Briefly press the **Power** button, then the **Lock** icon to conserve the battery.

Unlock the tablet Briefly press the **Power** button, and slide the "Lock icon" to the right.

Wi-Fi and Bluetooth® To setup Wi-Fi or connect the tablet to a Bluetooth enabled device, slide down on the top right of the home screen as shown below.

Startup screen

Lock screen

Quick Settings

AC adaptor

Wall outlet

Tablet (Top view)

Slide down

Face up

Micro SD

Play Store

in charging time

Home screen **Apps screen** **Widgets**

Appears when connecting the tablet to a PC.

Home screen (horizontal view)

Notifications Slide Down Quick Settings

1:06 Tuesday

Completed a weekly backup

Previous Home Multi-tasking

Apps screen (vertical view)

Press the **Home** icon to return to the Home screen.

To add a widget, press and hold anywhere on the home screen. Select the Widgets option as shown below.

Press and hold Widgets to place them on the Home screen.

Micro SD card **HDMI®** **Legal information** **Limited warranty**

Inserting a Micro SD card The tablet supports Micro SD cards up to 32GB (not included). To install a Micro SD card into the tablet, gently slide the card into the slot as shown below until it is firmly inserted.

HDMI® You can connect the tablet to an HD display with a Mini HDMI to HDMI cable (not included). To connect:

1. Connect the Mini end of the HDMI cable to the "HDMI" port of the tablet.
2. Connect the other end of the HDMI cable to the "HDMI" port of the TV or display.
3. The tablet display is now shown on your TV or display.

Micro SD

Tablet (Top view)

HDMI video out

HDMI cable (not included)

Legal information

Limited warranty