

# ST8888D-CA User Guide English

06/08/2022

smarttab®  
8.0" FAMILY TABLET  
Includes bumper, headphones and stickers

ST8888D  
User Guide

### Care & safety precautions

- **CHOKING HAZARD** - Small parts. Not intended for children under 3 years old.
- **Electronics generate heat**. Allow equipment to cool - temperature will decrease naturally during use.
- **Use headphones** for extended periods.
- **Use the included charger** - Do not use other chargers.
- **Do not use the tablet in wet or other wet locations.**
- **Do not use the tablet in or near water.**
- **Do not use the tablet in or near fire.**
- **Do not use the tablet in or near heat sources.**
- **Do not use the tablet in or near children.**
- **Do not use the tablet in or near children's toys.**
- **Do not use the tablet in or near children's toys.**
- **Do not use the tablet in or near children's toys.**
- **Do not use the tablet in or near children's toys.**

**WARNING TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT EXPOSE THE PRODUCT TO WATER OR MOISTURE.**

### In the box

- Tablet
- Kid-friendly stereo headphones
- User Guide
- Bumper
- Decorative stickers (x3)
- USB-C cable
- Charger

### Buttons, ports & hardware

- 1 USB-C port
- 2 Micro SD card slot
- 3 Headphone jack
- 4 Front camera
- 5 Volume buttons
- 6 Power button
- 7 Reset
- 8 Microphone
- 9 Rear camera
- 10 Speaker

### Charging

Connect the tablet to a wall outlet using the included USB-C cable and charger as shown below.

When charging, the lightning indicator will appear in the battery icon.

**Battery Tips:**

- Turn off Wi-Fi when it's not in use.
- To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings panel.
- It is recommended to keep the brightness level at 50% or under if the tablet is in use while charging.

### Power ON / OFF

**Turning on the tablet**  
Press & hold the **Power** button until the startup screen appears.

**Power off the tablet**  
Press & hold the **Power** button until the "Power off" option appears.

**Lock the tablet (standby)**  
Briefly press the **Power** button. (Lock the tablet to conserve the battery).

**Unlock the tablet**  
Briefly press the **Power** button, and slide the **Lock** icon up.

### Turning on

1 Press and hold the **Power** button to get started.

### Power ON / OFF

2 Follow the initial setup wizard prompts.

3 To use Google Play, sign into or create a Google Account.

**1** If you use Gmail, you already have a Google Account — if not, you can create an account now.

4 Set up Google Family Link.

### Home screen

Home screen

• View time spent in apps  
• Manage the apps they use

• Set limits on screen time  
• Lock & locate their device

### Google Play

Google Play is your entertainment unbound. It brings together all of the entertainment you love and helps you explore it in new ways, anytime, anywhere. We've brought the magic of Google to music, movies, TV, books, magazines, apps and games, so you get more from your content every day.

### Home Screen

Home Screen

Previous Home Multitasking

Widgets  
To add a widget, press and hold anywhere on the home screen, and select the "Widgets" option.

### Home Screen

Press and hold widgets to place them on the home screen as shown below.

### Notifications and Quick Settings

Swipe up from the bottom of the screen to access the Apps Screen.

Notifications panel

Quick Settings panel

Swipe down once

Swipe down again

### Connecting

#### Wi-Fi and Bluetooth®

To enable/disable Wi-Fi or Bluetooth®, simply tap the icons on the Quick Settings panel as shown below.

To access more settings options, select the **Settings** icon.

### Expanding the storage

#### Inserting a Micro SD card

To install a Micro SD card into the tablet, carefully insert the card as shown below into the card slot until it clicks and locks into place.

To remove the Micro SD card, gently press it inward to eject.

### Transferring files

1 Connect the tablet to the computer using the included USB-C cable as shown below.

### Miscellaneous

2 Tap the notification on the tablet screen.

3 Select "Transfer files".

### Legal information

#### Reset

If the tablet malfunctions or freezes, you can use the Reset button to restart it.

To reset the tablet, take a metal pin (such as the end of a paper clip) and gently push the recessed Reset button on the back of the tablet as shown below.

**Text-To-Speech**  
Google Text-to-speech powers applications to read the text on your screen aloud. For example, it can be used by:

- Google Play Books to "Read Aloud" your favorite book
- Google Translate to speak translations aloud so that you can hear the pronunciation of a word
- TalkBack and accessibility applications for spoken feedback across your device

• ... and many other applications in the Play Store

To use Google Text-to-speech on your Android device, go to **Settings > System > Languages & Input > Advanced > Text-to-speech output**. Select **Google Text-to-speech Engine** as your preferred engine.

For more information regarding TTS, please go to: [www.southern telecom.com/its\\_tabletsupport.html](http://www.southern telecom.com/its_tabletsupport.html)

**Regulatory information**  
To view FCC regulatory information for this tablet, go to **Settings > About tablet > FCC certification**.

### Limited Warranty

#### 90-Day Limited Warranty

**To obtain warranty service:**

- Provide proof of the date of purchase within the package (dated bill of sale).
- Provide a return shipping address (no P.O. Boxes) a telephone contact number, and the defective unit.
- Describe the defect or reason you are returning the product.

**Warranty service not provided**

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be fully packaged.

**NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. OTHER THAN THOSE EXPRESSLY SET FORTH ABOVE, DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, REPRESENTATIVE OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR, REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE AT DISTRIBUTOR'S SOLE DISCRETION AND THE EXCLUSIVE REMEDY OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, SPECIAL, CONSEQUENTIAL DAMAGES OR PROFITS, BUSINESS SAVINGS, DATA OR RECORDS LOST BY THE USER, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY, NOTWITHSTANDING THE FOREGOING. CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.**

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damage or allow limitations on warranties, so limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.