

# P900 : QSG

12/03/2014

**Polaroid** 9" Tablet & Wireless Keyboard

**In the box**

- 9" Tablet
- Case
- Quick Start Guide
- Bluetooth® Wireless Keyboard
- Tablet Stand
- AC Adapter
- USB Cable
- Headphones

**Buttons, ports & hardware**

- Power Button
- Home Button
- Micro USB port
- Headphone Jack
- JC-Age
- Micro SD Card Slot
- Mini HDMI
- Microphone
- Front Camera
- Rear Camera
- Speaker

**Quick Start Guide Model : P900**

**Google Play™**

Google Play lets you to store up to 20,000 songs for free and download more new songs. It's more than 100,000 Android™ apps and games. It shows the world's largest selection of new books and HD Blu-ray™. You can buy and download legal entertainment on your Android device and any compatible browser or any computer.

To take advantage of these features, download or set up a Google™ account. This can be done in the setup wizard the first time you power on the tablet.

**Charging the battery:**  
Connect the tablet to a wall outlet using the included AC adapter as shown below.

**Turning on the tablet:**  
Press and hold the On/Off unit in the startup screen as shown.

**Power off the tablet:**  
Press and hold the On/Off unit and the "Power Off" option appears.

**Lock the tablet (standby):**  
Briefly press the On/Off button, lock the tablet to conserve the battery.

**Unlock the tablet:**  
Briefly press the On/Off button, and slide the "Lock icon" to the right.

**Battery life:**

- Turn off PC when it's not in use.
- Use the auto sleep management to conserve battery life.
- To conserve battery life and performance, adjust the brightness and screen timeout options in the settings app.

**Connecting**

**WiFi and Bluetooth®**

To access WiFi or connect the tablet to a Bluetooth enabled device, slide down on the top right of the Home screen as shown below.

**Micro SD card**

**Inserting a Micro SD card**  
The tablet supports Micro SD cards up to 64GB (not included). To insert a Micro SD card into the tablet, insert the card as shown below into the card slot and lock the slider. To remove the Micro SD card, gently press it inward to eject.

**Specifications**

- Operating System: Android™ 4.4 (KitKat®)
- Processor: Quad-Core
- Display: 9" (1024x600)
- Cameras: Front + Rear
- Speakers: Built-in
- Internal Memory: 8GB\*
- External Memory: Micro SD
- Networking: WiFi (802.11 b/g/n)
- Connectivity: WiFi & Bluetooth®
- Battery: Rechargeable Li-Ion Polymer

**HDMI®**

You can connect the tablet to an HD display with a mini-HDMI to HDMI cable (not included).

**To connect:**

- Connect the mini end of the HDMI cable to the HDMI port of the tablet.
- Connect the other end of the HDMI cable to the HDMI port of the TV or display.
- Select the correct input on your TV or display.

**Legal information**

**Limited warranty**

**Using the wireless Bluetooth® keyboard**

**Charging the keyboard:**  
You can charge the Bluetooth keyboard by connecting it with included USB cable to a PC.

**Turning the keyboard on / off:**  
Slide the switch as shown above, the indicator light will blink 3 times.

**Pairing the keyboard to the tablet:**

- Turn on the keyboard.
- Press the "Pair" button, the Bluetooth indicator light will blink and the keyboard is ready to pair with the tablet.

After pairing successful with the tablet, "Bluetooth Keyboard Connected" is displayed.

**Pairing the keyboard to the tablet:**

- On the tablet's settings, select Bluetooth, turn on Bluetooth, and select "Bluetooth Keyboard".
- Type the password as shown.
- Using the keyboard, type the password shown on the tablet and press enter.

Use the included tablet stand with your wireless keyboard.

**Home screen**

Apps when connecting the tablet to a PC:

- Notifications
- File Drive
- Settings

**Apps screen**

Apps screen (vertical view)

**Widgets**

To add a widget, press and hold anywhere on the home screen, select the widget option as shown below.

Press and hold Widgets to place them on the Home screen.

**Micro SD card**

**Inserting a Micro SD card**  
The tablet supports Micro SD cards up to 64GB (not included). To insert a Micro SD card into the tablet, insert the card as shown below into the card slot and lock the slider. To remove the Micro SD card, gently press it inward to eject.

**Specifications**

- Operating System: Android™ 4.4 (KitKat®)
- Processor: Quad-Core
- Display: 9" (1024x600)
- Cameras: Front + Rear
- Speakers: Built-in
- Internal Memory: 8GB\*
- External Memory: Micro SD
- Networking: WiFi (802.11 b/g/n)
- Connectivity: WiFi & Bluetooth®
- Battery: Rechargeable Li-Ion Polymer

**HDMI®**

You can connect the tablet to an HD display with a mini-HDMI to HDMI cable (not included).

**To connect:**

- Connect the mini end of the HDMI cable to the HDMI port of the tablet.
- Connect the other end of the HDMI cable to the HDMI port of the TV or display.
- Select the correct input on your TV or display.

**Legal information**

**Limited warranty**

