


10.steam cook(steam+convection)function

1.Pressing the  button twice when we want to use this function The “*” symbol and the  symbol will be lightened




2.The temperature can be set in any order.


The setting can be changed in any order and at any time, even during cooking. By default ,the steam temperature is high , and the convection temperature is 240 C

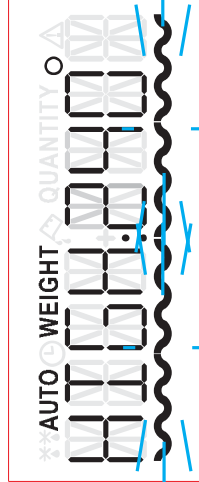


4.To change the temperature setting, press the  button the required number of times. 7 temperature settings are available between 100°C and 240 °C (100-140-160-180-200-220-240°C)

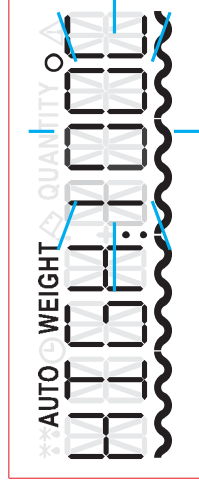


6.Press the  button the countdown will start ,and the oven will start cooking for the **selected time**

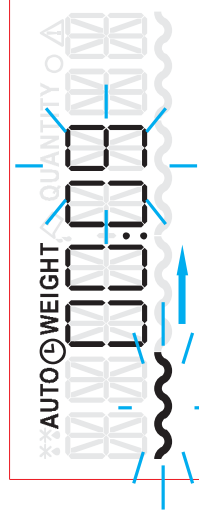


7.When countdown finished ,the “DONE”symbol will appear on the display going with the alarm sound.

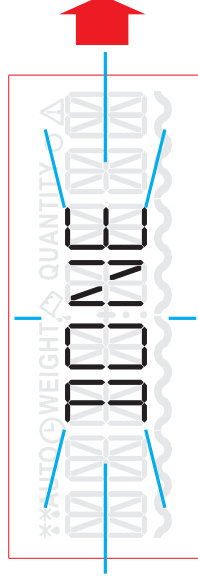


8.Later ,the display will return to clock showing.

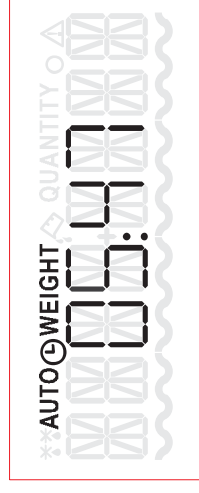

To change the temperature setting, Press the  button the required number of times. 3 level temperature settings are available: HIGH MID LOW

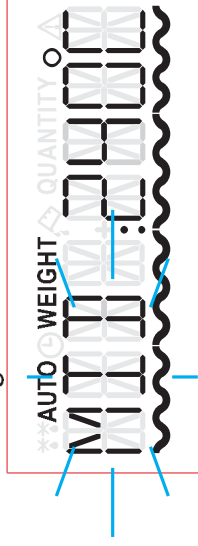

5.Select the time, using the rotary knob The maximum timer setting in this mode is 60 minutes.

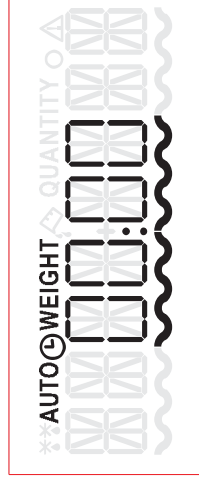

11. Steam function

Firstly fill the water tank ,Otherwise the LCD will be displayed the "WATER TANK MISS" symbol, the display will be running to show these symbol .you must do it otherwise you did not do anything about the steam cooking.



Regarding all the steam cooking , if the water line is lower, the LCD will display the "FILL WATER" remindful symbol. the oven also do not work ,or pause the steam operation.




press the  button once. The default temperature setting is High.





To change the temperature setting, Press the  button the required number of times. 3 level temperature settings are available: HIGH MID LOW




When countdown finished ,the "DONE"symbol will appear on the display going with the alarm sound.

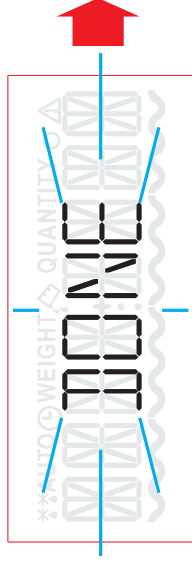

Press the  button the countdown will start ,and the oven will start steam cooking for the selected time

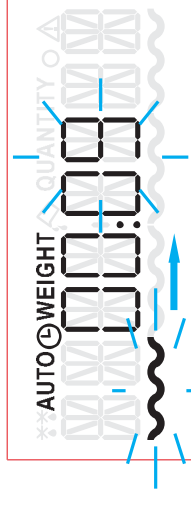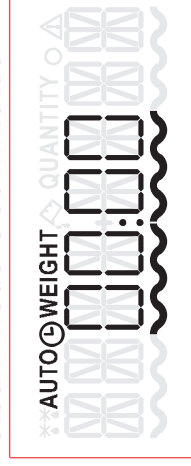

Later ,the display will return to clock showing.

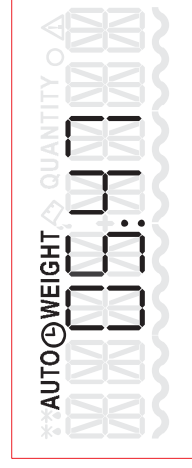

12.AUTO COOK

1. Press the auto cook  button and the chriscross-row will

run on the display.



2. Select the Auto cooking type, using the rotary knob.  The items of the auto cooking programme will be shown on the display.



3. Press the  button to finish the food selection. Meanwhile the " PLEASE SELECT FOOD WEIGHT" symbol will appear on the display .




1

4. Using the rotary knob  to select the weight of the food.



1

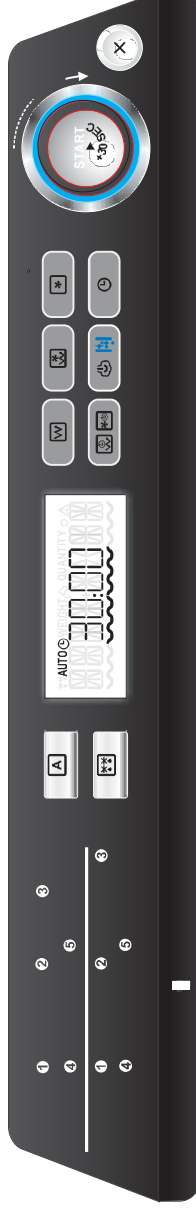


6. When countdown finished ,the "DONE"symbol will appear on the display going with the alarm sound.



7. Later ,the display will return to clock showing.

AUTO COOK						
CHICKEN	Weight	Total Time	Mode	PIZZA	Weight	Total Time
	500g	33'	Conv+Steam		200g	15'
	750g	34'	Conv+Steam		300g	16'
	1000g	39'	Conv+Steam		400g	17'
	1250g	43'	Conv+Steam		500g	18'
	Weight	Total Time	Mode	RED MEAT	Weight	Total Time
	1500g	48'	Conv+Steam		900~1000g	41'
	2000g	53'	Conv+Steam		1200~1300g	47'
	Weight	Total Time	Mode		1400~1500g	53'
	200~250g	8'	Micro+Steam		Weight	Total Time
VEGETABLE	300~350g	8'	Micro+Steam	FISH	300g	9' 30"
	400~450g	10'	Micro+Steam		600g	13' 30"
	500~550g	12'	Micro+Steam		900g	17' 30"
	600~650g	14'	Micro+Steam			
	700~750g	16'	Micro+Steam			

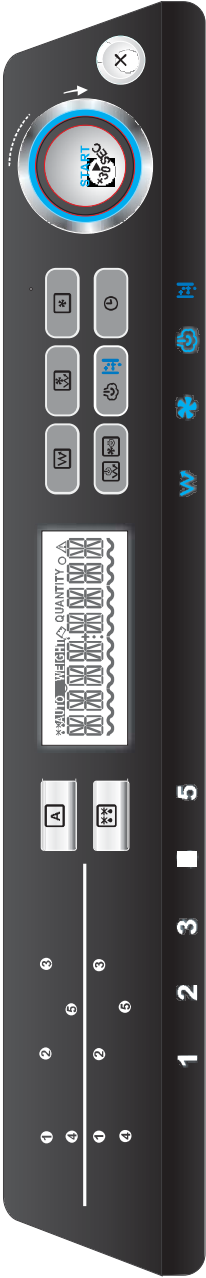

13. Auto defrost function


1. Press the auto defrost  button the "PLEASE SELECT MENU THEN PRESS START" symbol will appear on the display . and the christcross-row will run on the display.



2. Select the Auto defrosting type, using the rotary knob.  The items of the auto cooking programme will be shown on the display.




3. Press the  button to finish the food selection. Meanwhile the "PLEASE SELECT FOOD WEIGHT" symbol will appear on the display .

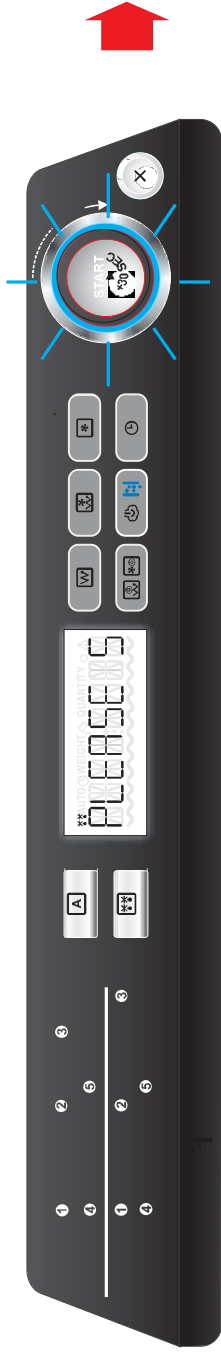

4. Using the rotary knob  to select the weight of the food.




5. Press the  button the countdown will start , and the oven will start cooking

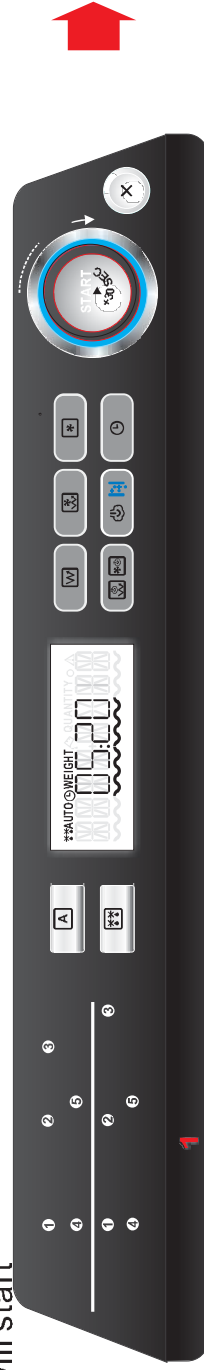


6. Halfway through the process, the display will show PAUSE , symbol 1 on the panel and LED lamp around the knob will flash and the oven will beep and pause to allow you to turn the food for perfectly even defrosting.



8. When countdown finished ,the “DONE” symbol will appear on the display going with the alarm sound.

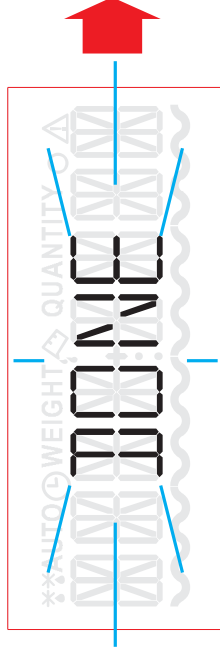

9. Later ,the display will return to clock showing.

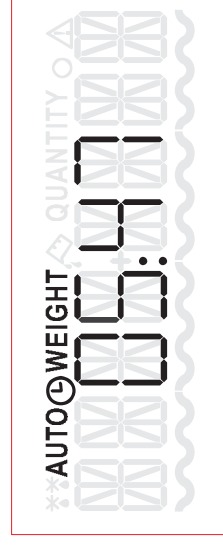

Regarding to all the auto defrost programme, the way same to this . weight and the cooking time please check up in detail in the next page .

AUTO DEFROST ITEM

POULTRY	RED MEAT			FISH					
	weight	total timer	pause timer	weight	total timer	pause timer	weight	total timer	pause timer
	200g	5'20"	3'50"	200g	5'20"	3'40"	200g	5'20"	3'40"
	300g	8'	5'45"	300g	8'	5'30	300g	8'	5'30
	400g	10'40"	7'40"	400g	10'40"	7'20"	400g	10'40"	7'20"
	500g	13'20"	9'35"	500g	13'20"	9'10"	500g	13'20"	9'10"
	600g	16'	11'30"	600g	16'	11'	600g	16'	11'
	700g	18'40"	13'25"	700g	18'40"	12'50"	700g	18'40"	12'50"
	800g	21'20"	15'20"	800g	21'20"	14'40"	800g	21'20"	14'40"
	900g	24'	17'15"	900g	24'	16'30"	900g	24'	16'30"
	1000g	26'40"	19'10"	1000g	26'40"	18'20"	1000g	26'40"	18'20"
	1100g	29'20"	21'05"	1100g	29'20"	20'10"	1100g	29'20"	20'10"
	1200g	32'	23'	1200g	32'	22'	1200g	32'	22'
	1300g	34'40"	24'55"	1300g	34'40"	23'50"	1300g	34'40"	23'50"
	1400g	37'20"	26'50"	1400g	37'20"	25'40"	1400g	37'20"	25'40"
	1500g	40'	28'45"	1500g	40'	27'30"	1500g	40'	27'30"
	1600g	42'40"	30'40"	1600g	42'40"	29'20"	1600g	42'40"	29'20"
	1700g	45'20"	32'35"	1700g	45'20"	31'10"	1700g	45'20"	31'10"
	1800g	48'	34'30"	1800g	48'	33'	1800g	48'	33'
	1900g	50'40"	36'25"	1900g	50'40"	34'50"	1900g	50'40"	34'50"
2000g	53'20"	38'20"	2000g	53'20"	36'40"	2000g	53'20"	36'40"	
BREAD	DINNER PLATE								
	weight	total timer	pause timer	weight	total timer	pause timer	weight	total timer	pause timer
	125g	2'30"	2'	200g	3'	/			
	250g	5'	4'	300g	4'	/			
	375g	7'30"	6'	400g	5'	/			
	500g	10'	8'						
	625g	12'30'	10'						
	750g	15'	12'						
875g	17'30'	14'							
1000g	20'	16'							

14. Activating the Child Safety

Your oven is equipped with a control locking system, which prevents its being started unintentionally or by unsupervised children.

To lock: Keep the  button

pressed for 3 seconds The oven will beep to indicate that the controls are locked. The "LOCK" safety symbol will appear on the display. The buttons are locked. Any attempt at starting will cause the oven to beep.



To unlock:



Keep the  button pressed for 3 seconds.

The oven will beep to indicate that the controls are unlocked.


The symbol will disappear from the display.

This function is only available when the oven is stopped.

After an interruption of supply, the Child Safety will be unlocked.

15. sleeping function

At the end of cooking or if you stop the current cooking, the display will show the clock time. if you did not do anything more than 5 minutes, the oven will To be in the state of sleep, and nothing appear on the display.

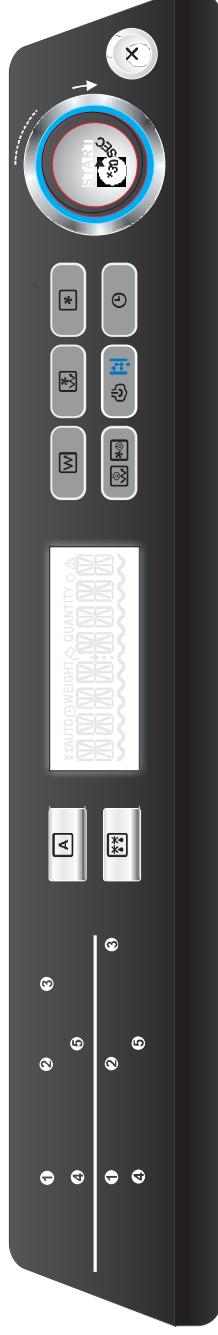

Wake up the oven by pressing any keys the oven will be back to the state of start.



16. DESCALING

Descaling removes lime scale incrustations from all the surface and hole through which water passes .
Thereby ensuring that the valves ,heating units and other important components work properly.

Only descale the machine using the descaling product to provided with it in 25 g .sachets.
Periodical descaling protects the machine from expensive repair work, the lime scale cleaning must
carried out approx.2months ,when there is a reduction in the water capacity .

Start up the descaling procedure :

1.Keep the  button pressed for 3 seconds, the  symbol will be lightened.



2.Open the oven ,take the utensil onto the center of the turntable glass , the capacity is about 1000cc. Then fill the
water at full indicated line to the water tank ,lastly close the door, press the  button ,the oven will start descaling .




3.Halfway through the process, about 5 mins later , the display will show "PLEASE ADD DESCALING POWER " symbol
on the display and LED lamp around the knob will flash , the oven will beep , And the christcross-row will run on the display.



4.Please open the door , take out the water tank and pour the descaling power into it ,and the water is enough ,
no need to add any more .Never use vinegar as this could damage the appliance.And the solution is necessary be
dissolved entirely.Close the door ,then press the  button ,the oven will start continually .

3.Halfway through the process, about the 15 mins later , the display will show PAUSE ,
symbol on the panel and LED lamp around the knob will flash , the oven will beep

NOTE! Open the door and use the fabric to clean the cavity and door frame .it is necessary to do this
otherwise the cavity will be rust due to the acid solution .

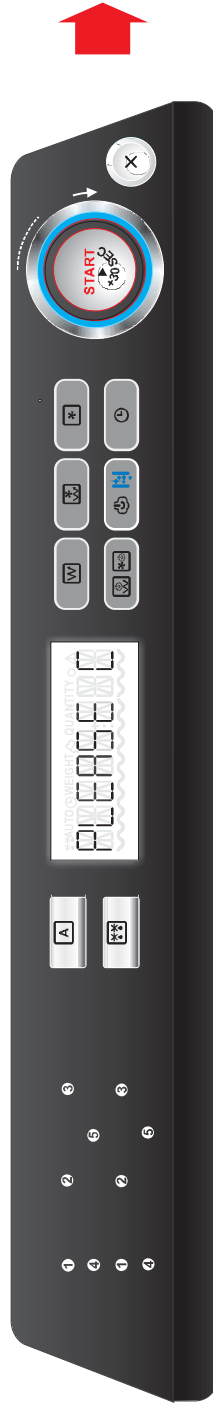


9. When the cavity is polished , press the  button once ,and the descaling process is finish .

STOP/CANCEL



10. Later ,the display will return to clock showing.

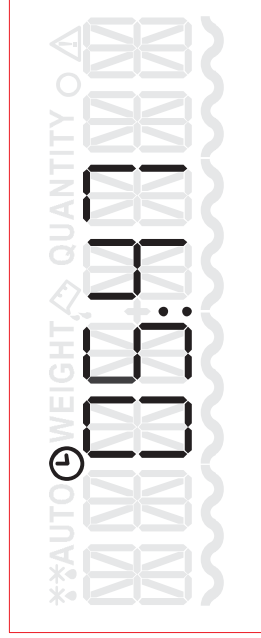

NOTE: If the descaling cycle is interrupted by switching off the oven , you must restart the descaling cycle.

17.Drying function

When using solo steam function or steamµ wave function for period of time ,there would be a lot of water on the internal surface. It will cause uncleanness and unhealthiness if the water remain in the cavity for a long time, this oven designed a special function to dry the internal surface .

- 1.Press the  button for three seconds, also the  symbol will be displayed on the control panel . It is suggest to use the dry fabric to polish the all round sides of the lining cavity and this action may make more efficient and helpful.



- 2.Press the  button the countdown will start , and the oven will start drying function.



When countdown finished ,the “DONE”symbol will appear on the display going with the alarm sound.

Later ,the display will return to clock showing.

