


### 14.3.4 V2 Computer (Screen and Keyboard)



### 14.3.5 V2 MIL Ports



### 14.3.6 V2 Power and Data Cables

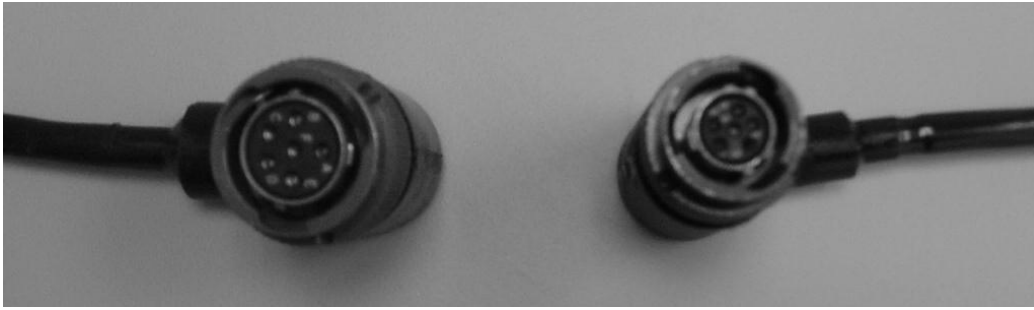

Left to Right -- Power Cable, Data Cable

## 15. Index

### A

<b>About this Manual</b> .....	2-3
<b>A-Kit</b> .....	1-1
FMTV – Vehicle Interior .....	14-1
FMTV Transceiver Mount .....	14-4
HEMTT – Vehicle Interior .....	14-2
HEMTT Transceiver Mount .....	14-4
HET – Vehicle Interior .....	14-2
HET Transceiver Mount .....	14-5
HMMWV – Vehicle Interior .....	14-3
HMMWV Transceiver Mount .....	14-5
PLS – Vehicle Interior .....	14-3
PLS Transceiver Mount .....	14-6
<b>Assignments Tab (TracerLink)</b> .....	6-9
<b>Autotrack (TracerLink)</b> .....	6-11

### B

<b>Batteries</b>	
CS Laptop Spare.....	3-2
<b>B-Kit</b> .....	2-3
<b>Bumper Number</b>	
Change Bumper Number .....	5-15
Release Bumper Number .....	7-16

### C

<b>CADRG (NIMA) Maps</b>	
General Information .....	6-20
Loading CADRG Maps to the Computer’s Hard Drive .....	6-24
NIMA Raster Kit Control .....	6-20
Viewing CADRG Maps Directly from the Hard Drive.....	6-26
<b>Center on Vehicle (TracerLink)</b> .....	6-19
<b>Change Center (TracerLink)</b> .....	6-6
<b>Concept of Operations</b> .....	2-1
<b>Control Station</b> .....	2-3
Create Group .....	7-1
CS Control Box .....	4-1
Delete Group .....	7-10
Demote Control Station .....	7-14
Equipment List .....	3-2
Installation .....	3-4
Picture.....	14-7
Power ON/OFF .....	4-1
Promote Mobile Unit.....	7-13
Release Bumper Number .....	7-16
<b>CSS<sup>See</sup> Control Station</b>	

### D

<b>Debug Log</b> .....	9-1
<b>Display Position Report Time (TracerLink)</b> .....	6-17
<b>Displaying Individual Vehicles (TracerLink)</b> .....	6-15

### F

<b>FMTV</b>	
A-Kit -- Transceiver Mount .....	14-4
A-Kit -- Vehicle Interior .....	14-1

Control Panel .....	14-1
---------------------	------

### G

<b>GPS (Setting the Reporting Rate)</b> .....	5-14
<b>Groups</b>	
Create Group .....	7-1
Delete Group .....	7-10
Hiding an Entire Group (TracerLink).....	6-14
Modify Group .....	7-6
Review Groups.....	5-15
Sending a Group Message .....	5-9
Sending messages while outside of .....	5-10

### H

<b>HEMTT</b>	
A-Kit -- Transceiver Mount.....	14-4
A-Kit -- Vehicle Interior .....	14-2
<b>HET</b>	
A-Kit -- Transceiver Mount.....	14-5
A-Kit -- Vehicle Interior .....	14-2
<b>Hiding Groups (TracerLink)</b> .....	6-14
<b>Hiding Individual Vehicles (TracerLink)</b> .....	6-15
<b>Hiding Position Report Time (TracerLink)</b> .....	6-17
<b>HMMWV</b>	
A-Kit -- Transceiver Mount.....	14-5
A-Kit -- Vehicle Interior .....	14-3

### I

<b>Icon</b>	
MTS Messenger .....	5-1
TracerLink Startup .....	6-2
Vehicle Server .....	6-2
<b>Information Security</b> .....	2-1
<b>Installation</b>	
Control Station .....	3-4
PLGR (Control Station).....	3-5
Transit Case (Opening).....	3-1

### K

<b>Kit Bar (TracerLink)</b> .....	6-9
-----------------------------------	-----

### L

<b>Lat-Long Display (Changing in MTS Messenger)</b> ....	5-12
<b>LEDs (Light Emitting Diodes)</b>	
Transceiver .....	9-3
<b>Loading NIMA CADRG Maps to a Hard Drive</b> .....	6-24

### M

<b>Map Viewer (TracerLink)</b> .....	6-3
<b>Maps</b>	
Manipulating the Map Viewer.....	<i>See</i> TracerLink
NIMA CADRG .....	6-20
Various Formats.....	6-4
<b>Measure Distances on a Map (TracerLink)</b> .....	6-6
<b>Message Routing Architecture</b> .....	2-1
<b>Messaging</b>	

Printing Messages .....	5-14
Reading.....	5-4
Reading Received Messages .....	5-5
Reviewing Sent Messages.....	5-6
Sending.....	5-7
Starting .....	5-1
<b>MT 2010.....</b>	<b>See Transceiver</b>
<b>MT-2011 .....</b>	<b>See Transceiver</b>
<b>MTS Messenger .....</b>	<b>5-1</b>
Error Message .....	8-1
Lat-Long Display .....	5-12
Main MTS Messenger Window .....	5-3
Print Message Log.....	5-14
Reading Messages.....	5-4
Reviewing a Sent Message .....	5-6
Sending Messages .....	5-7
Set GPS Rate .....	5-14
Starting .....	5-1
The Options Menu.....	5-12
<b>MTS Overview .....</b>	<b>2-1</b>
<b>N</b>	
<b>NIMA CADRG Maps .....</b>	<b>6-20</b>
Loading NIMA CADRG Maps to a Hard Drive .....	6-24
Viewing CADRG Maps from a Compact Disk (CD).....	6-20
Viewing CADRG Maps from a Hard Drive .....	6-26
<b>O</b>	
<b>Options</b>	
Clear locally store information .....	5-16
<b>Options Menu.....</b>	<b>5-12</b>
<b>P</b>	
<b>Pan a Map (TracerLink) .....</b>	<b>6-6</b>
<b>PLGR</b>	
CS Installation .....	3-5
<b>PLS</b>	
A-Kit -- Transceiver Mount .....	14-6
A-Kit -- Vehicle Interior .....	14-3
<b>Printer.....</b>	<b>4-2</b>
Picture.....	14-8
<b>Printing a Message Log .....</b>	<b>5-14</b>
<b>R</b>	
<b>Reading Messages .....</b>	<b>5-4</b>
<b>Reset Map (TracerLink).....</b>	<b>6-7</b>
<b>Reviewing a Sent Message.....</b>	<b>5-6</b>
<b>Right Click Pop Up Menu .....</b>	<b>6-5</b>
<b>S</b>	
<b>Safety .....</b>	<b>1-1</b>
Bumping Injuries.....	1-2
Driving Operation .....	1-2
Electric Shock Injuries .....	1-3
Procedures for Treating Victims of Electrical Shock:.....	1-4
Repetitive Stress Injuries .....	1-3
<b>Save TracerLink Configuration .....</b>	<b>6-8</b>
<b>Selection Tab (TracerLink).....</b>	<b>6-9</b>
<b>Sending a Group Message.....</b>	<b>5-9</b>
<b>Sending a Message .....</b>	<b>5-7</b>
<b>Server Vehicle Kit Control Window (TracerLink) ....</b>	<b>6-8</b>

<b>Set GPS Rate.....</b>	<b>5-14</b>
<b>Showing Groups (TracerLink).....</b>	<b>6-14</b>
<b>Spare parts.....</b>	<b>11-1</b>
<b>Starting MTSMessenger .....</b>	<b>5-1</b>
<b>Starting TracerLink.....</b>	<b>6-2</b>
<b>Symbols (TracerLink).....</b>	<b>6-4</b>
<b>System Administrator Tasks .....</b>	<b>9-1</b>
Check and Troubleshooting TracerLink .....	9-4
Check Cables .....	9-4
Check LEDs.....	9-4
Debug Log.....	9-1
Using MTS Messenger Help .....	9-1

**T**

<b>Tools .....</b>	<b>12-1</b>
<b>Trace (TracerLink) .....</b>	<b>6-12</b>
<b>TracerLink Mapping .....</b>	<b>6-1</b>
Assignments Tab.....	6-9
Autotrack.....	6-11
Center on Vehicle .....	6-19
Change Center.....	6-6
Change Units of Measure .....	6-7
Displaying & Hiding Group Position Labels .....	6-18
Displaying & Hiding Vehicle Position Labels .....	6-17
Displaying & Hiding Vehicles.....	6-15
Hiding Groups.....	6-14
Loading NIMA CADRG Maps to a Hard Drive .....	6-24
Map Viewer.....	6-3
Measure Distances .....	6-6
NIMA CADRG Maps.....	6-20
Pan a Map (Move) .....	6-6
Reset Initial View .....	6-7
Right Click Pop Up Menu .....	6-5
Save TracerLink Configuration .....	6-8
SelectionTab.....	6-9
Server Vehicle Kit Control Window .....	6-8
Showing Groups.....	6-14
Starting TracerLink.....	6-2
Symbols.....	6-4
Trace .....	6-12
Viewing CADRG Maps from a Compact Disk (CD).....	6-20
Viewing CADRG Maps from a Hard Drive .....	6-26
Zooming .....	6-6

**Transceiver**

CS Installation.....	3-4
Picture .....	14-7
V2 Installation.....	3-8

<b>Transit Case.....</b>	<b>3-1</b>
Control Station Contents.....	3-2
Opening .....	3-1
V2 Contents.....	3-6
<b>Troubleshooting.....</b>	<b>8-1</b>

**U**

<b>Units of Measure (TracerLink) .....</b>	<b>6-7</b>
--	------------

**V**

<b>V2 - Standard System</b>	
MIL Ports, Picture.....	14-9
Picture .....	14-9
Power and Data Cables, Picture.....	14-10
<b>V2 - Standard System</b>	
Control Box.....	4-4

---

Equipment List .....	3-6
General Information .....	2-3
Installation .....	3-8
Power ON/OFF .....	4-4
<b>Viewing CADRG Maps from a Compact Disk (CD)</b>	<b>6-20</b>
<b>Viewing CADRG Maps from a Hard Drive.....</b>	<b>6-26</b>

**W**

<b>Warranty.....</b>	<b>10-1</b>
----------------------	-------------

**Z**

<b>Zooming .....</b>	<b>6-6</b>
----------------------	------------