

Smart VP by Purple

Professional Installation Training Manual

Drafted & Updated by:



| Rev No: | Revision Date | Prepared | Approval |
|---------|---------------|--------------|----------|
| A1 | 2/14/2013 | Josh Kramer | |
| A2 | 3/27/2015 | Antony Galdi | |

Last Updated Monday, April 01, 2013 at 5:21:39 PM



Table of Contents

| Requirements for Installation | 3 |
|---|---|
| Preferred Placement of the SmartVP Unit | 3 |
| HDMI Cable Connection | 3 |
| Power Connections for the SmartVP | 3 |
| Pairing The Remote Controller | 4 |
| (Optional) Ethernet Cable Connection | 4 |
| (Optional) Sonic Alert Wireless Network Configuration | 4 |
| (Optional) Wired flasher device installation | 5 |
| (Optional) USB Accessory Devices | 5 |
| Mounting and Removing the SmartVP from TelyHD device | 5 |
| Device Compliance Notice | 6 |



Requirements for Installation

In order to complete the installation, you must have the following install kit (boxed with SmartVP).

- SmartVP unit (already assembled with TelyHD device for mounting and unmounting instructions see appendix A)
- HDMI Cable
- Ethernet Cable
- Remote Control (+2x AAA batteries)
- Power Adapters (x2)
- Additional Information cards or notices for the user

Preferred Placement of the SmartVP Unit

The ideal installation location for the SmartVP unit is on top of the television set, centered across it's width.

- 1. The base of the combined SmartVP unit has an unfolding panel. Rotate this panel open to approximately 90-degrees from the base panel. This creates a bracket to securely place the SmartVP atop the television set.
- 2. Adjust angle of lower base panel to offer the optimal balance of the unit atop the television.
- 3. Ensure the SmartVP sits centered (approximately) on the television set.

HDMI Cable Connection

Use the provided HDMI cable in the installation kit or use an existing/available HDMI connection to an available television input.

- 1. Connect the HDMI cable to the back of the SmartVP in the HDMI port.
- 2. Connect the other end of the cable to an available (free) HDMI input on the television.

Power Connections for the SmartVP

Use the provided two power adapters to power both the SmartVP and the TelyHD devices. Note the order in which the devices are connected to power.

- 1. Connect both power adapters to available power outlets or use an optional power strip.
- 2. Connect the DC plug of one power outlet to the SmatVP first. The power outlet is located next to the "Flasher Acc" port and is labeled "Power".
- 3. Connect the DC plug of the second power outlet to the SmatVP first. The power outlet is located next to the unlabeled USB data cable port. The power port is labeled "5V DC".




Pairing The Remote Controller

The remote controller should arrive pre-paired to the specific unit. If a case arises where the remote controller is not pre-paired to the device, pairing must be completed for the user. Note the SmartVP must be turned ON to pair the remote controller.

Press and hold 1 and 9 buttons for 5 seconds on PURPLE remote. After 5 seconds you
can observe the red color LED will flash at "POWER BUTTON" for three times. Please see
the below picture.

Pre-Production Example Photo Only

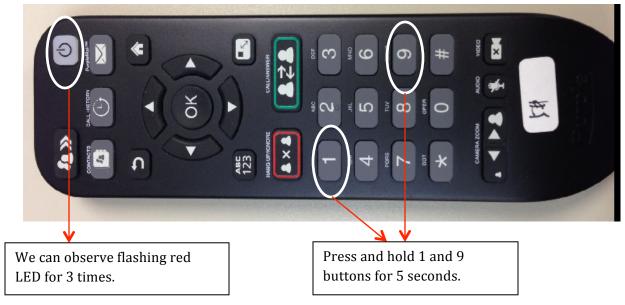

2. Once remote is successfully paired the power button will flash 3x.

(Optional) Ethernet Cable Connection

Use the provided Ethernet cable in the installation kit or use an existing/available Ethernet connection to the user's Local Area Network (LAN). **Note that the user may opt to use their WiFi network to connect the SmartVP** – if so, skip this step.

- 1. Connect the Ethernet cable to the back of the SmartVP in the RJ-45 Ethernet port.
- 2. Connect the other end of the cable to an available (free) Ethernet input either located in a wall-outlet, or directly to the router.

(Optional) Sonic Alert Wireless Network Configuration

In order to communicate with the user's existing SonicAlert wireless ringer network in the home, the SmartVP must be configured to use those network settings the Sonic Alert base station (DB-100) is configured to use.



- 1. With the user's assistance, locate the base station (DB-100) unit. It will be plugged into a power outlet.
- 2. Remove the base station and turn over, the back of the base station exposes the network DIP switch settings.
- 3. Using a coin, rotate the top access panel on the SmartVP clockwise approx. 15 degrees.
- 4. Remove the coin access panel.
- 5. Using a pen or fine pointed device, ensure that the DIP switch positions are identical to those on the base unit (DB-100).
- 6. Re-close the access panel.

(Optional) Wired flasher device installation

Legacy or other wired flasher or vibrating alert devices may be desired by the user. One such device that connects to a POTS telephone network may be optionally installed to the SmartVP. The SmartVP will mimic a POTS telephone ring anytime a call is received to activate these devices.

1. With the user-provided device, plug the RJ-11 male connector into the female RJ-11 port on the rear of the SmartVP labeled "Flasher Acc".

(Optional) USB Accessory Devices

Additional flashers, vibrators, ringers, may optionally be installed using the two USB "Accessory" ports on the rear of the SmartVP.

Mounting and Removing the SmartVP from TelyHD device

The SmartVP arrives pre-mounted to the TelyHD device in the installation kit however there may circumstances where the device must be disconnected or re-attached. The instructions below detail attaching a SmartVP. To remove a SmartVP, reverse the order of these instructions.

- 1. Viewing the TelyHD from the rear, there are four screws securing the enclosure remove the two outer most screws. (this will require a long Torx T-10 bit)
- 2. Remove the screws the original TelyHD screws will not be reused.
- 3. Slide the SmartVP from behind on to the TelyHD. Note, the two guide pins insert into the two outermost screw holes to help align the SmartVP to TelyHD device.
- 4. With the device firmly against the TelyHD, use the two SmartVP attachment screws (long Torx T-10) into the screw holes on the back of the SmartVP and screw firmly into the TelyHD unit.
- 5. Connect the short USB cable to the single USB-A port on the back of the TelyHD unit.

NOTE: Original TelyHD screws cannot be used to mount the SmartVP to the Tely HD.



Device Compliance Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Purple Communications, Inc, may void the user's authority to operate the equipment.