

APPENDIX I

: USER'S MANUAL



TFT 10.4" SCREEN

OVERHEAD COMBO

OWNER'S MANUAL



CAUTION

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CONTENTS

■ CAUTION	4	■ FUNCTION OF DVD	19
■ NAME AND FUNCTION OF EACH PART	6	POWER	19
■ HOW TO WATCH MONITOR	9	OPEN/CLOSE	19
- EXTRA PICTURE	9	PLAY OR SELECTION	19
- POWER AND MODE SELECT	9	STOP	19
■ PICTURE CONTROL	10	ARROWS	20
- CONTRAST/BRIGHT/COLOR/TINT	10	VOL+/VOL-	20
■ Extra FUNCTION	11	MUTE	20
- FM TX	11	MENU	20
- SYSTEM	12	DISPLAY	21
- RESET	12	NUMBER BUTTONS	21
■ PLAYING TO DISC	13	SUBTITLE	22
- PLAYING TO YOUR DVD PLAYER	13	TITLE	22
■ DVD SETUP	14	SLOW	22
- SETUP MENU	14	FAST REVERSE SEARCHING	23
- GENERAL SETUP	15	FAST FORWARD SEARCHING	23
- TV DISPLAY	15	PREV	24
- OSD LANG	15	NEXT	24
- CAPTIONS	15	STEP	24
- SCR SAVER	15	REPEAT A-B	24
- SPEAKER SETUP	16	REPEAT	25
- DOWNMIX	16	SHUFFLE	25
- AUDIO SETUP	16	PBC	26
- DUAL MONO	16	ZOOM	26
- DYNAMIC	16	GOTO	26
- PREFERENCES	17	■ CONNECTING EXTERNAL DEVICES	27
- TV TYPE	17	■ INSTALLATION	28
- AUDIO	17	■ CONNECTION DIAGRAM	29
- SUBTITLE	17	■ DISC	30
- DISC MENU	17	■ TROUBLE SHOOTING	31
- PARENTAL	17	■ SPECIFICATION	32
- PASSWORD	18		
- DEFAULTS	18		
- SMART NAVI	18		
- SMART NAVI	18		

CAUTION

Please read and observe all warnings and instructions in this owner's manual and those marked on the unit. Retain this booklet for future reference. These are two kinds of alarm signs as follows.



WARNING

 
The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to person.




CAUTION

The Exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.


⚠ WARNING



 
The driver should never operate these products while the vehicle is in motion!



 
Be careful not to overload your cigarette lighter plug by adding more than one device at a time.



 
Installation of all TV monitors must be out of the driver's field of vision!



 
Do not try and service these products yourself, seek only a qualified service center or factory service center.



 
Be careful not to drop or apply undue pressure to the front panel of your video monitor. If the screen cracks due to misuse your warranty will be void!



 
Make sure to keep products away from heater ducts or vents and out of direct sunlight. Do not mount forward of the drivers shoulders.



 Use extra caution with any liquids in your car if you or your child spills any liquid on these products, pull your vehicle to the roadside and turn the key off to disconnect or wipe the products with a towel. Do not operate the equipment until all liquids have either evaporated or you have had the monitor inspected at a severe center by a qualified technician. Severe harm or death can occur!



 Use only a damp cloth to clean the screen and use only purified water on the cloth, wring out all excess water prior to wiping the screen. Do not use any cleaners or chemicals to clean the screen. In most cases a dry cloth will do!



Do not mount the product where it will obstruct the deployment of the airbag or in an area where it would affect the vehicular control, also be careful to mount product where they can become hazardous during sudden stops or in the event of an accident.

⚠ CAUTION



Quality installations are best performed by qualified and certified installers.



Watching monitor for an extended period of time without the engine running may deplete the vehicle's battery charge.




This product is designed for operation with a 12 Volt DC, negative ground vehicle, it is not suitable for operation under the other conditions or voltage.

👉 Check Point

1. The operating temperature of this product is limited to $-20^{\circ}\text{C} \sim 80^{\circ}\text{C}$. Your vehicle can reach temperatures up to 100 degrees centigrade in the summertime.
2. From time to time when your vehicle extremely hot or cold you must allow time for your air conditioner or heater to cool or heat the vehicle to operating temperatures to return to nomal operating ranges. Your monitor will return to its nomal functions when these opearting ranges are achieved.
3. Your optimum picture quality is achieved when you are directly in front of the monitor ($+/-30$ degrees).
4. Do not open covers and repair yourself, refer servicing to qualified personnel.
5. DVD Players use an invisible laser beam, which can cause hazardous radiation exposure for a long time of directed.
6. Do not cut the car power supply off while a disc is played, because it can cause damage in the DVD Player.

NAME AND FUNCTION OF EACH PART


UNIT

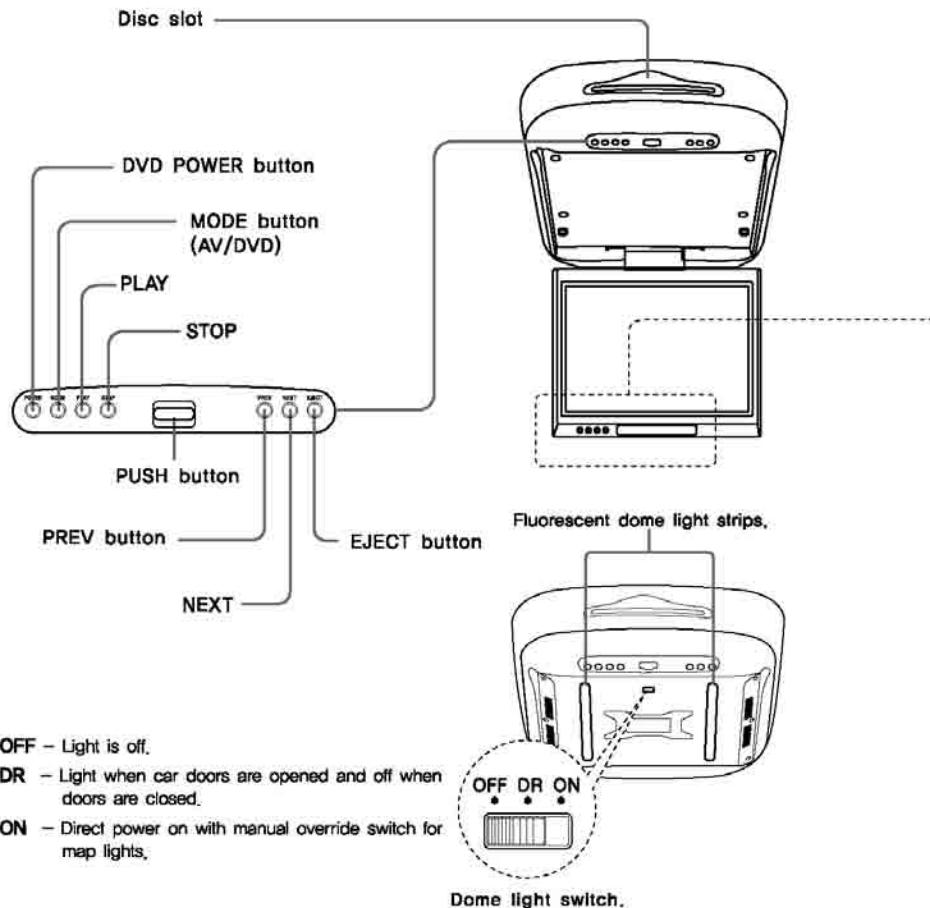


OFF – Light is off.

DR – Light when car doors are opened and off when doors are closed.

ON – Direct power on with manual override switch for map lights.

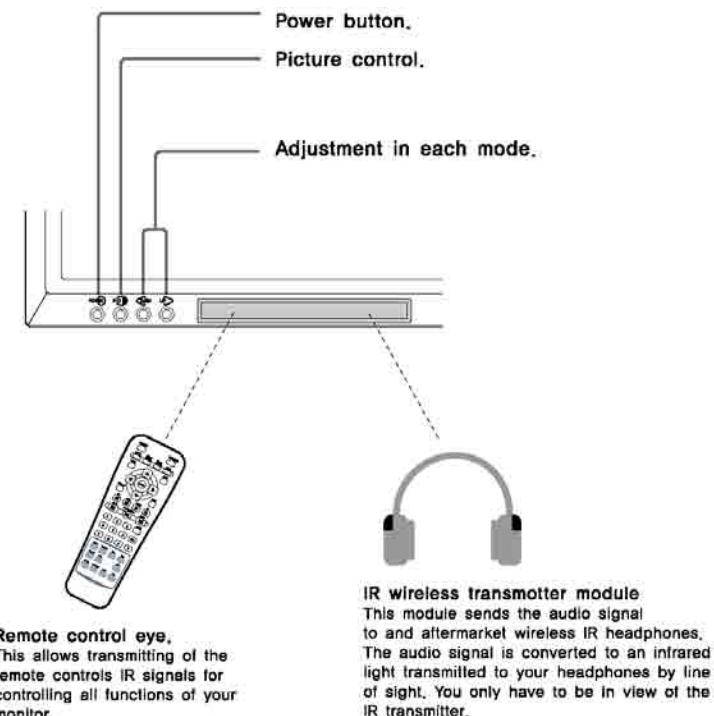


REMOTE CONTROLLER

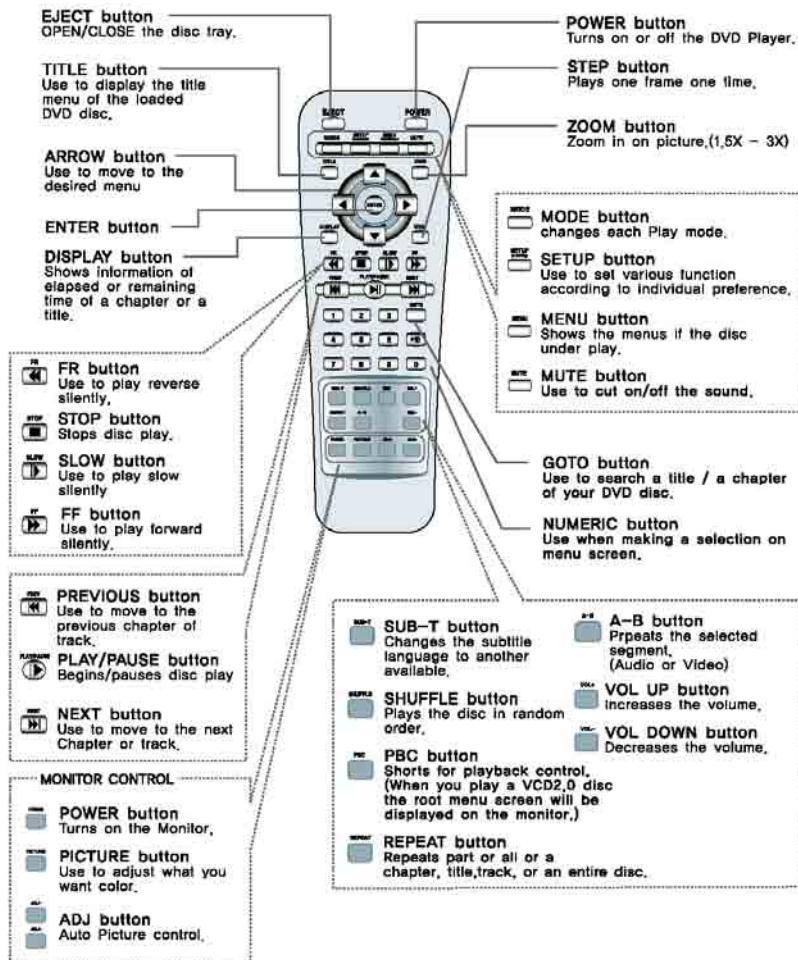

HOW TO WATCH MONITOR

EXTRA PICTURE


Push the open button, located at the front of your screen and lower the monitor to the desired level and angle of the swivel, mounted monitor.

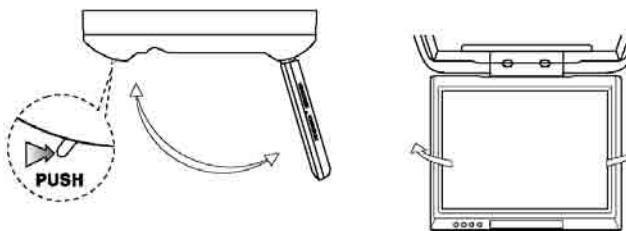

* When closing the displayed monitor on the ceiling mount, it will automatically be turned off. When opening the monitor again, it will automatically be turned on.

POWER AND MODE SELECT

1. Press the **POWER** button on the remote controller / the unit.
Press the **POWER** button once to turn the power on/ off.

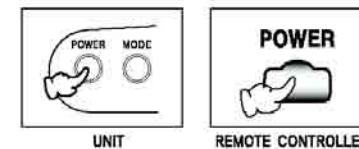

2. Press the **MODE** button on the remote controller / the unit to achieve the desired **AV** Mode.
whenever you press the Mode button, the condition is to be changed as the picture.



PICTURE CONTROL

■ CONTRAST / BRIGHT / COLOR / TINT SELECTION

Use to achieve the desired settings


1. Press PIC button to bring-up the on screen picture control menu.



2. Select the desired menu by pressing the select UP/DOWN buttons to move the cyan colored cursor window up or down and highlight the desired function to change Contrast, Bright, Color, Tint etc.



3. Adjust the current settings with the ADJ+ or ADJ- on the remote controller / UP or DOWN on the unit to achieve the desired settings.

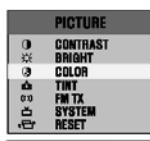

EXTRA FUNCTION

■ LISTENING TO YOUR MONITOR OVER YOUR CAR RADIO

(Remember to extend your car antenna)

1. Press PIC button to bring-up the on screen Picture control menu.



2. Select the desired menu by pressing the select UP/DOWN buttons to move the cyan colored cursor window up or down and highlight the FM TX mode.



3. Adjust the Picture condition with the ADJ+ or ADJ- on the remote controller / UP or DOWN on the unit to achieve the desired settings (88.3~90.1 Mhz)



* You Can listen the sound over your headphone only, when the setting is Off. (IR wireless transmitter module sends the audio signal to and aftermarket wireless IR headphones)

4. Select an open frequency on your car radio between.



■ OPERATING SYSTEM FUNCTION CONTROL

1. Press PIC button to bring-up the on screen Picture control menu.



2. Select the desired menu by pressing the select UP/DOWN buttons to move the cyan colored cursor window up or down and highlight the SYSTEM mode.




3. Select the NTSC or PAL, with the ADJ+ or ADJ- on the remote controller / UP or DOWN on the unit to achieve the desired settings NTSC or PAL.



■ FACTORY RESET CONTROL FUNCTION

1. Press PIC button to bring-up the on screen Picture control menu.

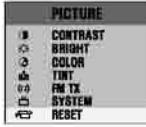


2. Select the desired menu by pressing the select UP/DOWN buttons to move the cyan colored cursor window up or down and highlight the RESET mode.

3. Select the RESET with the ADJ+ or ADJ- on the remote controller / UP or DOWN on the unit to achieve the desired factory default setting.

PLAYING TO DISC

■ PLAYING TO YOUR DVD PLAYER

1. Press the POWER button on the monitor / the DVD player.

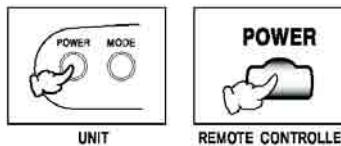

2. Press the MODE button on the remote controller / the unit to achieve the desired DVD Mode.




Whenever you press the Mode button, the condition is to be changed as the picture.

3. Load a disc in the disc loading slot with label side upward. (see the picture)

Caution : Please check the Disc plate direction.

Insert a disc in the disc loading slot and it will be played automatically.

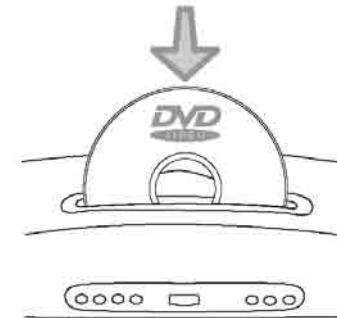

DVD SETUP

■ SETUP MENU – MAIN PAGE




An invalid button press.

When appears on screen, it indicates an invalid button press.

Caution : You can easily modify setup information on the setup menu.
You should remove the disc from your DVD Player firstly and then press SETUP button.

When the SETUP button is pressed, Monitor screen shows the setup menu as shown below.

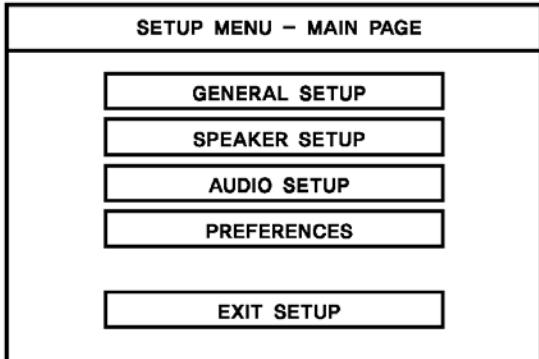

If the user press setup button, DVD Player will be paused and shows the setup menu to select according to individual preference.

■ GENERAL SETUP

TV DISPLAY

You can select a TV screen aspect ratio.

FUNCTION



NORMAL / PS 4:3 PAN SCAN

Choose this setting if you want the movie to fill the entire screen of your TV (This might mean that the left and right edges won't be seen)



NORMAL / LB 4:3 LETTERBO

Choose this setting if you want the see movies in their original aspect ratio. The movie might appear with black bars at top and bottom of the screen.



WIDE 16:9 WIDE SCREEN

Choose this setting if your DVD Player is connected to a wide screen TV,

SETUP

NORMAL / PS

NORMAL / LB

WIDE

(caution : This option is available only when the disc has the function)

OSD LANG

FUNCTION

Use this option to set the on-screen display language(OSD).

SETUP

ENGLISH

CAPTIONS

FUNCTION

Use this option to set the display captions ON / OFF.

SETUP

ON, OFF

SCR SAVER

FUNCTION

The screen saver is useful to prevent you display from becoming damaged. The screen saver picture appears when you leave the DVD player in stop mode about two minutes.

SETUP

ON, OFF

■ SPEAKER SETUP

DOWNMIX

FUNCTION

Use this function to choose setting to play with several audio channel.

SETUP

LT / RT /
STEREO

■ AUDIO SETUP

DUAL MONO

FUNCTION

Use to select audio mode.

SETUP

STEREO / L-MONO /
R-MONO / MIX-MONO

DYNAMIC

FUNCTION

Please Use this function as initial setting position.(OFF)

SETUP

OFF TO FULL

■ PREFERENCES

TV TYPE

FUNCTION

Choose a proper setting according to the color system of the TV type MULTI SYSTEM, NTSC, PAL.

SETUP

MULTI / NTSC / PAL

AUDIO

FUNCTION

Use this Function to select the soundtrack language
(This option is available only when the disc is recorded)

SETUP

ENGLISH, FRENCH,
SPANISH, CHINESE,
JAPANESE

SUBTITLE

FUNCTION

Use to select the subtitle language on the screen.

SETUP

ENGLISH, FRENCH,
SPANISH, CHINESE,
JAPANESE, OFF

DISC MENU

FUNCTION

Use the disc menu option to select the menu language on the screen.
(If the disc you are playing has that language available)

SETUP

ENGLISH, FRENCH,
SPANISH, CHINESE,
JAPANESE

PARENTAL

FUNCTION

The parental feature is a rating limit system, like movie ratings. It works with DVD discs that have been assigned a rating. This option lets you determine how your player will react to discs that contain movies that are rated
(in the U.S.A) You decide which ratings require a password and which ones don't.
(The default password code is 1234)

SETUP

1 G
2
3 PG
4 PG - 13
5
6 PG - R
7 NC - 17
8 ADULT
NO _ PARENTAL

PASSWORD

FUNCTION

Use this menu option to change the saved password to a new one. If you want to change the password, then press the factory set password 0000 and press you want No.

SETUP

CHANGE → OLD PASSWORD
NEW PASSWORD
CONFIRM PWD

DEFAULTS

FUNCTION

Use this option to reset all options to the factory defaults.

SETUP

RESET

SMART NAVI

SMART NAVI

FUNCTION

This SMART NAVI feature shows the information about the MP3 disc under play.

SETUP

USER SETUP

FUNCTION OF DVD

POWER

POWER

This DVD player work from the last mode when turns this set on.

EJECT

OPEN / CLOSE

Each press of the  button changes the play mode as side status. When you insert your DVD disc into DVD player, the DVD disc will be played after showing "DISC LOADING" on the screen. Most of DVD disc is played automatically.

Display

OPEN
CLOSE

PLAY/PAUSE

PLAY OR SELECTION

Use this button to select a particular scene or plays disc. Most of disc have a function of auto play. And play automatically.

Display
PAUSE
PLAY

STOP

STOP

DVD player play previous scene when you press the  button. The player will be stopped when you press this button again.

Press button
1 time
Display
PRESS PLAY TO CONTINUE

AUDIO MP3

Stop disc Play
AUDIO
DVD player play previous scene when you press the  button. The player will be stopped when you press this button again.

Press button
1 time
Display
PRESS PLAY TO CONTINUE
MP3
Press button
1 time
Display
STOP

ARROWS

DVD An invalid button press.



AUDIO **MP3** Button of the folder / track selection.

Selected a folder / track will be played when press select / play button after press stop button.

VOL+ / VOL-

To adjust audio output level of speaker from 0 to 16.
(The volume cannot be adjusted in TV mode or AV mode)

MUTE

Each press of the  button changes the play mode as side status.

Display

MUTE
MUTE OFF

MENU

DVD Menu

The Menu of the DVD disc is a little complicated.
The contents of Menu on the screen is different depends on DVD title.

AUDIO **MP3** An invalid button press.



DISPLAY

DVD Title / Chapter

Each press of the button  on the remote controller changes the play mode as follows.

Current Title / Entire title
TITLE 00/00 CHAPTER 000/000

Current Title / Entire title

→ TITLE 00 / 00 CHAPTER 000 / 000
→ TITLE REMAINING
→ CHAPTER ELAPSED
→ CHAPTER REMAIN
→ OFF

AUDIO

Entire CD / State of track

Each press of the display button display the information of the current CD title on the screen as follows.

SINGLE ELAPSED
↓
SINGLE REMAIN
↓
OFF
↑
TOTAL ELAPSED → TOTAL REMAIN

MP3

Your DVD player will be displayed the counter automatically when you play the MP3 disc.

CHAPTER ELAPSED → CHAPTER REMAIN
↑
OFF
↓

NUMBER BUTTONS

DVD Number buttons

0, 1, 2, ---9 number buttons are used to enter number, e.g.No. of track, DVD chapter No., time data, etc..

AUDIO **MP3** Button of track selection

AUDIO
You can select a track by pressing Number button.

MP3
You can select a track in the folder by pressing Number button.

 **SUBTITLE**

 **SUBTITLE MENU**

 
This item is to select the language for on screen display messages that will be displayed on the TV screen.

(The title menu is different depends on your DVD disc)

 **An invalid button press.**




 **TITLE**

 **TITLE MENU**


Use to display the title menu of the loaded DVD disc.

 (This Function is disc dependent)

 **An invalid button press.**



 **SLOW**

 
 **SLOW**

To play a disc slow forward or slow reverse.

This allows you to search from forward 3 steps to reverse 3 steps.

Each press of the  button changes the play mode as shown side states.

 Display
SF 2X
SF 4X
SF 8X
SR 2X
SR 4X
SR 8X
PLAY

 **An invalid button press.**




 **FAST REVERSE SEARCHING**

  **Fast Reverse Searching**

Each press of the  button changes the play mode as shown side states.

Display
FR 2X
FR 4X
FR 8X
FR 16X
FR 32X
FR 64X
PLAY

 **Fast Reverse Searching**

Each press of the  button changes the play mode as shown side states.

Display
FR 2X
FR 4X
FR 6X
PLAY

MP3


You can't use this function when playing MP3.

 **FAST FORWARD SEARCHING**

  **Fast forward searching**

Each press of the  button changes the play mode as shown side states.

Display
FF 2X
FF 4X
FF 8X
FF 16X
FF 32X
FF 64X
PLAY

 **Fast forward searching**

Each press of the  button changes the play mode as shown side states.

Display
FF 2X
FF 4X
FF 6X
PLAY

 PREV

 PREV

Used to move to the previous chapter from the current chapter.

 PREV

AUDIO
Used to move to the beginning / previous track from the current track when you press this button one / two time.

MP3
Used to move to the previous track.

 NEXT

 
 NEXT

Used to move to the next chapter from the current chapter.

 NEXT

Used to move to the next track from the current track.

 STEP

 STEP

Used this button to play one frame at a time. To do normal speed press play button.

 An invalid button press.



 REPEAT A-B

To repeat the selected segment. It will be repeated the selected segment automatically until cancel.(Except MP3 disc)

 REPEAT

 Repeats the chapter or the title

 Repeats the track or all the title on the disc.

 
Each press of the  button changes the play mode as follow.

Display

```

CHAPTER REPEAT ON
↓
TITLE REPEAT ON
↓
REPEAT OFF

```

AUDIO
Each press of the  button changes the play mode as follow.

Display

```

REP - ONE
↓
REP - ALL
↓
REPEAT OFF

```

MP3 (Use to change the play mode)

Display

```

REP - ONE
↓
FOLDER REP
↓
FOLDER

```

 SHUFFLE


 An invalid button press.

 Random play

AUDIO
Use this button to play the loaded disc in a random order after press stop button.

MP3
You can listen to all the music in a random order.


SHUFFLE ON, RANDOM : Play in random mode,
FOLDER : Play in normal mode.

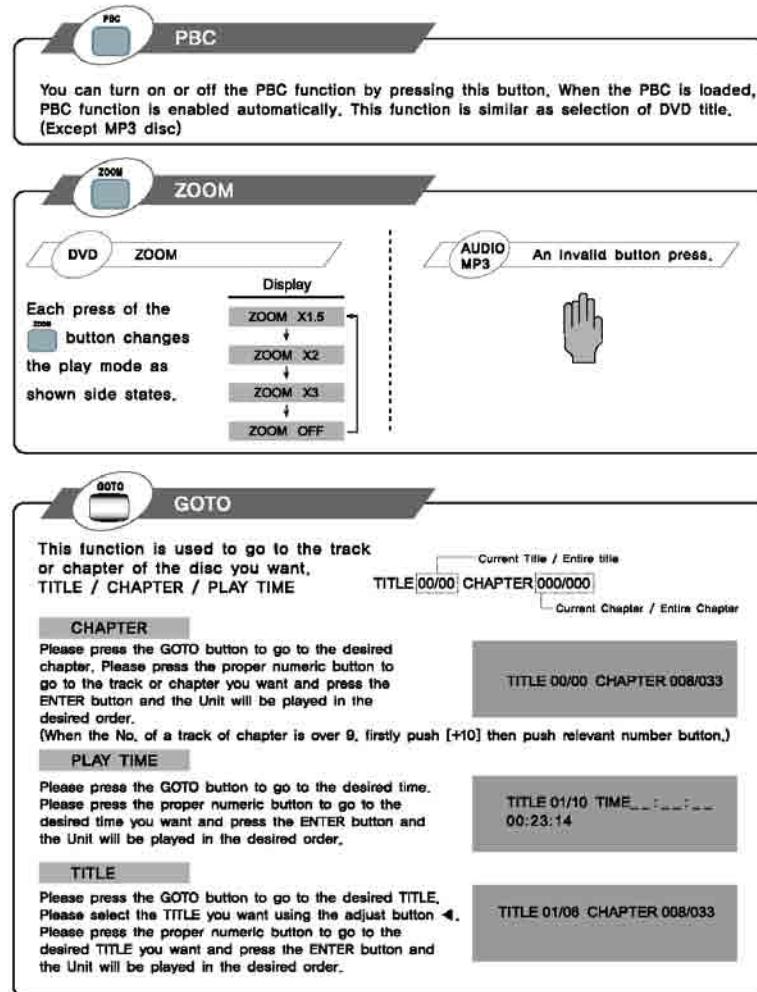

CONNECTING EXTERNAL DEVICES

You can connect several external devices like shown the diagram

1. Connect all devices correctly like shown the diagram, be aware to shut off all power prior connection

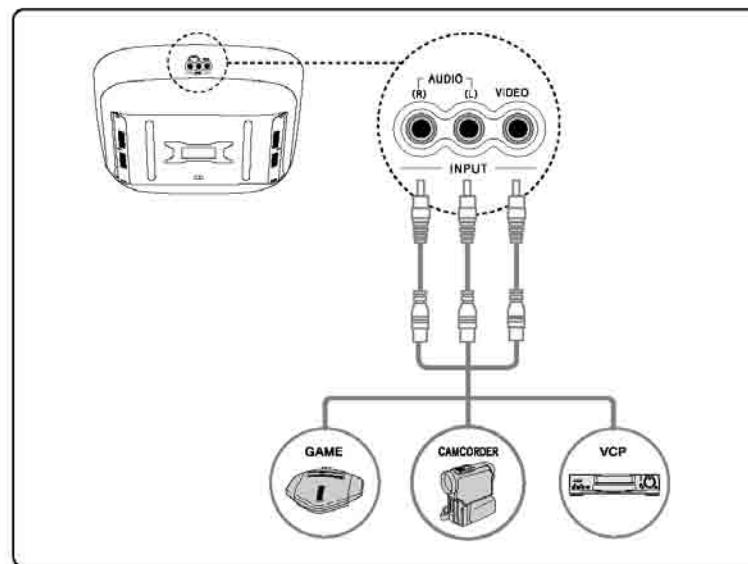

2. **POWER** on the monitor and other devices.


3. Press the **MODE** button on the remote controller / the unit to achieve the desired **AV** mode.




4. Play a external device.

INSTALLATION


1. Unpacking and check.

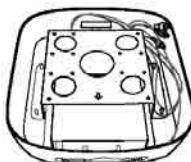


2. Disjoint the iron bracket from the unit like shown the picture. (Take apart the monitor from the ceiling mount bracket with unscrews four screws on the unit body.)

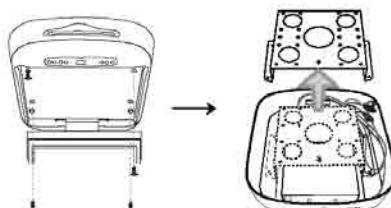

3. Tight the iron plate bracket with all screws on the ceiling.

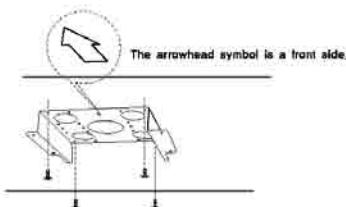


4. Connect all cable according to the condition of the diagram

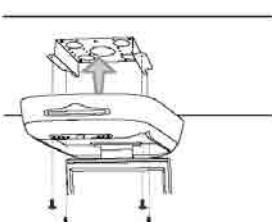

5. Tight the monitor with all screws on the ceiling bracket.

CONNECTION DIAGRAM

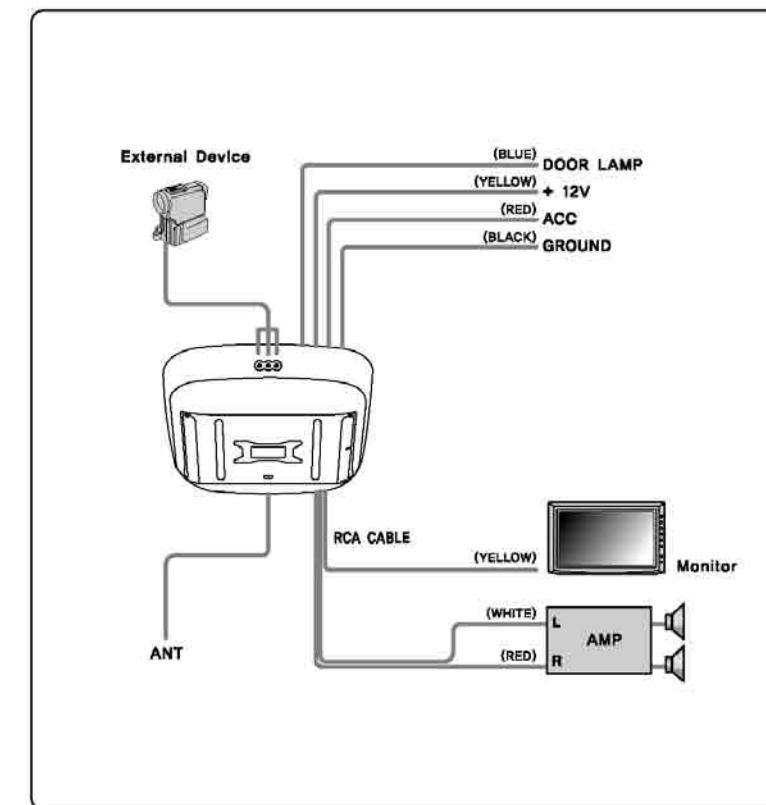

DISC

DVD features

It provides this multi-media disc player high-resolution image with high-quality sound and surround sound effect. The DVD player can play not only DVD discs of various versions, but also S-VCD, VCD, Audio-CD, and MP3. Each disc plays only saved-information and some function cannot use.

Discs that cannot be played

DVD-RW, DVD-RE, CD-ROM, CD-EXTRA discs cannot be played in this unit. And a CD, CD-RW, which was recorded on special software, could not be played also.

Region code

 
Your DVD player is designed and manufactured to region management information that is recorded on a DVD disc. The region number of this DVD Player is 3 and Plays free code also.

Copy protection

This product incorporates Copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by the Macrovision Corporation and other rights owner's Use of this copyright protection technology must be authorized by the Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by macrovision corporation.

How to deal with disc

Don't touch the face carving information.
Don't stick label or glue-based note on disk(Don't use disks with remaining glue or damaged gluey label, it might result in damages to your DVD Player.)
Don't put discs at straight under the sunshine. And park your car under the shade.



Caution

Wipe softly with a wet cloth and then with a dry one.
Before playback, wipe the disc outwards from the center with clean cloth.
Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray.
Don't use scratched disc to avoid damaging your DVD Player.



TROUBLE SHOOTING

TROUBLE	ACTION
No Power	Check the AC power cable was connected properly
No Picture	Make sure that the equipment is connected properly, check the connected Monitor was turned on.
Stopped picture	Check the video cable was connected or TV/Monitor was turned on.
The playback picture is poor	Clean the disc.
No color	The Color system set by this unit does not match with that of TV/Monitor. Please check your System of the unit.
Distorted sound	Adjust the video system by pressing TV system button.(PAL, NTSC, MULTI)
The remote controller doesn't work properly	Remove the obstacles between the remote control unit and remote control sensor. Operate the remote controller in a short distance.
Displayed "DISK ERROR" on the screen	Set the power button to OFF and then back to ON alternatively. Turn off the power, disconnect the power plug and then reconnect it.

Check point

When a disk is brought from a cold environment to a hot one, there be steam on the face of disk or water will appear the pickup lens. It will effect the play.

1. Remove the disc from DVD player.
2. Please turn on the power (unload the disc) to operate it for an hour, vaporize the condensation with the home-grown heat.
3. You can use your DVD Player without any problems.

SPECIFICATIONS

Power	DC 12V
Current Consumption	32W Max
Screen Format	4 : 3
Resolution	800 X 600
Brightness	220 cd/m ²
Video System	NTSC / PAL
A/V Input	1 EA
A/V Output	1 EA
Screen size	10.4 inch
IR Transmitter	Yes
Dome Light	CCFL Type
Remote Control	Yes
Dimensions	(W)295 X (D)317 X (H)79 mm

Note : This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.