

APPENDIX I

: USER'S MANUAL

OWNER'S MANUAL

7" TFT-LCD WIDE SCREEN TV & DVD Video Player

OVERHEAD COMBO



CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Contents

▪ Caution	4
▪ Name and function of each part	6
- UNIT	6
- Remote Controller	8
▪ How to operate the monitor	9
- Releasing the monitor	9
- POWER and MODE select	9
▪ How to watching TV	10
- How to select channels automatically	10
- How to select channels by manual	10
▪ Audio Volume Control	11
How to control the VOLUME	11
▪ Picture control	12
- Contrast, Bright, Color or Tint selections	12
- Screen mode control	13
▪ Extra functions	13
- FM transmitter control function	13
▪ Playing a disc	15
- Playing your DVD player	15
▪ DVD Setup	16
- SETUP MENU	16
- GENERAL SETUP	17
TV DISPLAY	17
ANGLE MARK	17
OSD LANG	17
CAPTIONS	18
SCREEN SAVER	18
LAST MEMORY	18
- AUDIO SETUP	18
DOLBY DIGITAL SETUP	18
EQUALIZER	19
- VIDEO QUALITY SETUP	20
QUALITY	20
- PREFERENCE	22
TV Type	22
PBC (Paly Back Control)	22
AUDIO	22
SUBTITLE	22
DISC MENU	23
PARENTAL	23
COUNTRY REGION	23
DEFAULT	23
▪ PASSWORD SETUP	24
PASSWORD MODE	24
PASSWORD CHANGE	24
▪ DVD Functions	25
POWER	25
OPEN/CLOSE	25
MODE	25
VOL+ / VOL-	25
MUTE	25
PLAY OR PAUSE	25
STOP	26
ARROWS	26
SETUP	26
MENU	26
DISPLAY	27
NUMBER BUTTONS	27
SUBTITLE	28
TITLE	28
SLOW	28
FAST REVERSE SEARCHING	29
FAST FORWARD SEARCHING	29
PREV	30
NEXT	30
REPEAT A-B	30
REPEAT	31
NTSC/PAL	31
ANGLE	31
PBC	32
ZOOM	32
GOTO	32
▪ Connecting External Devices	33
▪ Installation	34
▪ Connection Diagram	35
▪ Disc Information	36
▪ Troubleshooting	37
▪ Specifications	38

Please read and observe all warnings and instructions in this owner's manual and those marked on the unit. Retain this booklet for future reference.



WARNING

There are two kinds of alarm symbols as follows:

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.




CAUTION

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

⚠ WARNING



Installation of all TV monitors must be out of the driver's field of vision!

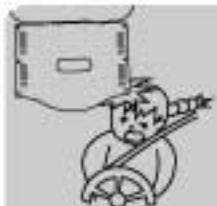

Do not mount the product where it will obstruct the deployment of the airbag or in an area where it would affect the vehicular control. Also be careful to avoid mounting the product where it can become hazardous during sudden stops or in the event of an accident.



Do not try and service these products yourself, seek only a qualified service center or factory service center.



Be careful not to drop or apply undue pressure to the front panel of your video monitor. If the screen cracks due to misuse your warranty will be void!



Be careful not to overload your cigarette lighter plug by adding more than one device at a time.



Use extra caution with any liquids in your car. If you or your child spill any liquid on these products, pull your vehicle to the roadside and turn the key off to disconnect or wipe the products with a towel. Do not operate the equipment until all liquids have either evaporated or you have had the monitor inspected at a service center by a qualified technician. Severe harm or death can occur!



Use only a damp cloth to clean the screen and use only purified water on the cloth, wring out all excess water prior to wiping the screen. Do not use any cleaners or chemicals to clean the screen. In most cases a dry cloth will do!

⚠ CAUTION



Quality installations are best performed by qualified and certified installers.



 
Watching the monitor for an extended period of time without the engine running may deplete the vehicle's battery charge.



Don't touch the unit there is a flash of lightning. It may receive an electric shock.



This product is designed for operation with a 12 Volt DC, negative ground vehicle. It is not suitable for operation under other conditions or voltages.

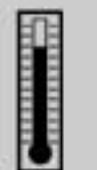


Do not cover or stop up heater ducts or vents. It may be the origin of a fire or receives an electric shock.

👉 Check Point


1. The operating temperature of this product is limited to -4°F ~ +176°F. Your vehicle can reach temperatures up to 212°F in the summertime.
2. From time to time when your vehicle is extremely hot or cold you must allow time for your air conditioner or heater to cool or heat the vehicle and for operating temperatures to return to normal operating ranges. Your monitor will return to its normal functions when these operating ranges are achieved.
3. Your optimum picture quality is achieved when you are directly in front of the monitor (+/-30 degrees).
4. Do not open covers and repair yourself. Refer servicing to qualified personnel.
5. DVD Players use an invisible laser beam which can cause hazardous radiation exposure. Be sure to operate the unit correctly as instructed.
6. Do not cut the car power supply off while a disc is playing. It can cause damage to the DVD Player.

Name and function of each part

UNIT

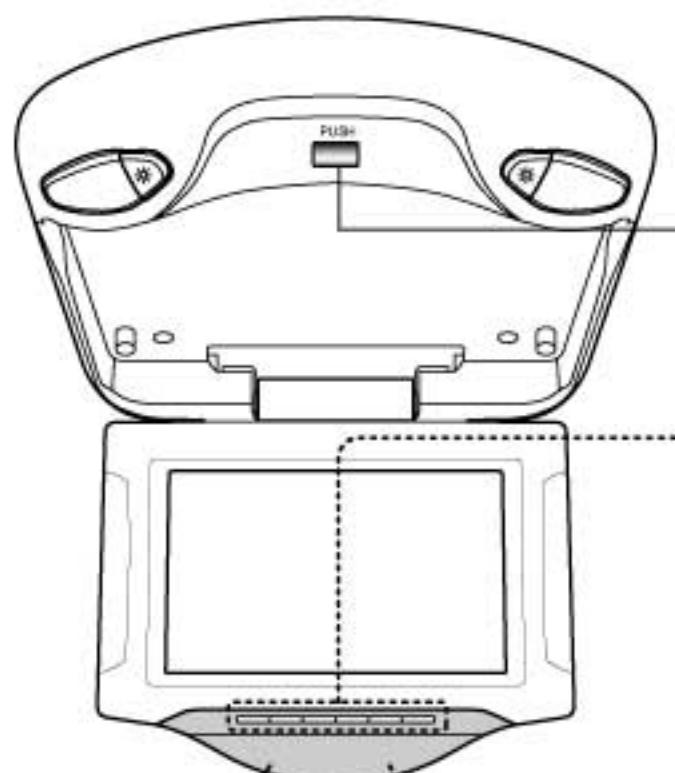

PUSH button

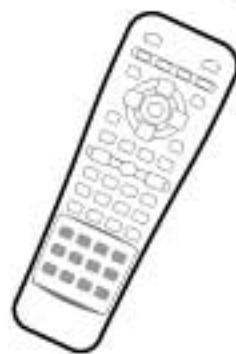

Remote control eye.


This allows transmitting of the remote control's IR signals for controlling all functions of your monitor.



IR wireless transmitter module

This module sends the audio signal to aftermarket wireless IR headphones. The audio signal is converted to an infrared light transmitted to your headphones by line of sight. You only have to be in view of the IR transmitter.

Name and function of each part

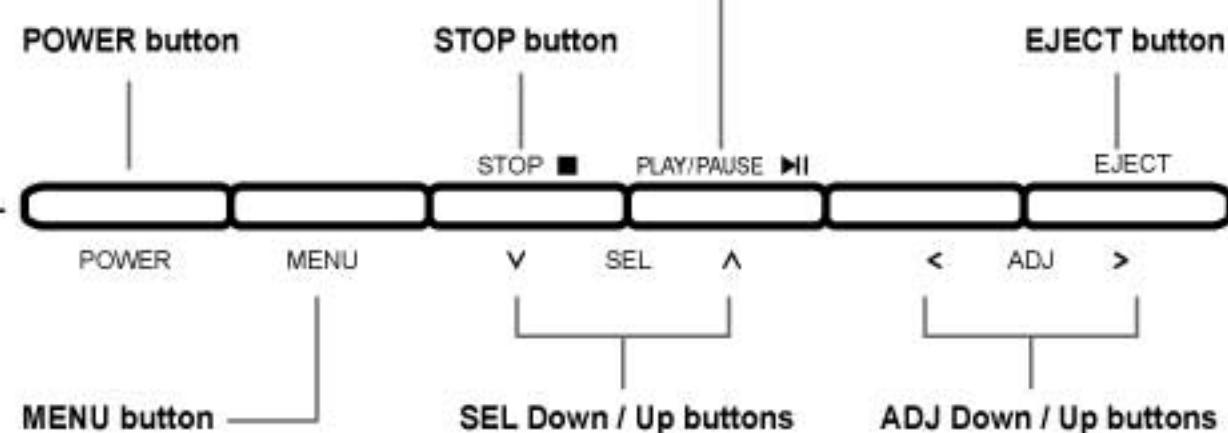

POWER button

STOP button

PLAY/PAUSE button

EJECT button

POWER

MENU

STOP ■


PLAY/PAUSE ▶

EJECT

POWER

Name and function of each part



Remote Controller

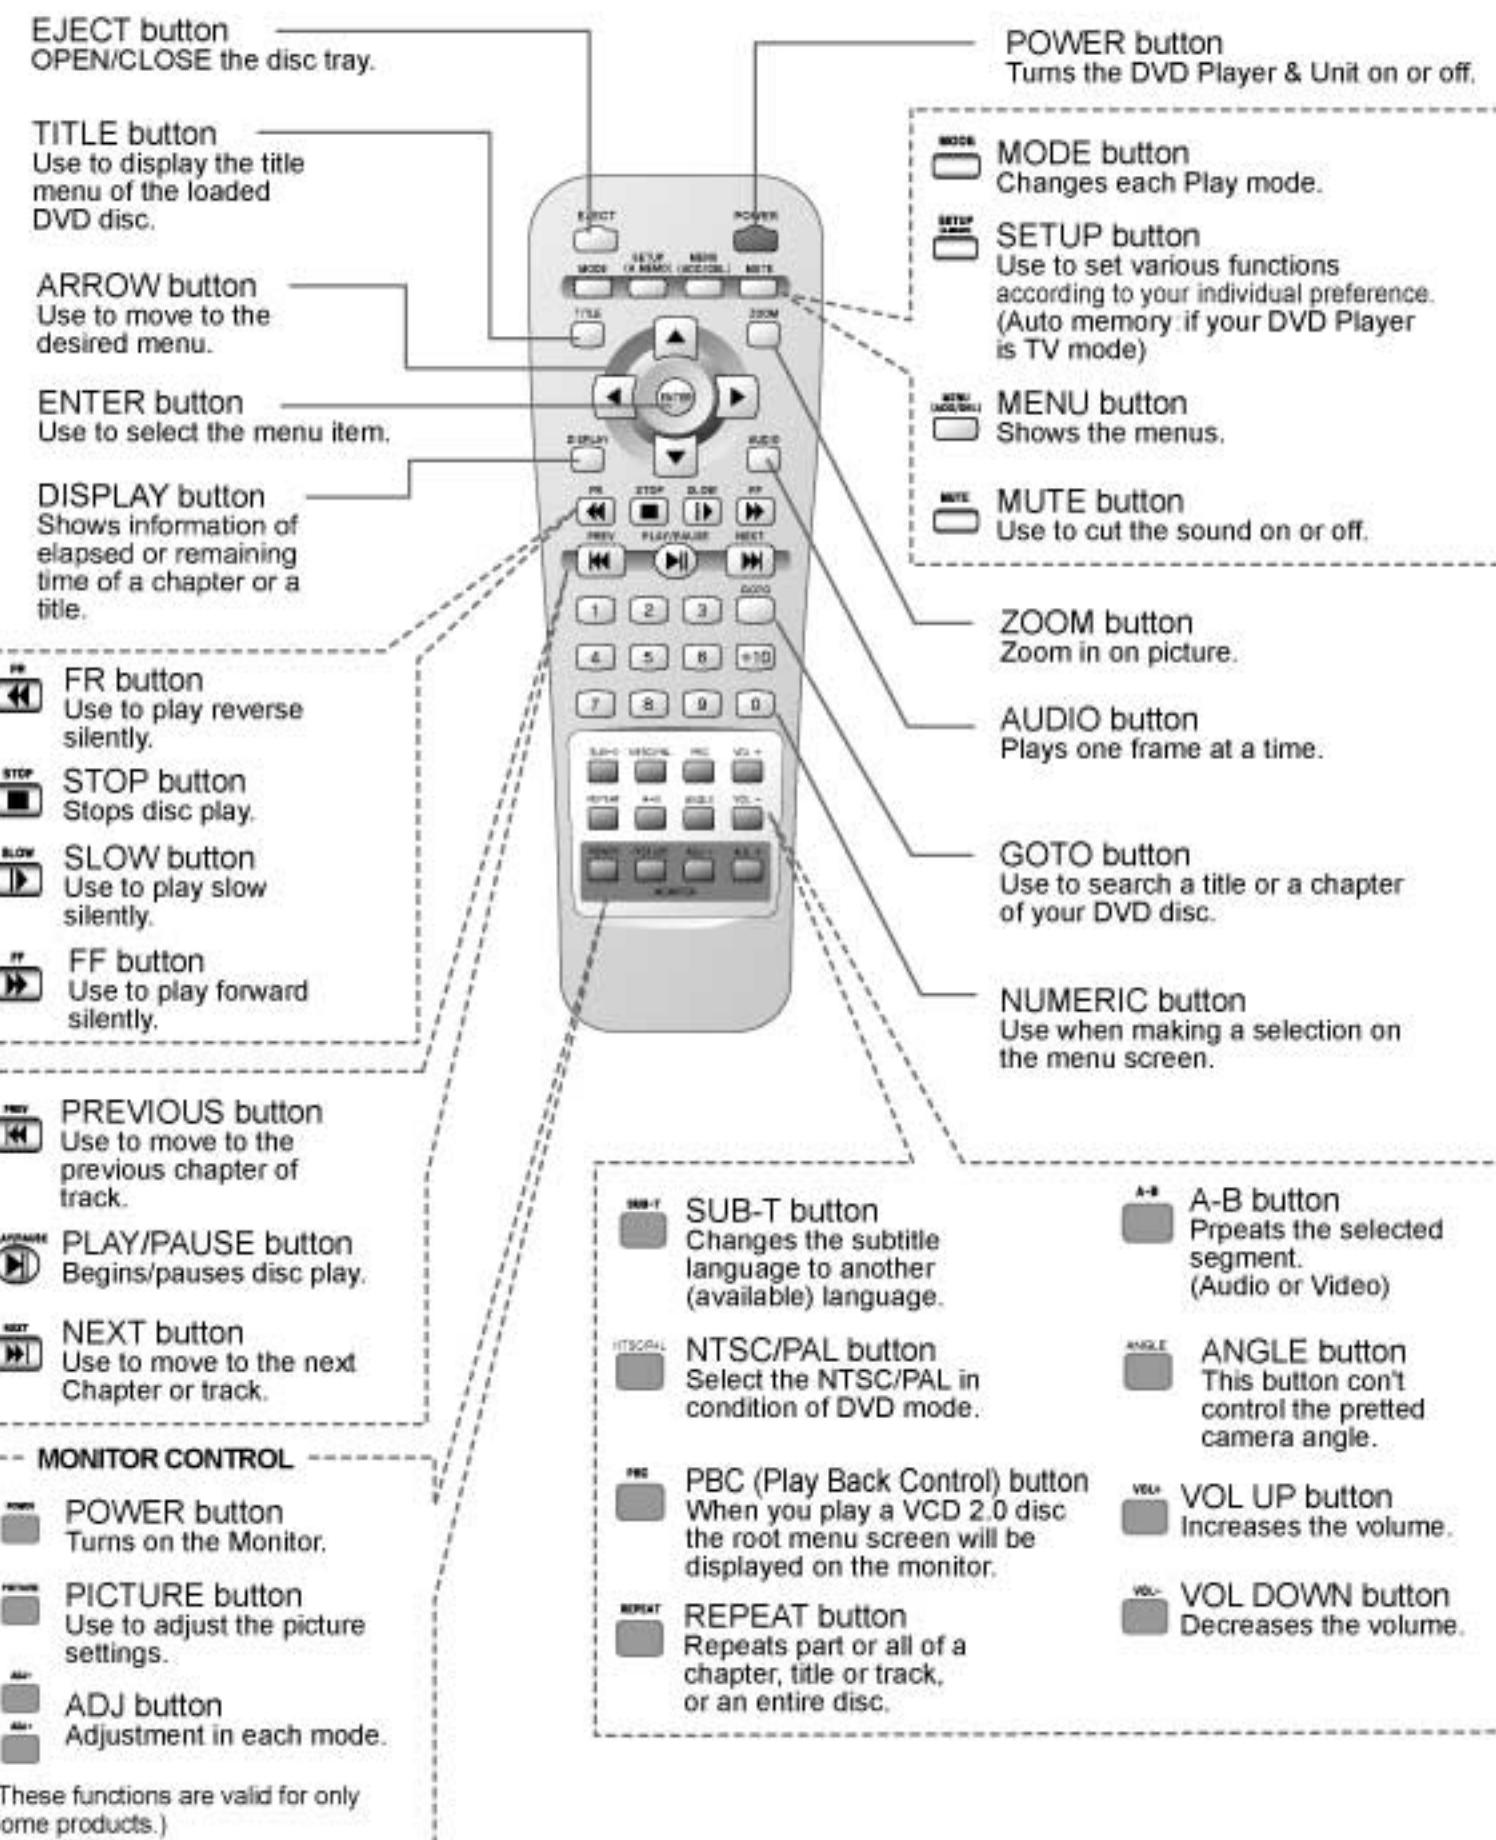

How to operate the monitor

Releasing the monitor


Push the open button (located at the front of your screen) and lower the monitor to the desired level. You can also adjust the swivel angle.

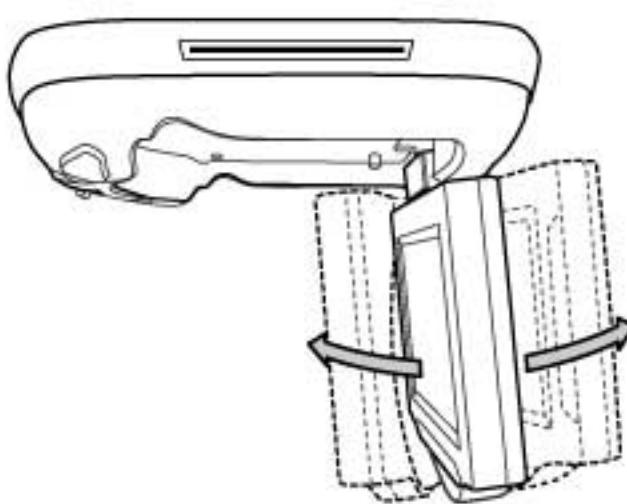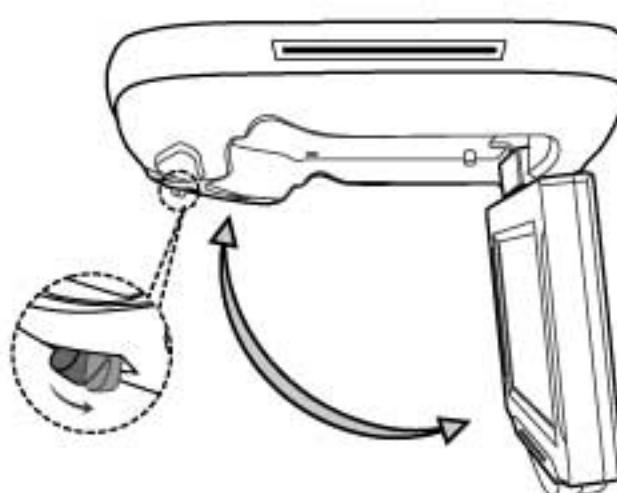

※ The monitor will automatically turn off when it is closed to the ceiling mount. When the monitor is opened again, it will automatically be turned on.

POWER and MODE select

1. Press the POWER button on either the remote control or the unit once to turn the power on. Press the same POWER button to turn your power off.

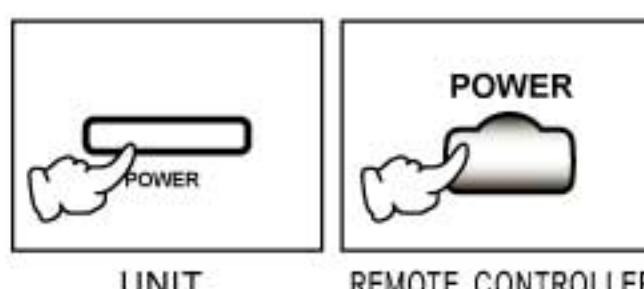

2. Press the MODE button on the remote control or the unit to achieve the desired TV Mode. Whenever you press the MODE button, you will select either the auxiliary input or the DVD mode.



■ How to select channels automatically

1. SETUP(A.MEMO) button on the remote control to select all available channels. (only TV mode)

※ Channel may not be selected in a bad RF signal region.

2. Select the channel you want by pressing arrow **▲/▼** button the remote control.

■ How to select channels by manual

Use to add or delete channels manually.

1. Select channels you want by pressing the number(0~9) buttons or arrow **▲/▼** button on the remote control.

2. Select ADD or DEL with the MENU(ADD/DEL) button on the remote control.



■ How to control the VOLUME

Listen to the Audio sound through the car installed speaker.

1. Bring up the on-screen picture control menu by pressing the PICTURE button on the remote control or the MENU button on the unit.

PICTURE	
1	INPUT
2	CONTRAST
3	BRIGHT
4	COLOR
5	TINT
6	SCREEN
7	FM TX
8	VOLUME

2. Select the desired menu by pressing the SEL **▼/▲** buttons on the unit to move the cyan-colored cursor window up or down. Highlight the Volume menu.

3. Adjust the picture conditions with the ADJ **< / >** buttons on the unit to achieve the desired Volume.

PICTURE	
1	INPUT
2	CONTRAST
3	BRIGHT
4	COLOR
5	TINT
6	SCREEN
7	FM TX
8	VOLUME

.....85


■ Contrast, Bright, Color or Tint selections:

Use to achieve the desired settings.

1. Bring up the on-screen picture control menu by pressing the PICTURE button on the remote control or the MENU button on the unit.



2. Select the desired menu by pressing the SEL V/A buttons on the unit to move the cyan-colored cursor window up or down. Highlight the desired function to change Contrast, Brightness, Color, Tint etc.

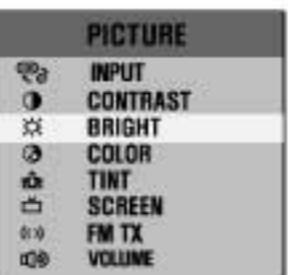


3. Adjust the current settings with the ADJ < / > buttons on the unit to achieve the desired settings.




■ Screen mode control

(Adjust the screen mode to your taste.)


1. Bring up the on-screen picture control menu by pressing the PICTURE button on the remote control or the MENU button on the unit.

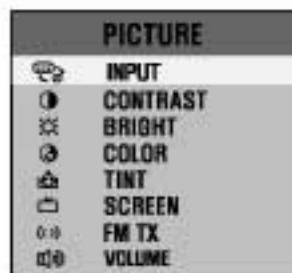

2. Select the desired menu by pressing the SEL V/A buttons on the unit to move the cyan-colored cursor window up or down. Highlight the (Screen) mode.

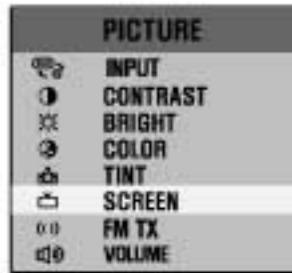

 3. Adjust the picture conditions with the ADJ < / > buttons on the unit to achieve the desired setting.



WIDE



The screen will be magnified to the ratio of 4:3 on the left and right sides.

FULL



Magnifies the picture in full screen.

ZOOM



The screen will be magnified on the left and right sides of the picture to the ratio of 4:3. The left and right sides of the picture are displayed, as well.

NORMAL




The screen will be the standard 4:3 ratio.


■ FM transmitter control function

Listening to the audio portion of the disk through your automotive speakers
(Remember to extend your car antenna.)


1. Bring up the on-screen picture control menu by pressing the PICTURE button on the remote control or the MENU button on the unit.

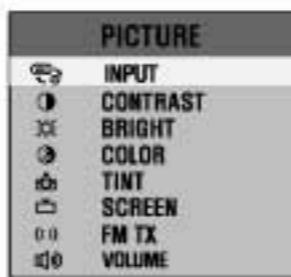


2. Select FM TX by pressing the SEL V/A buttons on the unit to move the cyan-colored cursor window up or down.

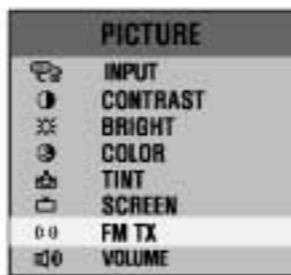

3. Press the ADJ < / > buttons on the unit to select a setting between 88.3, 88.5, 88.7, 88.9, and 90.1MHz.


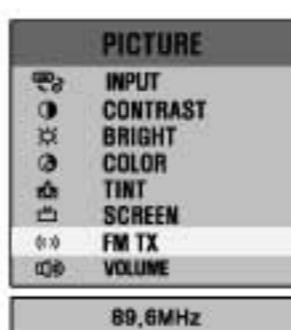


4. Select an open frequency on your car radio - 88.3, 88.5, 88.7, 88.9, and 90.1.

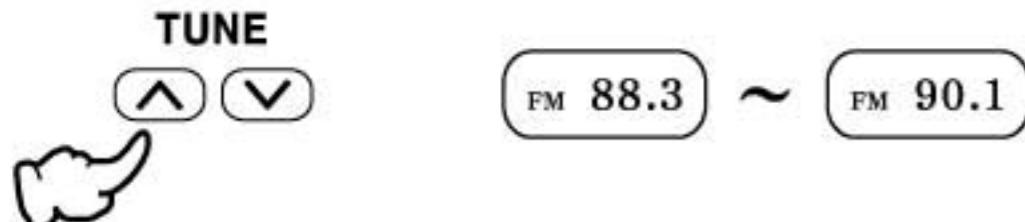


■ Playing your DVD player

1. Press the POWER button on the monitor or on the remote control.

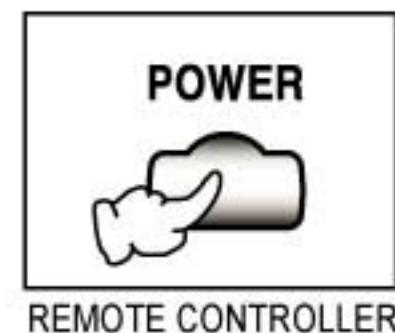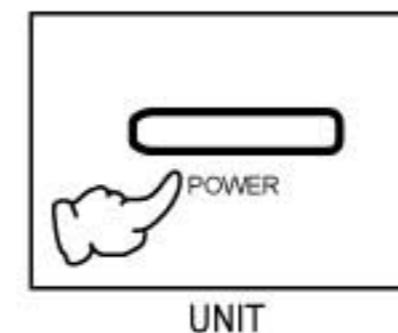

2. Press the MODE button on the remote control or the unit to select the desired DVD Mode.


Whenever you press the MODE button, you will select either the TV mode or the auxiliary input.

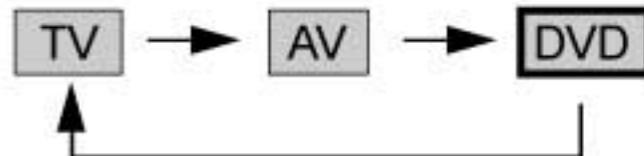

3. Insert the disc you want to play.

Most of DVD titles will be played automatically.

Caution : Insert the disc with the label side.

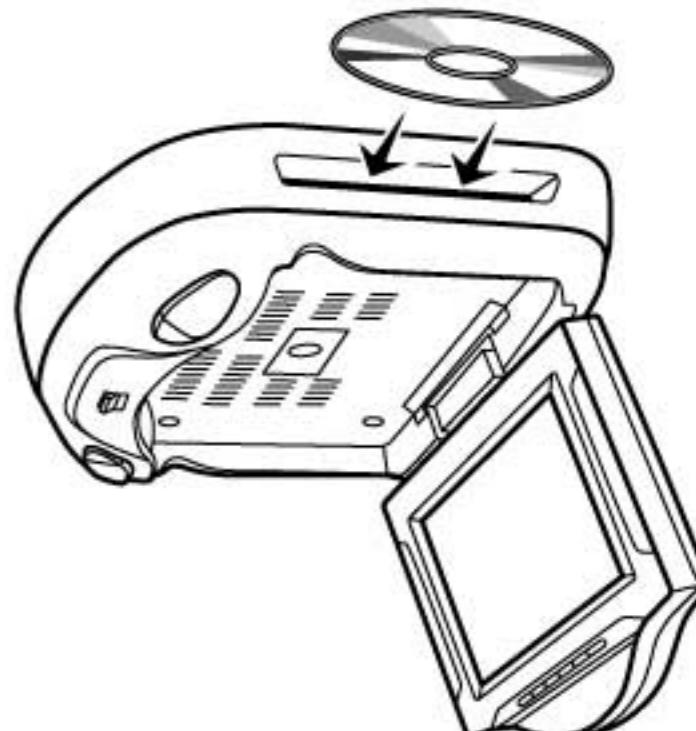

■ SETUP MENU-MAIN PAGE

Ø An invalid button press.

When this symbol appears, it indicates that an invalid button has been pressed. There are some differences between real functions and functions in manual.

You can easily modify setup information on the setup menu.

Caution : You should remove the disc from your DVD player first. Then press the (SETUP) button. If a DVD is playing when the (SETUP) button is pressed, the DVD player will be paused.

When the (SETUP) button is pressed, the monitor screen shows the setup menu as shown below. Select a menu category to modify according to individual preference.

1. Press the STOP button, if the disc is being played.
2. To call the SETUP menu, press the SETUP(A.MEMO) button.



3. Use the button to find desired items.

4. To turn off the SETUP menu, press the SETUP(A.MEMO)button again.

■ GENERAL SETUP

1. TV DISPLAY

You can select a TV screen aspect ratio according to your TV.

If the TV on which the movie is played "WIDE" type, choose "WIDE". If it is of "4:3" type, choose NORMAL/PS(Pan & Scan) or NORMAL/LB(Letter BOX).



NORMAL / PS 4:3 PAN & SCAN

Choose this setting if you want the movie to fill the entire screen. (This might mean that the left and right edges won't be seen)



NORMAL / LB 4:3 LETTER BOX

Choose this setting if you want to see movies in their original aspect ratio. (The movie might appear with black bars at the top and bottom of the screen.)



WIDE 16:9 WIDE SCREEN

Choose this setting if your DVD Player is connected to a widescreen TV. (This option is available only if the disc has a 16:9 display aspect ratio.)

Caution

This option is available only when the disc has the function.



2. ANGLE MARK

You can set up so that the angle mark appears on scenes.

On : When selected, the screen will show angle mark during disc play.

Off : When selected, no angle mark is shown on the screen.



3. OSD LANG

Use this option to set the OSD language.

When selected, change to set the on-screen display language.



4. CAPTIONS

Adjust caption selection.

On : Choose this setting to display captions.

Off : Choose this setting to close captions.



5. SCREEN SAVER

The screen saver is useful to prevent your display from becoming damaged. The screen saver picture appears when you leave the DVD player in stop mode for about two minutes.



6. LAST MEMORY

Adjusts last memory selection.



AUDIO SETUP

1. DOLBY DIGITAL SETUP

DUAL MONO

Use this function to set the input audio signal to fit into the speaker.



DYNAMIC

Use this function to change the setting from the factory. - Preset Off position.



2. EQUALIZER

EQ TYPE

This unit can produce a 3D surround effect, using 3D Surround Sound technology.


Choose the desired preset equalizer mode.

(None, Rock, Pop, Live, Dance, Techno, Classic, Saft)



BASS BOOST

This is enhanced at all levels without distorting other frequencies.

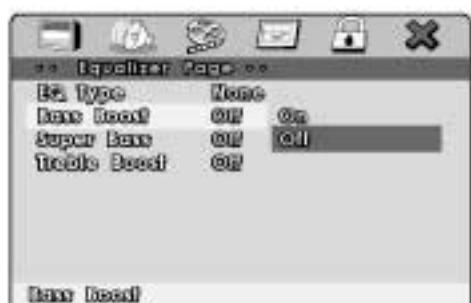

SUPER BASS

This is enhanced at all levels without distorting other frequencies.



TREBLE BOOST

This is enhanced at all levels without distorting other frequencies.



■ VIDEO QUALITY SETUP

1. QUALITY

SHARPNESS

Use this option to select screen sharpness.

Select screen sharpness using the direction **◀/▶** button and press the **ENTER** button.



BRIGHTNESS

Use this option to select screen brightness.

Adjust overall screen brightness using the direction **◀/▶** button.



CONTRAST

Use this option to select screen contrast.

Select screen contrast using the direction **◀/▶** button.

Contrast adjusts the image quality by increasing or decreasing the ratio of bright and dark screen section.



GAMMA

Select screen gamma using the direction **◀/▶** button and press the **ENTER** button. Gamma adjustment is to revive the dark screen section by raising the level of dark section, while leaving the bright screen section unchanged.



HUE

Select screen hue level using the direction **◀/▶** button.



SATURATION

Select screen saturation level using the direction **◀/▶** button.



LUMA DELAY

Select the Luma Delay menu and select the preferred video image quality.



■ PREFERENCE

1. TV Type

Choose a proper operating setting according to the color system of the TV Type - Multi system, NTSC, PAL.


- 1) Press the SETUP button during stop mode.
- 2) Press the **◀/▶** button to move to Preference.
- 3) Press the **▲/▼** button to move to TV Type.
- 4) Press the ENTER button.
- 5) Press the **▲/▼** button to select TV Type.



2. PBC (Paly Back Control)

This feature is only available when a (Super) Video CD is loaded. It allows you to disable or enable the PBC(Playback Control)menu of VCD discs.

- 1) Press the SETUP button during stop mode.
- 2) Press the **◀/▶** button to move to Preference.
- 3) Press the **▲/▼** button to move to PBC.
- 4) Press the ENTER button.
- 5) Press the **▲/▼** button to select On/Off.

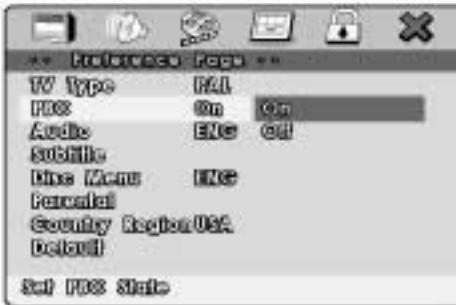

3. AUDIO

Use the audio language menu to select the subtitle language that you prefer. If the disc you are playing has that language available, it will display subtitles in that language.

- 1) Press the SETUP button during stop mode.
- 2) Press the **◀/▶** button to move to Preference.
- 3) Press the **▲/▼** button to move to Audio.
- 4) Press the ENTER button.
- 5) Press the **▲/▼** button to select desired audio language.



4. SUBTITLE

Use the subtitle language menu to select the subtitle language that you prefer. If the disc you are playing has that language available, it will display subtitles in that language.

- 1) Press the SETUP button during stop mode.
- 2) Press the **◀/▶** button to move to Preference.
- 3) Press the **▲/▼** button to move to Subtitle.
- 4) Press the ENTER button.
- 5) Press the **▲/▼** button to select desired subtitle.



5. DISC MENU

Use the Disc Menu option to select the language you want a DVD's disc menu to be displayed in (not the same as the player menu)

- 1) Press the SETUP button during stop mode.
- 2) Press the **◀/▶** button to move to Preference.
- 3) Press the **▲/▼** button to move to Subtitle.
- 4) Press the ENTER button.
- 5) Press the **▲/▼** button to select Disc Menu.



6. PARENTAL

The Parental feature is a rating limit system, like movie ratings. It works with DVD's that have been assigned a rating. This option lets you determine how your player will react to discs that contain movies that are rated (in the U.S.A., the Motion Pictures Association of America rates movies as G, PG, PG-13, ect.). You decide which ratings require a password and which ones don't.

- 1) Press the SETUP button when stop mode.
- 2) Press the **◀/▶** button to move to Preference.
- 3) Press the **▲/▼** button to move to Parental.
- 4) Press the ENTER button.
- 5) Press the **▲/▼** button to select desired parental level.



7. COUNTRY REGION

Use this menu function to change the COUNTRY REGION.

- 1) Press the SETUP button when stop mode.
- 2) Press the **◀/▶** button to move to Preference.
- 3) Press the **▲/▼** button to move to Country Region.
- 4) Press the ENTER button.
- 5) Press the **▲/▼** button to select desired Country Region.



8. DEFAULT

If user selects reset from the setup menu, all the value of setup menu will be initialized by factory setting value. (Exception: Parental level, Region code and Password values will not be changed)

- 1) Press the SETUP button when stop mode.
- 2) Press the **◀/▶** button to move to Preference.
- 3) Press the **▲/▼** button to move to Default.
- 4) Press the ENTER button.
- 5) Press the ENTER button to select reset.



■ PASSWORD SETUP

1. PASSWORD MODE



2. PASSWORD CHANGE

- 1) Select "Password Setup" sub item
- 2) Enter your old password, and new password in 4 digits.
- 3) Re-enter new password for confirmation then press the ENTER button.



POWER

Power ON/OFF button.

OPEN/CLOSE

Each press of the EJECT button changes the play mode as the text to the right illustrates. When you insert your DVD disc into the DVD player, "DISC LOADING" will appear on the screen. Then the DVD disc is played automatically.

MODE

Changes each Play mode.

OSD	CONDITION
DVD	Play DVD
TV	Watch the TV
AV	Watch external device's video signal

VOL+ / VOL-

To adjust the audio output level of the speaker from 0 to 16.
(The volume cannot be adjusted in the AV mode.)

MUTE

Each press of the MUTE button changes the play mode.

OSD	CONDITION
MUTE	MUTE
MUTE OFF	MUTE Off

PLAY OR PAUSE

[DVD] / [AUDIO] / [MP3]

Use this button to select a particular scene or play the disc. Most DVD discs will play automatically.

OSD	CONDITION
PLAY	Play Disc
PAUSE	pause

DVD Functions

STOP 

[DVD]

Press the STOP button and stop the movie.
And then Press the Play/Pause button and will display the last scene of the movie.
Press the Stop button two times and stop the movie. And then Press the Play/Pause button and will display the first scene of the movie.

OSD	CONDITION
1 Time PRESS PLAY TO CONTINUE	Stop
2 Time STOP	Disc Stop

[AUDIO]/[MP3]

Press the STOP button and stop the Disc.
And then Press the Play/Pause button and will display the first file of the Disc.

OSD	CONDITION
One Time	STOP

ARROWS **[DVD]**

When display the DVD in ZOOM mode, can change the screen position by using ARROW button.

[AUDIO]

An invalid button press. 

[MP3]

After pressing STOP button, select the desired folder and set the condition by pressing ENTER button.

SETUP 

Use to set various functions according to your individual preference.

MENU **[DVD]**

The menu of a DVD disc varies.
The content of the menu on the screen is dependent on the particular DVD.

[AUDIO] / [MP3]

An invalid button press. 

DVD Functions

**[DISPLAY]**

Each press of the button DISPLAY on the remote control changes the play mode as follows:

OSD	CONDITION
Title 00/00 Chapter 000/000	Display title and chapter
Title Remain	Display title and chapter
Chapter Elapsed	Display the left title
Chapter Remain	Display the Chapter Elapsed
Display Off	No sign

[VCD]

Whenever press the button, title chapter will be displayed as follows:

OSD	CONDITION
Single Elapsed	Display time
Single Remain	Left display time
Display Off	No sign

[AUDIO]

Each press of the display button displays information about the current CD on the screen as follows:

OSD	CONDITION
Single Elapsed	Display the single elapsed
Single Remain	Display the single remain
Total Elapsed	Display the total elapsed
Total Remain	Display the total remain

[MP3]

Your DVD player will display the counter automatically when you play an MP3 disc.

NUMBER BUTTONS **[DVD]**

The 0 through 9 number buttons are used to enter the number of the track, the number of the DVD chapter, time data, etc.

[AUDIO]

You can select a track by pressing the corresponding number button.

[MP3]

You can select a track in the folder by pressing the corresponding number button.

OSD	CONDITION
SELECT TRACK : __	Select track no
__ : __	Select track no

SUBTITLE

[DVD]

This button is used to select the language for on-screen display messages.
(The title menu is different, depending on the particular DVD.)

[AUDIO] / [MP3]

An invalid button press.



TITLE

[DVD]

Used to display the title menu of the loaded DVD disc.
(This function is disc-dependent.)

[AUDIO] / [MP3]

An invalid button press.



SLOW

[DVD] / [VCD]

Used to play a disc in slow forward or slow reverse.
This allows you to search forward three steps to reverse
three steps to reverse three steps.
slow forward play : press slow button.
slow rewind play : press slow button and fr button again.
(not in work VCD)

[AUDIO] / [MP3]

An invalid button press.



OSD	CONDITION
SF 2X	2X slow forward
SF 4X	4X slow forward
SF 8X	8X slow forward
SR 16X	16X slow forward
SR 2X	2X slow rewind
SR 4X	4X slow rewind
SR 8X	8X slow rewind
SR 16X	16X slow rewind
PLAY	play

FAST REVERSE SEARCHING



[DVD]

Each press of the FR button changes
the play mode as follows:

OSD	CONDITION
FR 2X	2X rewind search
FR 4X	4X rewind search
FR 8X	8X rewind search
FR 16X	16X rewind search
FR 32X	32X rewind search
PLAY	play

[AUDIO] / [VCD]

Each press of the FR button changes
the play mode as follows:

OSD	CONDITION
FR 2X	2X rewind play
FR 4X	4X rewind play
FR 8X	8X rewind play
FR 16X	16X rewind play
FR 32X	32X rewind play
PLAY	play

[MP3]

Each press of the FR button changes
the play mode as follows:

OSD	CONDITION
FR 2X	2X rewind play
FR 4X	4X rewind play
FR 8X	8X rewind play
FR 16X	16X rewind play
FR 32X	32X rewind play
PLAY	play

FAST FORWARD SEARCHING



[DVD]

Each press of the FF button changes
the play mode as follows:

OSD	CONDITION
FF 2X	2X foward search
FF 4X	4X foward search
FF 8X	8X foward search
FF 16X	16X foward search
FF 32X	32X foward search
PLAY	play

[AUDIO] / [VCD]

Each press of the FF button changes
the play mode as follows:

OSD	CONDITION
FR 2X	2X foward play
FR 4X	4X foward play
FR 8X	8X foward play
FR 16X	16X foward play
FR 32X	32X foward play
PLAY	play

[MP3]

Each press of the FF button changes
the play mode as follows:

OSD	CONDITION
FR 2X	2X foward play
FR 4X	4X foward play
FR 8X	4X foward play
FR 16X	4X foward play
FR 32X	32X foward play
PLAY	play

PREV



[DVD] / [VCD]

Used to move to the previous chapter from the current chapter.

[AUDIO] / [MP3]

Used to move to the previous track.

NEXT



[DVD] / [VCD]

Used to move to the next chapter from the current chapter.

[AUDIO] / [MP3]

Used to move to the next track from the current track.

REPEAT A-B



[DVD] / [VCD] / [AUDIO]

Press this button to repeat the selected segment.
The selected segment will be repeated automatically until cancelled.

OSD	CONDITION
A	start point of repeat
A-B	ending point repeat function

[MP3]

An invalid button press.



REPEAT



[DVD]

Each press of the REPEAT button changes the play mode as follows:

OSD	CONDITION
Chapter	repeat chapter
Title	repeat title
All	all
	repeat off

[VCD]

An invalid button press.



[AUDIO]

Each press of the REPEAT button changes the play mode as follows:

OSD	CONDITION
Track	repeat single
All	all
	repeat off

[MP3]

Use to change the play mode.
Each press of the REPEAT button changes the play mode as follows:

OSD	CONDITION
Repeat One	single
Repeat Folder	repeat folder
Folder	repeat folder one time
Shuffle	all
Random	random play
Single	single play

NTSC/PAL



Select the NTSC/PAL in condition of DVD mode.

ANGLE



Select "ON" for selecting other camera angle.
(This button can't control the preset camera angle.)

DVD Functions

PBC

[DVD] / [AUDIO] / [MP3] 
An invalid button press.

[VCD]
You can turn the PBC (Play Back Control) function on or off by pressing this button.
When PBC is loaded, the PBC function is enabled automatically. This function is similar as selection of DVD title. (not available with MP3)

ZOOM 

[DVD]
Each press of the ZOOM button changes the play mode as the text to the right illustrates.

OSD	CONDITION
X 2	ZOOM x 2
X 3	ZOOM x 3
X 4	ZOOM x 4
X 1/2	ZOOM x 1/2
X 1/3	ZOOM x 1/3
X 1/4	ZOOM x 1/4
	Off

[VCD] / [AUDIO] / [MP3] 
An invalid button press.

GOTO 

This function is used to go to MENU function While displaying a disc.

Title
Use to move to the title.

Chapter
Use to move to the chapter.

Audio
Use to select the audio output.

Subtitle
Use to select the subtitle language on the screen.


Angle
Prepares the selected segment.

TT Time
Use to go to the desired title time.

CH Time
Use to go to the desired chapter time.

Repeat
Use to set the repeat mode.


Time Display
Use to change the time display.

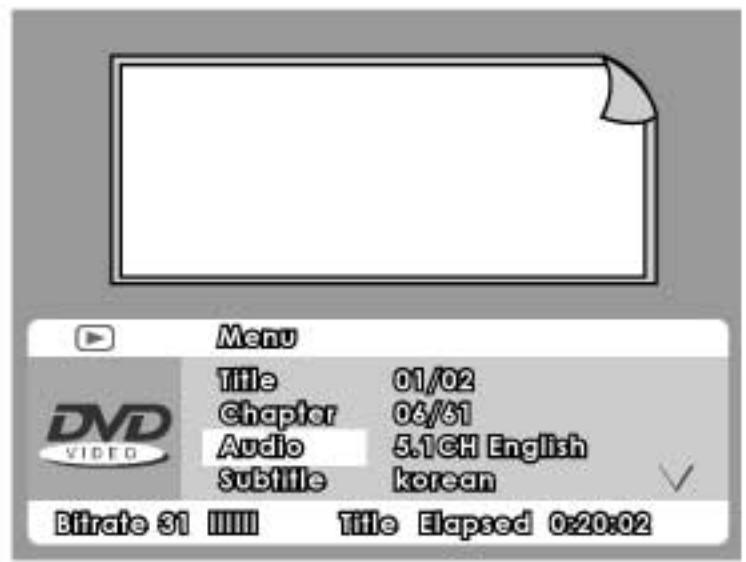

Connecting External Devices

You can connect several external devices, as shown in the diagram below.

1. Connect all devices as shown in the diagram. Shut off all power prior to connection.

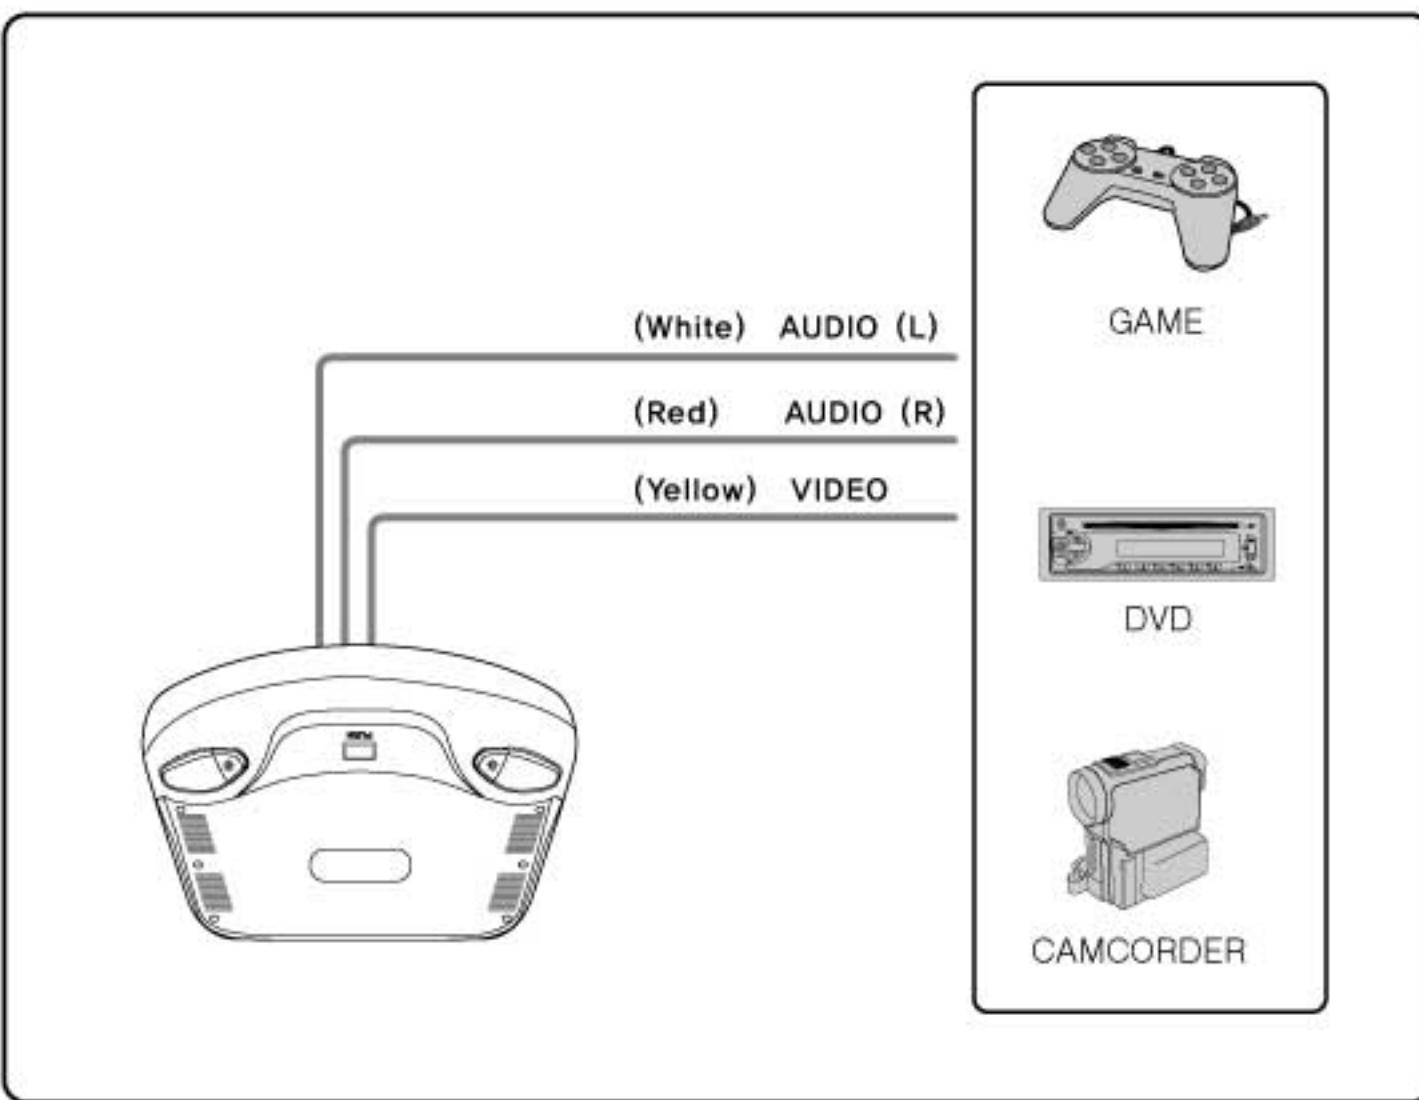

2. Turn on the power to the monitor and other devices.

3. Press the MODE button on the remote control or the unit to achieve the desired AV Mode.

Whenever you press the MODE button, you will select either the DVD mode or the TV mode.

4. Play an external device.



Installation

1. Unpack the color box and check the contents.



INSTALLATION PLATE




INSTALL BRACKET



COMBO UNIT





SCREW

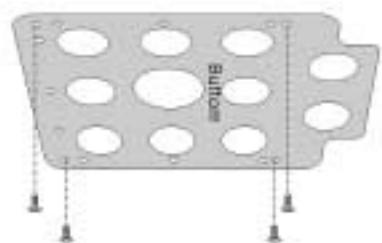


2. Printed "bottom" must be placed ceiling as you want to install Place and place the installation plate with 4 screws.

3. Match the position of installation bracket and installation plate and place the left side of combo unit to installation bracket.

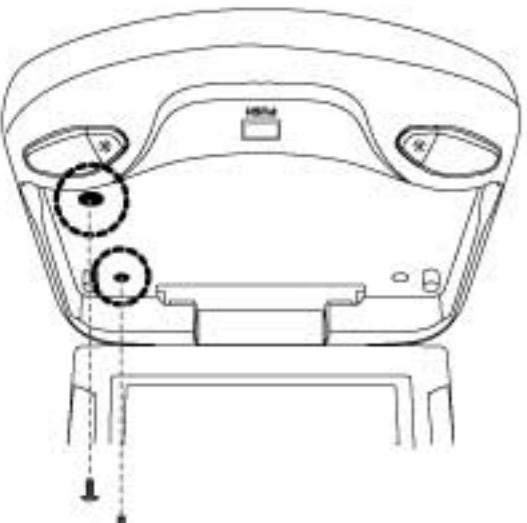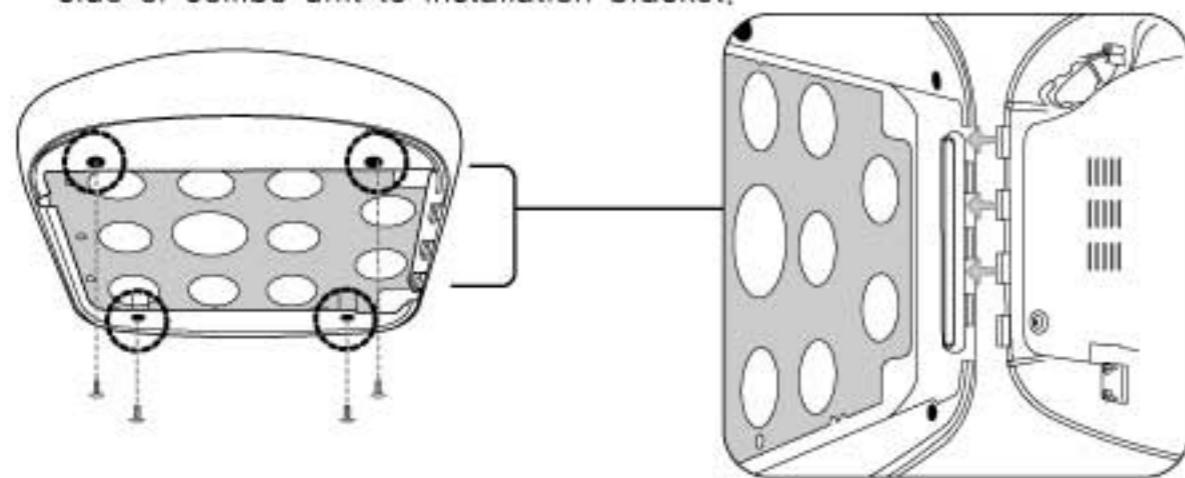

4. Tighten the combo unit with the supplied screws.

Connection Diagram

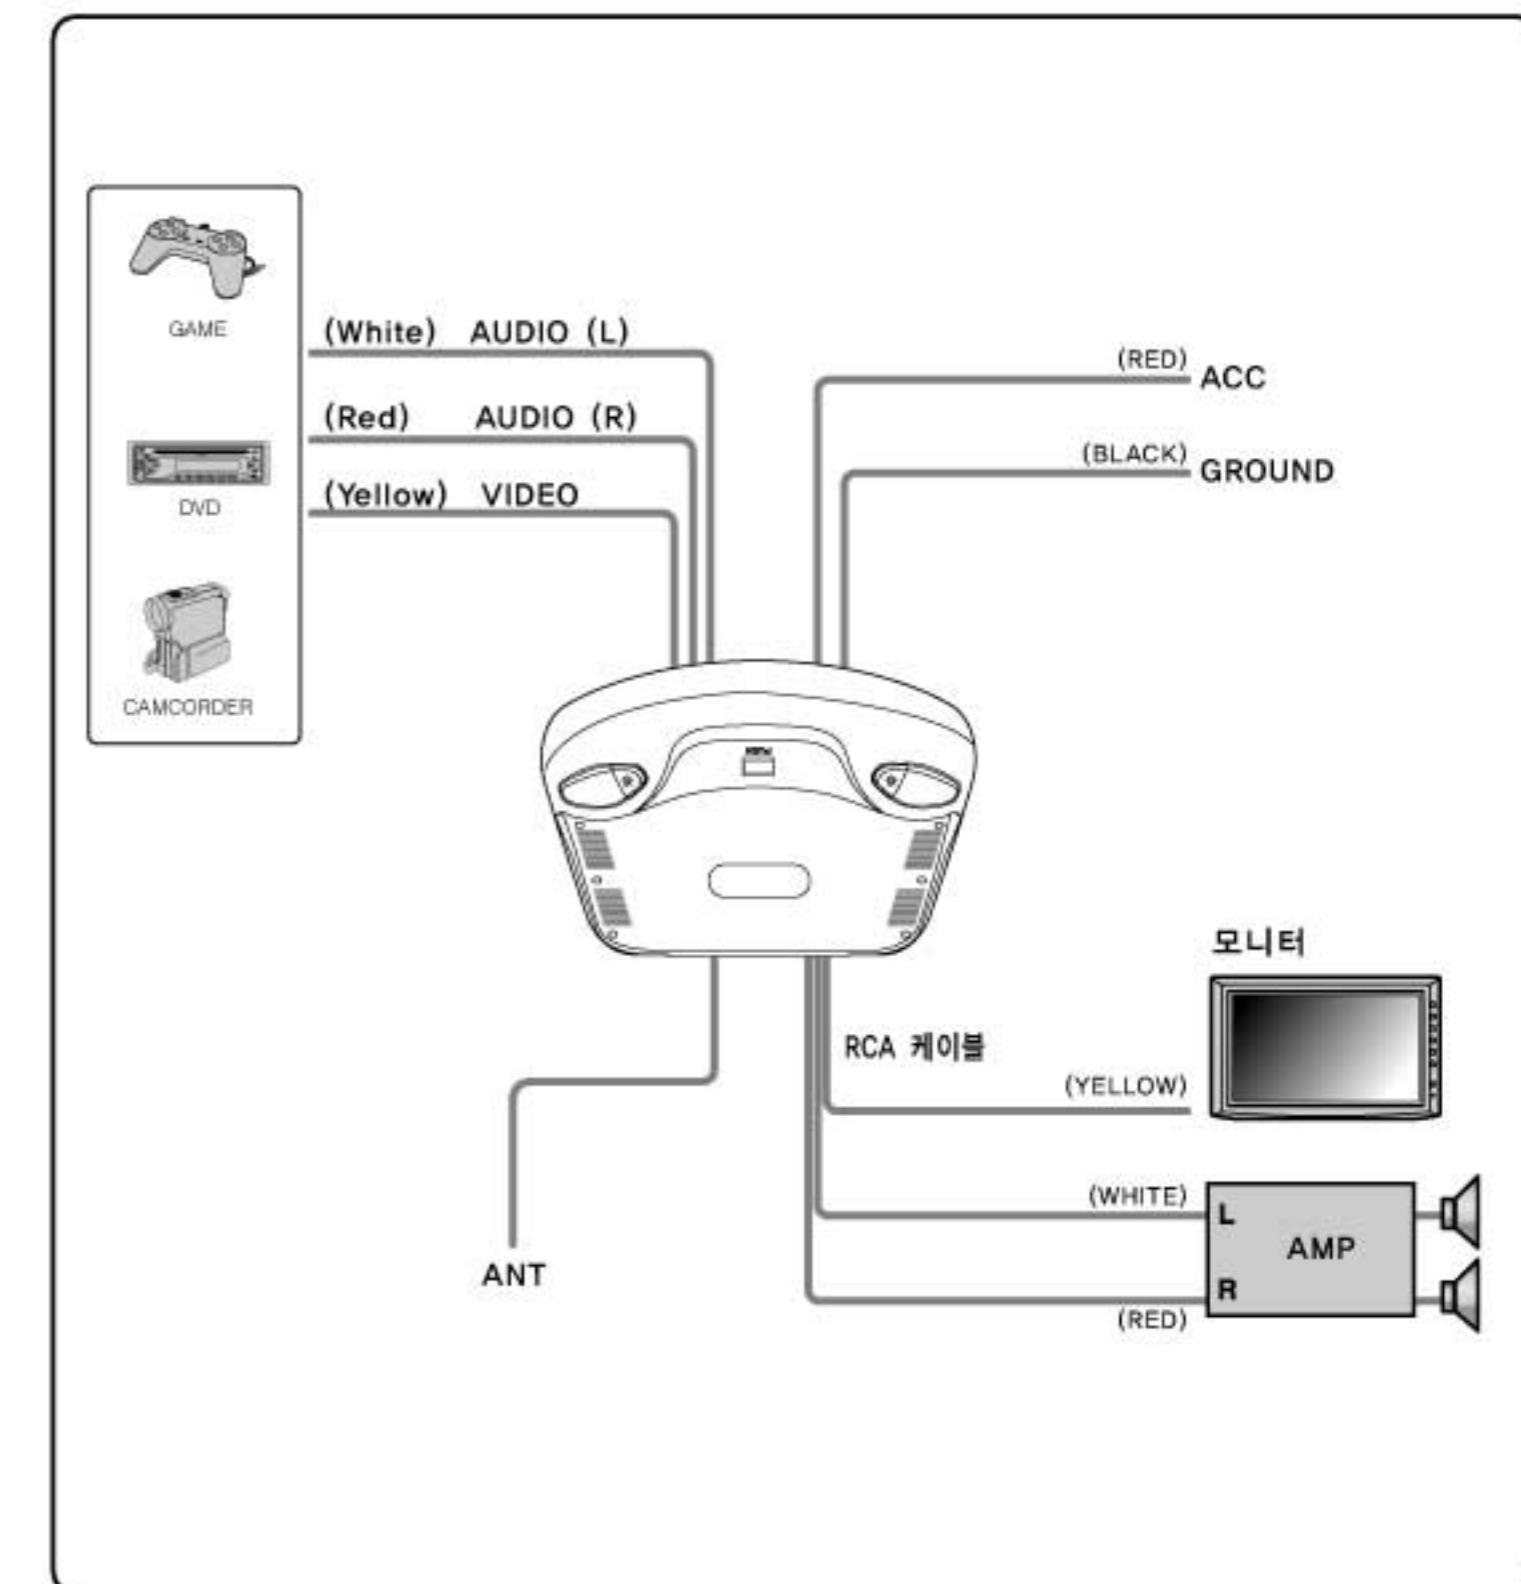

Specifications

Power	DC 12V
Screen Formate	16 : 9
Resolution	800(RGB) X 480 Pixel
Brightness	400 cd/m ²
Color System	NTSC / PAL
A/V Input	1 EA
A/V Output	1 EA
IR Transmitter	Yes
Remote Control	Yes
Dimensions	(W)275 X (D)273 X (H)75 mm

Note : This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.