

BASE STATION

ENGLISH

Ref. 157903

EAN : 8421134157903

1. Flexible antenna
2. Volume control, ON/OFF Switch
3. Morse code button
4. Microphone
5. Green "transmit" light, red "received"
6. Button pressed to transmit

Not recommended for children under 3. Contains small parts.
Requires one battery of **9V. -6F22-** in each unit (not included).

OPERATING INSTRUCTIONS

Using a Phillips screwdriver, open the cover of the battery compartment.
Insert one 9v battery in each device's battery compartment with the correct polarity.
Turn the volume control to switch it on.
Speak into the integrated microphone while pressing the transmission button.
Release the button to listen.
Press the transmission button on the Base Station's microphone to talk (green light on).
Release the microphone's button to listen (red light on).
To send Morse code signals, press the transmission button and the Morse code button;
press and release the Morse button several times for the (.) or keep the button pressed slightly longer for (-).
You may practice Morse code with your transmitter by using the Morse code button only.
The best coverage and the greatest range is achieved in open spaces, without obstacles that may get in the way, such as buildings, trees, etc.
Some locations may have very bad coverage, such as those that are near power lines, inside homes, under fluorescent lighting, or in places with many metallic elements (such as warehouses with metallic shelves).

When you are finished using it, move the control to the Off position and remove the batteries from the device.
If you wish, you may use the watch independently from the intercom.

CARE AND SAFETY

To clean the unit, use a slightly moist cloth. Do not use detergents or solvents. In case the device gets wet, turn it off and remove the batteries immediately. Dry the battery compartment with a dry cloth. Leave the battery compartment uncovered all night so that it may dry completely. Do not attempt to use the device until it is completely dry.

WARNING:

Do not use the devices in dangerous surroundings. They may cause explosions or fire.
Do not use the device in areas where explosives are used. Radio signals may interfere with operations and cause explosions.
Construction crews also use radio equipment to detonate explosives.

No 3 4 3 2 5
No 3 4 3 2 4


PRECAUTION:

22 JUL 2003

- Non rechargeable batteries should not be recharged.
- Do not use rechargeable batteries with this toy.
- Different types of batteries or new and used batteries must not be mixed.
- Only batteries of the same or equivalent type as recommended should be used.
- Batteries must be inserted with the correct polarity.
- Exhausted batteries should be removed from the toy.
- The supply terminals must not be short-circuited.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- The packing has to be kept since it contains important information.
- The product may differ slightly from picture.

Note:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.

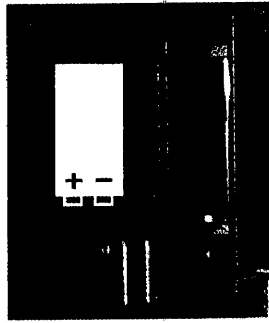

For any complaint, please contact:



IMCADISA, S.A.
C/Pare llaurador, nº 172
08224 TERRASSA (Barcelona) SPAIN
www.imc.es
NIF: A-08667370