




140028-Special DS_USA



© Disney/Pixar

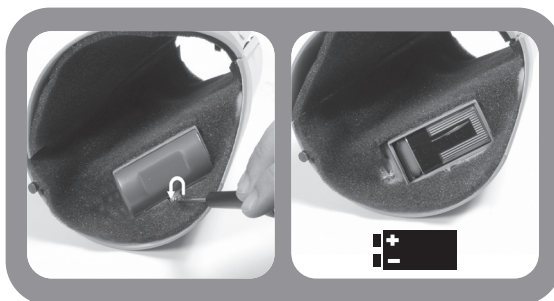

WARNING:

CHOKING HAZARD - Small parts.
Not for children under 3 years.



AVERTISSEMENT:

RISQUE DE SUFFOCATION - Petites pièces.
Ce produit n'est pas recommandé pour enfants
de moins de 3 ans.

Battery requirements:

2 x 6LR61



9V

USE AND OPERATING INSTRUCTIONS

IMC TOYS products undergo strict production controls to guarantee the enjoyment and safety of your children. They are easy to use and operate. We are certain that they will provide your children with great entertainment. Thank you for purchasing one of our products.

To consult our extensive product catalogue, please visit our web page at www.imc.es.

Using a Phillips screwdriver, open the battery compartment of the intercommunicators, located inside the unit, and insert 1 x 6LR61/9V battery (preferably alkaline), noting the polarity for each unit as appears in the diagram, then screw the cover back on.

Adjust the intercommunicator to fit your arm by pressing the open button and placing it just above the wrist. Ensure that the lock is completely closed by listening for the click. The intercommunicators are equipped with a special foam to make them adaptable to various diameters of forearm. Repeat this operation for the other unit.

To start the intercommunicators, lift up the protective cover and turn the volume dial, you will hear a click and the LED operation indicator will light up. Set the volume to the desired level and repeat this operation for the other unit.

Press the PUSH TO TALK button to talk and release it to receive a reply. Direct your voice towards the Toy Story shield, as this is where the speaker and microphone are located. The best reception is achieved in open spaces without obstacles. Reception may be very poor in some places due to the proximity of electric pylons, high voltage towers or radio or electromagnetic antennae. Reception can be drastically reduced in these areas.

To activate the LED laser simulator, press the button located to the right of the volume control and the LED at the front will light up.

CARE AND SAFETY

To clean the unit, use a slightly moist cloth. Do not use detergents or solvents. In case the device gets wet, turn it off and remove the batteries immediately. Dry the battery compartment with a dry cloth. Leave the battery compartment uncovered all night so that it may dry

completely. Do not attempt to use the device until it is completely dry.

WARNING

The construction teams use radio sets. Avoid activating your walkie talkie whenever it might cause interference.

WARNING! Do not use close to the ear! Misuse may cause damage to hearing.

REMARKS ON ENVIRONMENTAL PROTECTION

At the end of the life span of this product, it could not be disposed as the normal household rubbish. It must however be submitted to a collection spot for the recycling of electrical and electronic devices. The symbol on the product, of the user manual or of the packing refers to the above-mentioned.

The materials are, according to their marking, recyclable. You make an important contribution to the protection of our environment with the recycling, the material utilization or other forms of utilization of the old devices.

Please make enquiries with the responsible disposal center at the local authority.

WARNING:

- Not suitable for children under 3 years of age. It contains small parts which might be ingested by them. Choking hazard.

- Please keep the packaging for future reference as it contains very important information.

- Please note that due to technical improvements this product may differ from the one that appears in the illustration.

- This product requires 2 type 6LR61/9V alkaline batteries (not included).

- The batteries or accumulators must be inserted according to the polarity indicated in the illustration.

- Used batteries or accumulators must be removed from the toy; failure to do so could cause damage.

- Do not mix old batteries with new ones.

- Do not mix different types of batteries.

- Use only those batteries recommended by the manufacturer or equivalents.

- Non-rechargeable batteries must not be recharged.

- The battery terminals must not be bridged or shorted.

- Changing or handling the batteries must always be carried out under the supervision of an adult.

- Remove the batteries from the compartment if the unit is not going to be used for a long period of time.

- Please respect the environment and deposit used batteries in the containers provided.

- Rechargeable batteries are to be removed from the toy before being charged.

- Rechargeable batteries are only to be charged under adult supervision.

- This product achieves better performance using alkaline batteries.

- Read the instructions before use, follow them and keep them for reference.

- The unit may malfunction when there is a radio interference appeared on the power line. The unit will revert to normal operation when the interference stops.

- Under the environment with electrostatic discharge, the sample may malfunction and require user to reset the sample.

- Under the environment with Fast Transient, the sample may malfunction and require user to reset the sample.

- Remove all elements designed to fasten and protect the product during transport before giving it to children (plastic pieces, labels, wires, etc.).

"IMC.TOYS, S.A., as manufacturer, declares under its responsibility that this device observes the rules of 1999/5/EC Directive, of the European Parliament and of the Council dated 9th March 1999, integrated into Spanish Legislation by Real Decreto 1890/2000 of 20th November".



For any claim about its correct functioning, please contact with:

IMC TOYS, S.A. • Pare Llaurador, 172 • 08224 Terrassa (Barcelona) España • info@imc.es • www.imc.es • NIF: A-08667370

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.
