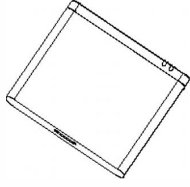
 


<p>8-Pin Bluetooth 4.2 Audio Receiver</p> 	<p>Specifications: Bluetooth Version: Bluetooth 4.2 Frequency Range: 2.4GHz Output Power Category: Class 2 Power Class: Class 2 Bluetooth Mode: A2DP/AVRCP/APT-X/APT-X LL Bluetooth Range: up to 30 Feet</p> <p>Product Diagram:</p>  <p style="text-align: center;">1</p>	<p>1.MF button: Power On, Pause/Play, Disconnect, Eliminate Paired list. 2.Indicators 3.Lightning Port</p> <p>Compatible audio speaker models: BOSE SoundDock 415209; BOSE SoundDock III ; JBL:MS302GM; PHILIPS:DS1155B/93;</p> <p>Power On Place BT4812 onto the Lightning Port of the Speaker, BT4812 will power on automatically to start pairing mode,and red/blue indicator will flash alternately</p> <p style="text-align: center;">2</p>	<p>Power Off When BT4812 is not connected or paired for 10 minutes,it will automatically power off, and indicator will go off.</p> <p>Pairing 1. Insert BT4812 onto the Lightning part of the speaker, BT4812 will start Pairing mode automatically. 2. Search Bluetooth device to find BT4812 via your mobile phone, and click to pairwith it. 3.The LED stays blue, that is, BT4812 successfully pairs with your mobile phone. 4. Some mobile phones need to key in "0000" as the needed pairing password</p> <p style="text-align: center;">3</p>	<p>Play After BT4812 is paired with your mobile phone, the indicator stays blue ,then you can play your favorite music and enjoy it.</p> <p>Disconnecting When BT4812 is paired with your mobile phone, long press the MF button for 3 seconds to disconnect it with your mobile phone, and BT4812 will automatically be on pairing mode, and red/blue indicator will fast flash alternately.</p> <p>Automatically Pairing 1. If the bluetooth receiver paired with the mobile phone or other bluetooth device, it will automatically pair with the paired bluetooth device</p> <p style="text-align: center;">4</p>	<p>when it is powered on.</p> <p>2. When BT4812 is paired with your smart phone and on play status, if your mobile phone is beyond 10 meters distance from BT4812, BT4812 will disconnect automatically. If it is within, BT4812 will pair automatically. [Bluetooth Function is on]</p> <p>3. When the device is powered on, short press the MF button to reboot to automatically pair with the last paired device.</p> <p>Eliminating the paired list. 1. When BT4812 is on status, press the MF button for 5 seconds till the red and blue LED light flash for 1 second simultaneously, then BT4812 will eliminate all its paired records</p> <p style="text-align: center;">5</p>
--	---	---	---	--	---

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm from your body.