



 
 
BH22DT10A

True Wireless Earbuds

Overview

Choose Eartips

Please try medium eartips first as they fit most people.

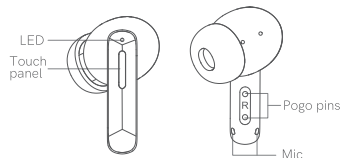

Above pictures are for reference only and practical items may vary.

How to Connect

 
First Time Connection:

1. Pick up both earbuds, pop them back in case then close lid to activate them.
2. Open lid, pick up earbuds and they will auto power on. On phone, search QCY-DT10 and tap to connect.

How to Switch Connection Between Two Devices


Push earbuds into case, open lid and keep pressing charging case button for 3s or until LEDs on earbuds blink white. Then pick up earbuds. On device, search QCY-DT10 and tap to connect.

* Earbuds cannot get connected with two phones at the same time. They will auto reconnect to the last device in connectivity record, if any.

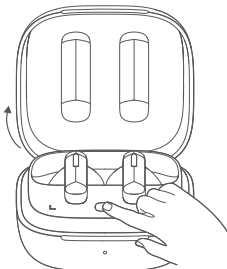

Factory Setting

 1. Push earbuds into case, open lid and keep pressing charging case button for 10s to set earbuds to factory (LEDs on earbuds blink red 5 times).
2. After factory setting, earbuds will auto pair with each other and turn connectable to phone when picked up.

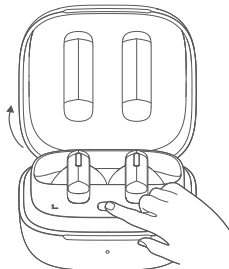


Charging Earbuds

LED will glow solid red when earbuds are charged and turn white for 30s when topped up.


Charging Case

LED will glow solid red when case is charged and turn solid white when topped up.

 How to Wear

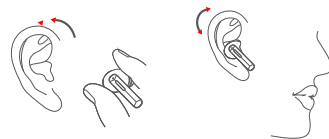

 
1. Please put on earbuds properly then adjust them to fit yourself.
2. Set microphone towards your mouth.
3. It will cause a bad calling or listening experience to wear them in a wrong way.



LED on Case

Battery level of case $\geq 20\%$ (white)
Battery level of case $< 20\%$ (Red)

 Functions

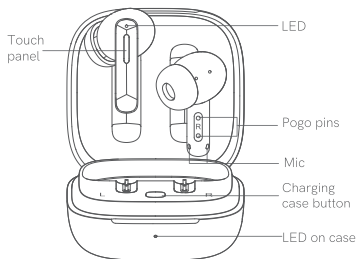

- Ⓜ Power-on: Pick up earbuds or keep touching panel for 2s
- Ⓜ Power-off: Push earbuds into case
- Ⓜ Answer/end call: Double press touch panel
- Ⓜ Ignore call: Keep pressing touch panel for 1.5s
- Ⓜ Skip track forward: Triple press right touch panel
- Ⓜ Voice assistant: Triple press left touch panel
- Ⓜ Playback/pause: Double press left/right touch panel to play/pause
- Ⓜ Gaming mode: Keep pressing left touch panel for 1.5s
- Ⓜ ANC mode: Keep pressing right touch panel for 1.5s to switch among ANC, Normal and Transparency modes

Warranty Card

Warranty Period

12 months after you purchase this item (or you may inquire your local shopper for more details).

Free Service:

Supposing any defects caused by quality issues occur within the warranty period, please take this warranty card and purchase receipts to your distributor for free exchange service.

Model Number:
Date of Purchasing:
User's Name:
User's Phone:
User's Address:
Shop's Name:
Shop's Address:
Comments:

Free exchange service will not be accessed under following circumstances:

1. Damages caused unauthorized disassembly.
2. Defects or physical damages caused by leaking or dropping off.
3. Damages by act of God. Supposing your item is within any damages or defects except the above circumstances, please return to us or your distributor for free repairing.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Hazardous substances and their contents in the item

Part Name	Hazardous Substances								
	Pb	Hg	Cd	Cr (VI)	PBB	PBDE	DEHP	DBP	BBP
Main body	X	○	○	○	○	○	○	○	○
Battery	○	○	○	○	○	○	○	○	○
Ear tips	○	○	○	○	○	○	○	○	○
Accessories	○	○	○	○	○	○	○	○	○
Charging cable	X	○	○	○	○	○	○	○	○

This form is made by SJ/T 11364 regulation.

○ : means that hazardous substance content in the homogeneous materials of this part is within the limits of (EU) 2015/863 regulation.

X : means that hazardous substance content in, at least, one certain homogeneous material of this part is beyond the limits of (EU) 2015/863 regulation, but there is no mature alternative in the industry at present, it still conforms to the EU ROHS Directive in the scope of exemption.

Notes: Please arrange using time properly as your hearing may be damaged by using the device for a long time.
Manufacturer: Dongguan Hele Electronics Co., Ltd.
Address: No. 325 Yuehui Rd, Daojiao Town Dongguan City Guangdong Province China



Tips

1. Before using the earbuds, please read the manual carefully and keep it for future references.
2. The earbuds need to be fully charged prior to first-time use.
3. If the earbuds are left unused for over two weeks, please recharge.
4. Please use the chargers made by qualified manufacturer.
5. If earbuds fail to be found by phone, please re-turn them connectable or restore factory settings. If a program error of phone occurs, please turn off and on Bluetooth function or reboot the phone.

Caveats

1. Never disassemble or modify your earbuds for any reasons to avoid any damages and danger.
2. Do not store the earbuds in extreme temperatures (under 0°C or over 45°C).
3. Avoid using the indicator close to the eyes of children or animals.
4. Do not use the earbuds during a thunderstorm to avoid dysfunction and increasing risk of electric shock.
5. Do not use harsh chemicals or strong detergents to clean the earbuds.

Note: please do not use earbuds for a long time as may damage your hearing.

Model No: BH22DT10A FCC ID: RDR-BH22DT10AL
 Manufacturer: Dongguan Hele Electronics Co., Ltd
 Model No: BH22DT10A FCC ID: RDR-BH22DT10AR
 Manufacturer: Dongguan Hele Electronics Co., Ltd