

QCY Crossky Link (T22) 炬芯ATS3019E中英文说明书 REV:

标注线

折痕线

—— 刀模线

成型尺寸: 80*55mm

材质: 80g哑粉纸 哑油

正反面印刷

反面

QCY Crossky Link Open Sport Headset	Overview	How to Connect	Factory Setting	How to Wear
For better use experience, please scan to download QCY APP before start-up.	On/off button Mic Pogo pins MFB (Vol+/-) Sound hole Above pictures are for reference only and practical items may vary.	Power off the headset and keep pressing on/off button for 3s to turn it connectable. On phone, search QCY Crossky Link and tap to connect.	Power on the headset and disconnect it from device. Then keep pressing MFB for 5s or until LED blinks red and white 3 times to reset it to factory. It will auto power off after factory reset. Multi-point Connection 1. Power on the headset and connect it to DeviceA then turn off DeviceA's Bluetooth; 2. Connect it to DeviceB then turn on DeviceA's Bluetooth. On DeviceA, tap QCY Crossky Link to finish Multi-point Connection.	1.Please put on headset properly then adjust to fit yourself. 2. Set microphone towards your mouth. 3. It will cause a bad calling or listening experience to wear them in a wrong way. LED for Charging LED will glow solid red when headset is being charged and turn solid white when it is topped up.
Functions On/off button Pogo pins Inverted tube hole WFB (Vol+/-) Sound hole Power-on: Keep pressing on/off button for 1.5s Power-off: Keep pressing on/off button for 4s Answer/end calt: Press on/off button Ignore calt: Keep pressing on/off button 1.5s Skip track forward: Keep pressing MFB volume+ for 1.5s Volume up: Press MFB volume+ when calling or playing Volume down: Press MFB volume- when calling or playing Play/pause: Press on/off button Volume down: Press MFB volume- when calling or playing Play/pause: Press on/off button Low latency on/off: Double press on/off button Voice assistant: Triple press on/off button	Warranty Card Warranty Period 12 months after you purchase this item (or you may inquire your local shopper for more details). Free Service: Supposing any defects caused by quality issues occur within the warranty period , please take this warranty card and purchase receipts to your distributor for free exchange service. Model Number: Date of Purchasing: User's Name: User's Name: User's Address: Shop's Name: Shop's Address: Comments: Free exchange service will not be accessed under following circumstances: 1. Damages caused unauthorized disassembly. 2. Defects or physical damages caused by leaking or dropping off. 3. Damages by act of God. Supposing your item is within any damages or defects except the above circumstances, please return to us or your distributor for free repairing.	FCC Statement This equipment has been tested and found to comply with the imits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.	Tips 1. Before using the earbuds, please read the manual carefully and keep it for future references. 2. The earbuds need to be fully charged prior to first-time use. 3. If the earbuds are left unused for over two weeks, please recharge. 4. Please use the chargers made by qualified manufacturer. 5. If earbuds fail to be found by phone, please re-turn them connectable or restore factory settings. If a program error of phone occurs, please turn off and on Bluetooth function or reboot the phone. Caveats 1. Never disassemble or modify your earbuds for any reasons to avoid any damages and danger. 2. Do not store the earbuds in extreme temperatures (under 0°C or over 45°C). 3. Avoid using the indicator close to the eyes of children or animals. 4. Do not use the earbuds during a thunderstorm to avoid dysfunction and increasing risk of electricshock. 5. Do not use harsh chemicals or strong detergents to clean the earbuds. Note: please do not use earbuds for a long time as may damage your hearing.	Notes: Please arrange using time properly as your hearing may be damaged by using the device for a long time. Manufacturer: Dongguan Hele Electronics Co., Ltd. Address: No. 325 Yuchui Rd. Daoljiao Town Dongguan City Guangdong Province China Rohs Madein China

- 1.油墨使用需符合环保要求新国标 GB 38507-2020
- 2.尺寸要求: 图面标注尺寸为必检尺寸
- 3.环保要求:符合和乐环保标准《HL-QP-RD-03》&包材指令
- 4.可靠性要求:符合和乐物料可靠性测试规范《HL-WI-QA-026》
- 5.其它方面要求:

_											
	名称	公差:mm		东莞市和乐电子有限公司							
	外箱	±5.0									
ı	彩盒	±1.0		料号	30. 001. 00	ID		DQE			
Ī	标签	±0.5	人表	名称	Crossky Link中英文说明书	软件		市场			
	说明书	±1.0	确认	材质	80g哑粉纸 哑油	电子		翻译			
ļ		宽:士3,高:土15	菜	工艺		结构		包装	黄丽巧		
E	防爆袋	宽:士3,高:土15	炎只 .	物料承认 书编号		APP		品牌			