

用户使用手册

尖叫
QY7



**BLUETOOTH
4.1**

**BLUETOOTH HEADSET
USER MANUAL**

Model number: QY7 Version: Bluetooth V4.1

目录

Introduction	7
Accessories list	7
General function	8-9
Charging your device	9
Pairing to a computer and Entertainment	10
Pairing to Mobile phone or other device	10
Warning	11
Technical specification	11
FAQ	11
Safety Rules	12
Service and Support	12
Protection to Fix Card	13-14


Introduction

Congratulations, and thank you for choosing the Sport Bluetooth Stereo Earphone. This manual will help you operate the Sport Bluetooth Stereo Earphone, but you should first familiarize yourself with the Bluetooth functionality of your mobile phone or other devices before using the Sport Bluetooth Stereo Earphone Safety Rules.

1. Please follow the rules depicted in this manual closely to ensure your safety. Before using this Sport Bluetooth Stereo Earphone, we would strongly encourage you to read through this user manual.
2. Be more wary of any edges, uneven surfaces, metal parts, accessories and its packaging so as to prevent any possible injury or damage.
3. Do not modify, repair or dismantle this Bluetooth Stereo Earphone. Doing so may result in fires, electric shocks, complete breakdown of this Sport Bluetooth Stereo Earphone, etc. All of which, are not covered under warranty.
4. Do not use any diluents or volatile liquid to clean the Sport Bluetooth Stereo Earphone.
5. Do not use the Sport Bluetooth Stereo Earphone in a hazardous location.

Accessories List

1X QY7 Sport Bluetooth Stereo Earphone 1X USB Charger Cable
4X ear rubber 4X ear hook

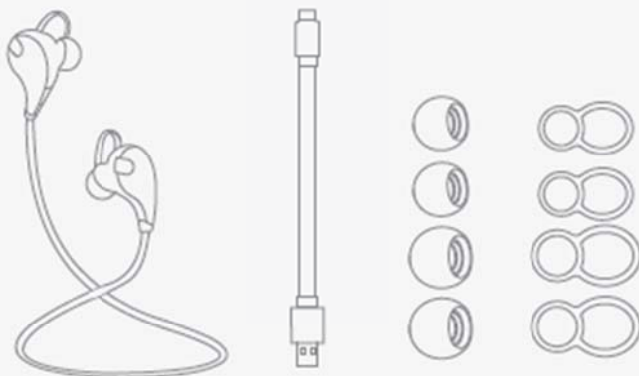

General Functions

Power On: Press the "power" button for 3 seconds when the device is off, (blue LED slowly flashes and a "power on" voice beep).

Enter the pairing mode: In power off mode, press the "power" button to power on the device and then sequentially hold on for 5 seconds.(blue LED and red LED quickly flash alternately with "pairing" voice).

Pairing: Use a Bluetooth function mobile phone or other Bluetooth Master device and to perform pairing action (detail refer to the chapter about pairing).

Play/pause: Press "play/pause" to play when the device is pausing and press "play/pause" to pause when the device is playing.

Volume up: Press "+" is for volume up.

Volume down: Press "-" is for volume down.

Playback/Previous: Press "+" 1 second is for previous music, press "-" 1 second is for the next music.

Power off: Press the "power" button for 3 seconds when the device is off (a "power off" voice beep and all LED is off).

Low battery warning:(a "battery low" voice beep and the red LED flash)

Charging : Charging via USB charging cable connected to a computer USB port (red LED is on).

Answer call: Press the "call" button once while the call is coming.

End call: Press the "call" button once to end call.

Transfer call voice: Press the "call" button for 2 second to transfer the call voice between the mobile phone and device.

Reject call: Double press the "call" button to reject call when the call is ringing.

Connect two mobiles simultaneously: press the "power" button for 3 seconds to power on the device, then keep on press the "call" button for 5 seconds to come into pairing mode. Find the name of device on two mobile phones, then press the name for pairing and connecting.

Connecting successfully: when there is a call from the first mobile phone,

press to receive the call. At that time, there is a call from the second mobile phone, press the "OCY" button once to hold the call of the first mobile phone, and receive the call from the second mobile phone.

Transfer calls between two mobile phones: Double press the "OCY" button can transfer the calls between two mobile phones.

Replay the phone: In stand-by mode or playing music, double press the "OCY" button

Mute: When talking, double press the "OCY" button to activate the function

Default setting: Charging it and press the "OCY" button for 3-5 seconds, the purple LED flash 3 times.

Turn off the Voice Notification: Entering the pairing mode, press "-" for 3 seconds, the red LED flash 3 times.

Turn on the Voice Notification: Entering the pairing mode, press "+" for 3 seconds, the blue LED flash 3 times.

Battery level check: In the standby mode, press "+" and "-" buttons at the same time, check the LED: When it is blue, the battery is in high level; When it is purple, the battery is in middle level; when it is red, the battery is in low level.

Charging your device

1. Connect the charger to the charging socket on the headset.
 2. During charging, the indicator light will turn red.
 3. When the headset is fully charged, the red indicator light changes to blue.
- Unplug the charger from the headset.

Use only QCY approved chargers, Unauthorized or Non-QCY chargers could cause damage to the headset, it could also invalidate any warranty on the product.

Repeatedly charging and discharging of the headset, over time will cause the battery performance to diminish, This is normal for all rechargeable batteries.

Pairing to a computer and Entertainment:

1. If there is no Bluetooth function supported by your computer, a Bluetooth adapter is necessary. Fix the adapter with your computer and ensure its Bluetooth function is activated.
2. Turn on the device go to the pairing mode.
3. Open the Bluetooth software (such as BlueSoleil) installed on your computer, and select search your Bluetooth devices function. Refer to user manual of the Bluetooth software for more information.
4. After a few seconds, the device name will be listed. Select the device name icon and click right button of mouse to select pairing item, then select to connect with audio device.
5. Open your media player to play music, watch TV/movie and play game, then you can hear all the sound or music from the device.

Pairing to Mobile phone or other device:

Pairing means unique and encrypted wireless connection between two Bluetooth devices when they agree to communicate with each other.

In pairing mode, two devices should be placed close enough to each other.

Pairing to a phone and Entertainment:

1. Activate the Bluetooth feature on your phone and search for the Bluetooth headset. (see your phone's user manual)
2. Turn on your device go to the pairing mode.
3. Select the headset from the list of devices found by your phone.
4. If requested enter the Bluetooth PIN 0000(4 zeros) to pair and connect the headset to your phone.
5. Your phone will confirm the pairing, and then press Yes/Ok.
6. Select to connect with device from your phone. You can play music, watch TV / movie and play game with your phone, then you can hear all the sound or music from the device. Also you can control the player by operating the device. Example, volume level and next music.

Warning:

You Must select a qualified charger .from a regular manufacturer .

You Must charge the bluetooth headphone If it has been not used for more than 12 months .

Technical specification

Bluetooth Specification:4.1+EDR

Bluetooth Profile: HFP1.6, HSP1.2, AVRCP1.4, A2DP1.2

RF Range:10m

Noise reduction:CVC6.0

Stand-by time: about 175 hours

Calculating Conversation Time: about 5 hours

Charging time: About 2 hours

Dimension (L × W × H):189.9x61.2x75.1mm

Weight : 16.4g

FAQ

Q: Why can not turn the headset on?

A: Make sure your device is fully charged before using it for the first time.

Your device can not be turned on if battery level is very low.

Q: There is no sound when playback?

A: Check the connection between your device with phone or computer, if the connection is not established, please reconnect again. And adjust the volume level to a suitable level.

Q: Phone or computer can't find your device?

 
A: Check the Bluetooth is "visible" in your phone or computer, if pair timeout, pairing mode will exit, please re-enter pairing mode. If your phone application have some problems, please re-start the phone. If your device has problem, re-start or reset it.

Safety Rules

- 1) Never disassemble or modify your headset for any reason. Doing this may cause the headset to malfunction or become combustible. These damage to your device can void your manufacturer's warranty.
- 2) Do not allow your device to get wet, liquids can cause serious damage. Water damage to your device can void your manufacturer's warranty.
- 3) Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). Extreme temperatures can cause the deformation of the device and reduce the charging capacity and life of your device.
- 4) Avoid using your device's light close to the eyes of children or animals.
- 5) Do not use the device during a thunderstorm. Thunderstorms can cause the device to malfunction and increase the risk of electric shock.

Service and Support

If your device is not performing as it should, please take it to your local service providers or dealer for service.



Protection to Fix Card

Warranty Period:

12 months from the date you purchase.

Free Service:

During the warranty period, if there is any breakdown which caused by the product 's own quality, pls contact your dealer by this warranty card and purchasing invoice to enjoy free maintenance.

Free maintain won' t be given under the following circumstance:

- 1.No Protection to Fix Card or the product repair labels is damage
2. The damage caused by the dismantle movement of a non-our-company authorized maintainer.
- 3 .The damage due to water or drop and machinery caused by human.
4. The breakdown and the damage caused by the Force majeure.

Customer service information:

Customer Name	
Customer Phone	
Customer Address	
Product Name	
Product Model Number	
Purchase Date	
Dealer	
Warranty Date	

Manufacturer: Dongguan Hele Electronics Co.,Ltd
Manufacturer Address: DaLingYa Industrial Zone,Daojiao
Town,Dongguan City,Guangdong,China. (No.5 Dalingya , Yuehui
Rd- QCY Ecological Garden)
Manufacturer Phone: 4008-306-708
Manufacturer Zip Code: 523000

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.