


铜版纸，折页双面印刷，82 *85 mm

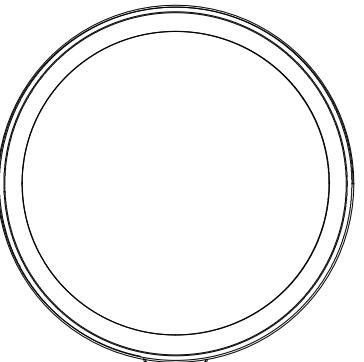

USER MANUAL
ProMini M18


Please read the manual carefully before use and keep it well for further use

Package Contents

- Rechargeable speaker
- TYPE-C Charging cable
- User guide


Product Description

Product Top

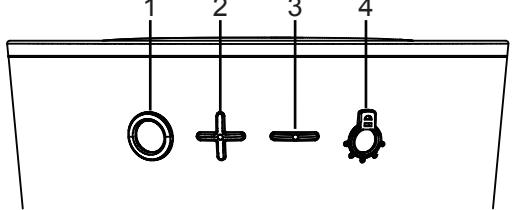

1. Hold the button for power ON/OFF, press the button to Play/Pause music.
2. Press it for Volume +. Hold it for Next song.
3. Press it for Volume -, Hold it for Previous song.
4. Press it to change the LED light color or turn off the light

Product Back

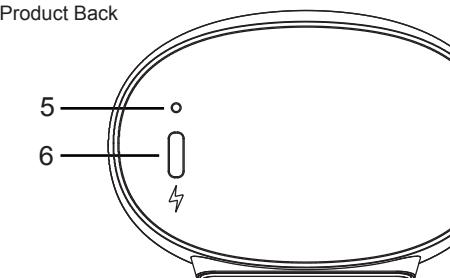

5. Charge LED indicator(Red LED indicates the unit is charging and not full. Red LED will turn off when fully charged.)
6. DC 5V charge in (5V/1000mA)

Charging The Battery

1. Use the included TYPE-C Charging cable, Plug one end into the DC 5V jack located at the side of the unit , Plug the other end into a USB powered port or any other USB AC adapter (not included).

2. The battery is fully charged in about 3.5 hours .(Charging time will be longer if play music while charging .)
3. The red LED light indicates that the unit is charging , The red LED turns off when the battery is fully charged , You can disconnect the charging cable when charging is complete.

Bluetooth Play Mode

If you are using a Bluetooth audio device, make sure the working distance is within 20 - 30 ft, a different environment may have effect on the working distance.

1. Press and hold the **O** button to turn ON the speaker, The speaker will give a beeping sound to indicate it is in Bluetooth mode.
2. Turn on the Bluetooth on your audio device.
3. Searching Devices Choose "**Gladorn M18**". No password is required. If your device does require a password, type "0000"
4. Adjust the volume on your audio device to the desired level.
5. Press the **+** or **-** button on the unit to adjust the system volume.

NOTE : The speaker will power off automatically after 30 mins if you don't operate it or play music.

TWS(True Wireless Stereo) Connection

1. Ensure neither speaker is connected to your device via Bluetooth and turn Bluetooth OFF on your device.
2. Press and hold the **O** button to turn on the speakers.
3. Double click the **O** button on any of the speaker,you will hear a beep sound when the two speakers are paired.
4. Then you can turn on the Bluetooth on your device to select "**Gladorn M18**" for pairing.
5. You will hear a beep sound once connected with your bluetooth device, then you can play the music .

NOTE: Once paired, the two speakers will automatically pair each time they are turned ON, should you wish to unpair them, double click the **O** button on either speaker. The speaker will beep indicating that the speakers are no longer paired.

TROUBLESHOOTING

Problem	What to do
No power	Make sure your speaker is turned on. Makes sure your speaker is completely charged.
No sound	<ul style="list-style-type: none"> • Make sure the volume of your speaker is not at the minimum setting. • Make sure the connected audio device is playing audio.
Sound is distorted.	Turn down the volume of the speaker or the connected device.
Cannot pair the speaker with my Bluetooth device	<ul style="list-style-type: none"> • Make sure the Bluetooth mode of your device is turned on. • Your Bluetooth device may be out of range. Try moving it closer to the speaker. • Move your Bluetooth device and/or the speaker away from other devices that generate electromagnetic interference, such as phones, microwave oven, wireless network routers, or other Bluetooth devices.

! Warnings

To prevent the possibility of the battery from leaking, heating, fire .please observe the following precautions:

- 1: Please use attached USB charging cable in the package to charge unit
- 2: Please disconnect charge cable after full charged the unit, Do not charge the unit for long time after unit full charged
- 3: Do not immerse the product in water and seawater
- 4: Do not use and leave the product near a heat source as fire or heater(for example, at strong direct sunlight or a vehicle in extremely hot conditions).Otherwise, it can overheat or fire or its performance will be degenerate and its service life will be decreased.
- 5: Do not place it into water, any other liquid ,Fire or any heater machine
- 6: Do not strike or throw the product.
- 7: Do not use it in a location where static electricity is great, otherwise, the safety devices may be damaged, which will cause hidden trouble of safety.
- 8: The batteries should be stored at room temperature, charged to about 30% to 50% of capacity. In case of over-discharge, batteries should be charged for one time every.
- 9: months while storing and batteries should be discharge and charge after being stored more than a year in order to activate it

and restore energy.

10: Please following Waste battery recycling method to dispose the unit



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of their life separately from your household waste.

There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment.

To preserve our environment, dispose of used batteries according to your local laws or regulations.

Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

FCC ID: RDZ-PR0MIN18 Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



ÉLÉMENS D'EMBALLAGE
À SÉPARER ET À DÉPOSER
DANS LE BAC DE TRI