 


Waterproof Bluetooth Speaker
Model No.: ProMini M7

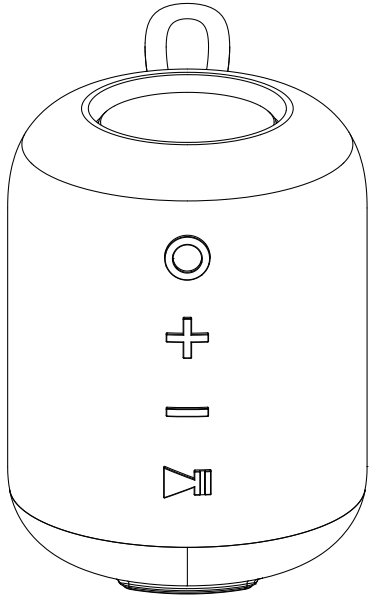

USER MANUAL

 


Please read the manual carefully before use
and keep it well for further use

Package Contents


- Rechargeable Speaker
- Micro USB Charging cable
- User guide

Product Description

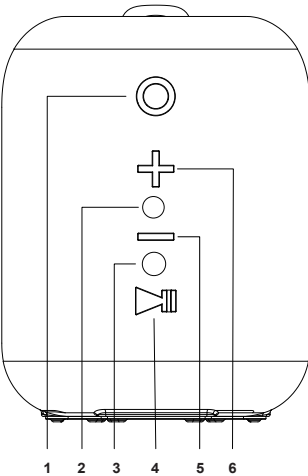


1. Power on/off audio mode and TWS pair. (hold the button for power on/off, press the button for mode select, Press Twice quickly for TWS pair mode
2. LED function indicator.
Bluetooth mode :
Search Status :White LED quick flash Successful pairing: White lights flash slowly
Line in mode :
White LED light stay on
SD play mode
White LED light flashes quickly twice and stops once
Mute :
White light is breathing slowly flash
3. Microphone
4. Press for Play/Pause /Handfree, Hold on for disconnect Bluetooth.
5. Press **-** Button for volume down, hold on for previous song.
1. Press **+** Button for volume up, hold on for next song.

 - 1: Micro SD Jack
2. Line in input
3. Charge LED indicator (Red LED indicates the unit is charging and not full. Red LED will turn off when fully charged.
4. DC 5V charge in (5V/1000mA)

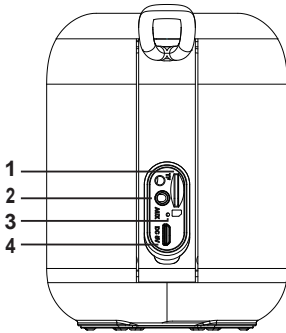

Charging The Battery

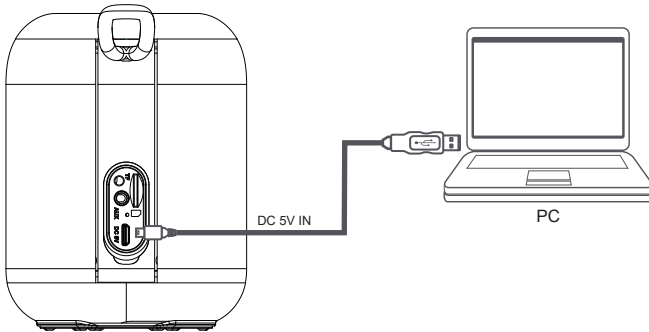 


Charging in

1. Use the included USB Charging cable, Plug one end into the DC 5V jack located at the side of the unit , Plug the other end into a USB powered port or any other USB AC adapter (not included).
2. The battery is fully charged in 3.5 hours .(Charging time will be longer if play music while charging .)
3. The red LED light indicates that the unit is charging , The red LED turns off when the battery is fully charged , You can disconnect the charging cable when charging is complete.

AUX Play Mode

1. Hold the **○** button to turn on the unit
2. Plug one end of 3.5mm audio cable into the headphone or line-out jack of your audio device.Plug the other end of the cable into the AUX jack located on the Side of the unit, Unit will go to Aux in mode automatically ,white LED will stay one .
3. Adjust the volume of your audio device to the desired level.
4. Press the **+** or **-** Button on the unit to adjust the system volume.
5. Press **▶||** button at the same time to MUTE the system volume.

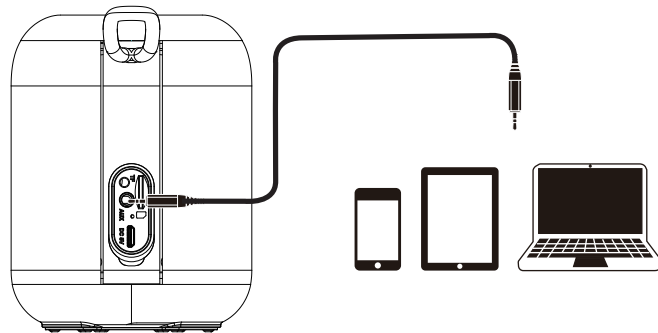 


Bluetooth Play Mode

If you are using a Bluetooth audio device, make sure the working distance is within 20 - 30 ft, different environment may have effect on the working distance.

1. Press and hold **○** button to turn ON the unit, The unit will give a beeping sound to indicate it is in Bluetooth mode, blue LED will flash quickly.
2. Turn on the Bluetooth on your audio device
3. Searching Devices Choose " M7 ". No password is required.If your device does require a password,type"0000"
4. Adjust the volume on your audio device to the desired level.
5. Press the **+** or **-** Button on the unit to adjust the system volume.
6. Hold the **+** or **-** Button on the unit to adjust the Previous/Next song.
7. Press **▶||** Button at the same time to pause/play music.

 NOTE : The speaker will power off automatically after 30mins if you don't operat it or play music.

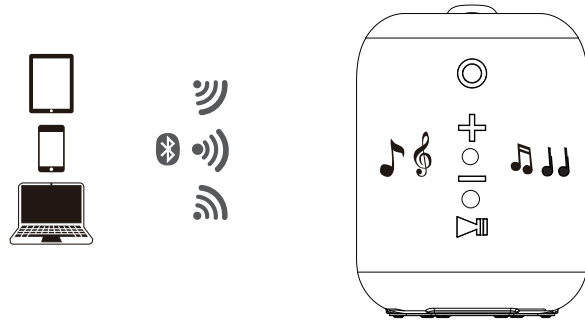

Making Calls with a Bluetooth Mobile Phone

Before you make a call with the unit,you need to pair and link your Bluetooth-enabled phone with the unit. Please refer to Pairing procedure

1. To answer a call, press the **▶||** Button. Now you can use the unit as a speaker phone.

3. To end the call, press the **▶||** Button.

NOTE : The microphone is located on the upside of the play/pause button.

TWS Function

1. Hold the **○** button to turn on the two unit
2. Press **○** button twice to enter TWS pair mode ,White LED light will flash quickly
3. Two unit paired ,Main unit White LED light is stay on , another unit white LED light is flash status
4. Turn on bluetooth of audio device and pair with main unit .
5. Play the music from audio device ,two unit will be work as stereo sound , one is left channel ,another is right channel

Micro SD Play Mode

1. 1, Hold the **○** button to turn on the unit
2. Plug your Micro SD card to the SD card port on the side of the unit . The unit will entry the SD card play mode automatically .
- 3.Press the **+** or **-** Button on the unit to adjust the system volume.
5. Hold the **+** or **-** Button on the unit to adjust the Previous/Next song.
- 4.Press the **▶||** Button to pause/play music.

TROUBLESHOOTING

Problem	What to do
No power	Make sure your speaker is turned on. Makes sure your speaker is completely charged.
No sound	<ul style="list-style-type: none">• Make sure the volume of your speaker is not at the minimumsetting.• Make sure the connected audio device is playing audio.
Sound is distorted.	Turn down the volume of the speaker or the connected device.
Cannot pair the speaker with my Bluetooth device	<ul style="list-style-type: none">• Make sure the Bluetooth mode of your device is turned on.• Your Bluetooth device may be out of range. Try moving it closer to the speaker.• Move your Bluetooth device and/or the speaker away from other devices that generate electromagnetic interference, such as phones, microwave oven, wireless network routers, or other Bluetooth devices.



To prevent the possibility of the battery from leaking, heating, fire ,please observe the following precautions:

Warnings

- 1: Please use attached USB charging cable in the package to charge unit
- 2: Please disconnect charge cable after full charged the unit, Do not charge the unit for long time after unit full charged
- 3: Do not immerse the product in water and seawater
- 4: Do not use and leave the product near a heat source as fire or heater
- 5: Do not place it into water , any other liquid ,Fire or any heater machine
- 6: Do not strike or throw the product.

Cautions

- 1: Do not use or leave the product at very high temperature (for example, at strong direct sunlight or a vehicle in extremely hot conditions).Otherwise, it can overheat or fire or its performance will be degenerate and its service life will be decreased.
- 2: Do not use it in a location where static electricity is great, otherwise, the safety devices may be damaged, which will cause hidden trouble of safety.
- 3: The batteries should be stored at room temperature, charged to about 30% to 50% of capacity. In case of over-discharge, batteries should be charged for one time every.
- 4: months while storing and batteries should be discharge and charge after being stored more than a year in order to activate it and restore energy.
- 5: Please following Waste battery recycling method to dispose the unit .



This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities.

If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste.Please recycle where facilities exist.Check with your Local Authority or retailer for recyclingadvice. (Waste Electrical and Electronic Equipment Directive)

When electrostatic discharge occur, this product may malfunction, and need to restart or reset it for recover

RF Operating frequency range : 2402-2480MHz

Note: If the products use in outdoor or splash status ,Do please close the silicon cover for USB charge ,SD card,Aux in which locate in the side of product ,in case of products not damage

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help
- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.