


INSTALL BATTERIES & TURN ON POWER

CONTROLLER

1. Remove Battery Cover and insert the 9V Battery in the correct polarity as shown. Replace Cover.

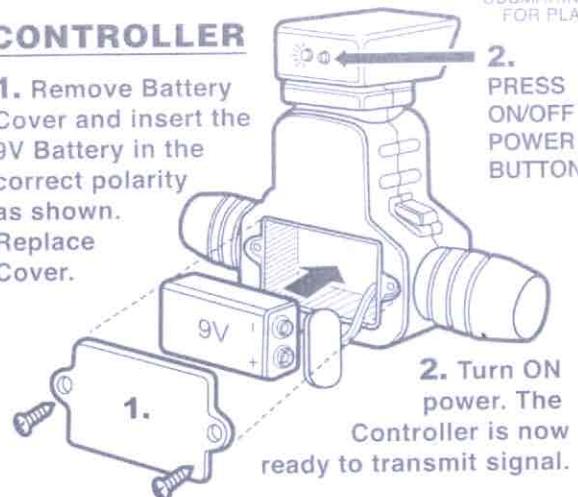


ADULT SUPERVISION AND ASSISTANCE IS REQUIRED TO PREPARE SUBMARINE FOR PLAY

2. PRESS ON/OFF POWER BUTTON

2. Turn ON power. The Controller is now ready to transmit signal.



SUBMARINE

PRESS ON/OFF POWER BUTTON

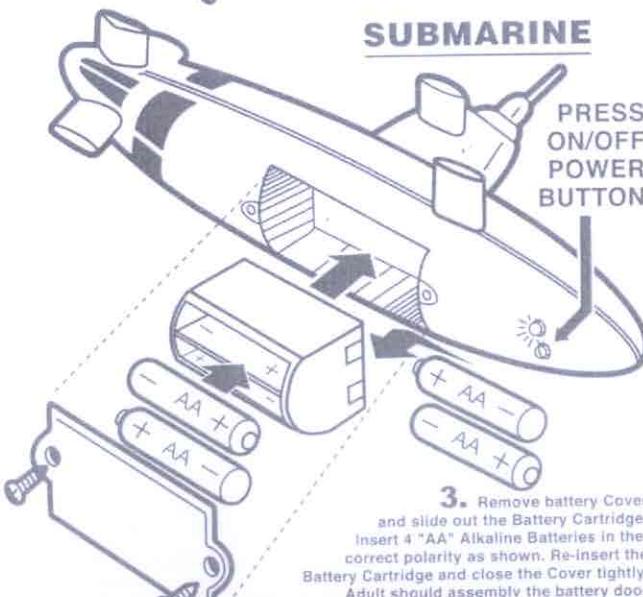

3. Remove battery Cover and slide out the Battery Cartridge. Insert 4 "AA" Alkaline Batteries in the correct polarity as shown. Re-Insert the Battery Cartridge and close the Cover tightly. Adult should assemble the battery door firmly while replacing batteries.

4. Press the ON/OFF Power Button. The LED will light up indicating power is ON and the Submarine is ready for play.

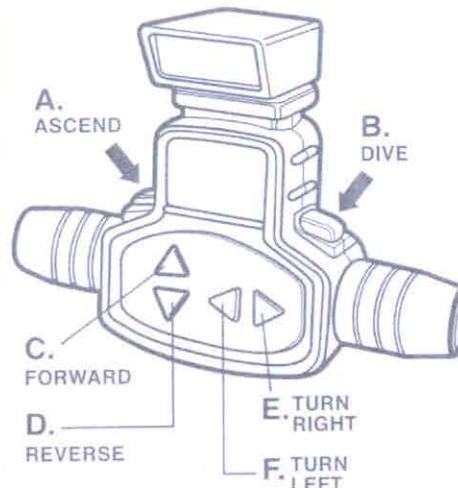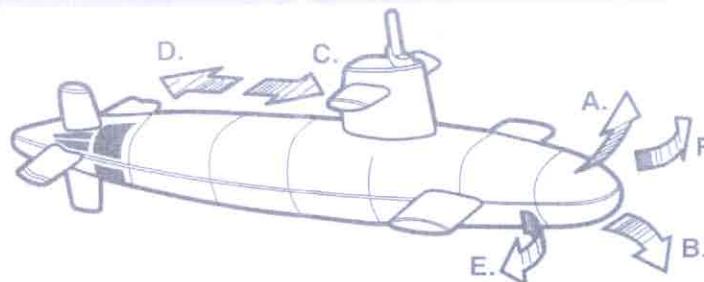

- PERFORMANCE MAY BE AFFECTED IF TWO OR MORE DIRECTION KEYS ARE PRESSED TOGETHER.
- DO NOT MIX OLD AND NEW BATTERIES.
- DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.

MADE IN CHINA

ITEM NO.13000

OMNI-DIRECTIONAL MANEUVERABILITY

You now control the ultimate in Submersible Submarines. You can DIVE. You can ASCEND upward, back to the surface. FORWARD, REVERSE, and RIGHT or LEFT Turning are Radio Controlled signals transmitted with immediate reactions from your Controller.

WARNING:

- Make sure the battery door is closed tightly before placing the submarine in the water. Battery compartment door must be sealed water-tight to prevent water leaking into the battery compartment.
- Do not play the submarine in salt water or beach. Clear, clean water such as in a swimming pool or bath tub is the best performance environment.
- When not playing with the Submarine, remove it from the water. Dry the submarine with a soft cloth or paper towel wiping off all moisture. Remove any debris from external parts. Remove the batteries before storing.
- Do not play outdoors in a thunderstorm.
- Do not touch the moving propellers with your hand. Stopping the propellers with the power on is dangerous and may cause a short circuit or burn out the motor.
- Do not get the batteries wet as it will cause a short circuit.

FCC RULES - PART 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.