

GETTING READY FOR PLAY *

INSTALL BATTERIES & TURN ON POWER

*ADULT SUPERVISION AND ASSISTANCE IS REQUIRED TO PREPARE SUBMARINE FOR PLAY

CONTROLLER


1. Remove Battery Cover and insert the 9V Battery in the correct polarity as shown. Replace Cover.
2. PRESS ON/OFF POWER BUTTON
2. Turn ON power. The Controller is now ready to transmit signal.

SUBMARINE

PRESS ON/OFF POWER BUTTON

3. Remove battery Cover and slide out the Battery Cartridge. Insert 4 "AA" Alkaline Batteries in the correct polarity as shown. Re-insert the Battery Cartridge and close the Cover tightly. Adult should assembly the battery door firmly while replacing batteries.
4. Press the ON/OFF Power Button. The LED will light up indicating power is ON and the Submarine is ready for play.

HOW TO CONTROL YOUR SURMARINE

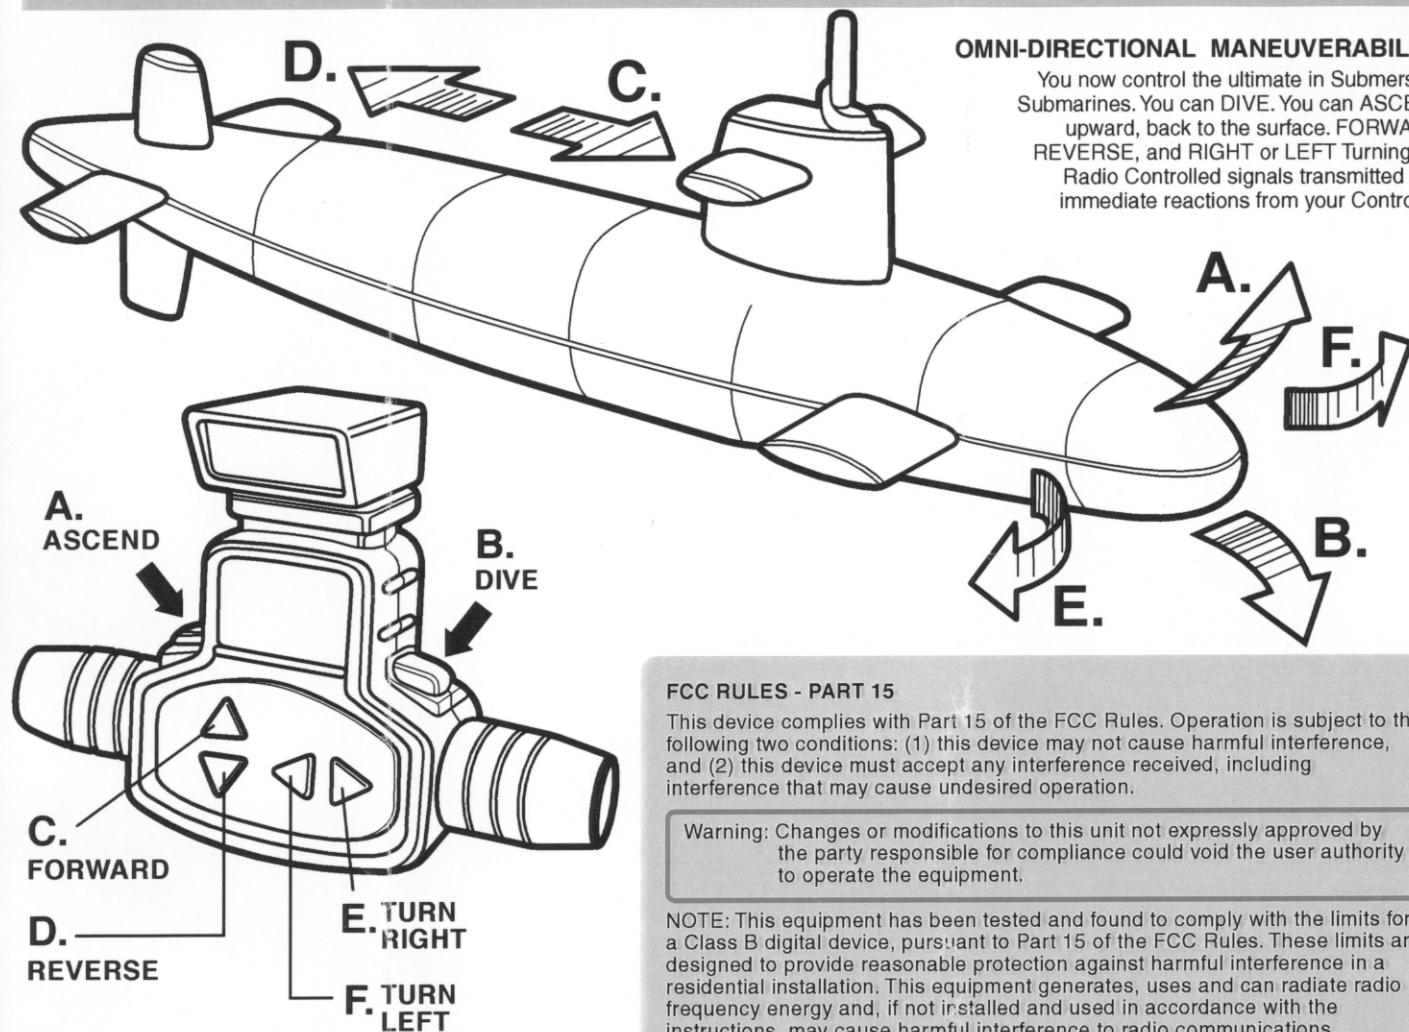

OMNI-DIRECTIONAL MANEUVERABILITY

You now control the ultimate in Submersible Submarines. You can DIVE. You can ASCEND upward, back to the surface. FORWARD, REVERSE, and RIGHT or LEFT Turning are Radio Controlled signals transmitted with immediate reactions from your Controller.

FCC RULES - PART 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.