



Internet Tablet
SC-75JB

User Manual



FCC STATEMENT

1. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

The screen is blank when the system is turned on.	• The system is in standby (power saving) mode.	• Press the power button, if it is not working, hold the power button for about 10 seconds to power off the device, then press the power button again to turn on the device.
---	---	--

Note: If there are any differences between the contents of the User Manual and the product, please regard the actual product as the truth.

Can not access the web.	- You have not connected the web. - You have not opened your device's wireless communication function. - You connected the unauthorized web or enter the wrong password.	- Connect the web, if you have connected the web well, you can see wireless signal symbol in the status bar at the bottom of the screen. - Prefer P₁₁ to P₁₄ in this manual to connect the web. - Reconnect the authorized web and enter the correct password.
There is no sound coming from the device.	- The volume is set to the lowest level. - The sound is output through the connected earphone.	- Turn up the volume. - Pull out the earphone and the sound will output through the built-in speaker.
There is serious noise coming from the device.	- The earphone plug is dirty. - The media files you are using have broken.	- Clean up the earphone plug. - Try to use the other media files.

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Table of Content

Introduction	1
Important Safety Precautions	1
Package contents	3
Key Features	4
A Quick Look at Your Device	5
Basic operation	6
Charging the battery	6
Inserting Micro SD card	6
Unmount & remove the Micro SD card	7
Turning on the tablet	8
Unlock (enter) the tablet	8
Lock (standby) the tablet	9
Turning off the tablet	9
Home screen	9
Connections	11

Trouble shooting

Before resorting to maintenance service, please kindly check by yourself with the following chart.

Symptom	Cause(s)	Remedy
The device can not be turned on.	- The battery is used up. - Using the improper power adapter. - The power adapter is not connected well.	- Use the power adapter that was included with your device to charge the battery. - Reconnected the power adapter.
The device can not recognize the memory card.	- The memory card inserted is not a certified one. - You have inserted the memory card incorrectly.	- Change to the certified memory card. - Unmount the memory card, and inserted it again use correct method.

factory default settings:

1. Select "Settings" from the Apps screen.
2. Select "Backup & reset".
3. Select "Factory data reset" (this will erase data stored on the device so make sure to back up your data prior to using this option).



Connecting to Wi-Fi.....	11
Connecting the tablet to a PC or MAC.....	13
Connecting to TV Set.....	15
Some Pre-loaded Applications	16
Introduction of Basic Functions.....	17
Camera and video chat.....	17
Setting up e-mail	19
Transferring and managing files.....	20
Multimedia.....	24
Settings.....	25
Restore	26
Trouble shooting	28

Introduction

Thank you for purchasing this device. This device enables you to surf the internet via wireless connection with multimedia playback. This manual contains important safety information and operation instructions, so please read all the instructions carefully before using the device and keeps it for future reference.

Note: We have done our best to produce a complete and accurate manual. However, we cannot ensure there are no errors or omissions. We also have no responsibility for damages or losses of data caused by improper operation.

Important Safety Precautions

Always follow these basic safety precautions when using your device. This will reduce the risk of fire, electric shock, product damage and personal injury.

- Warning: Do not expose the device to rain or moisture to prevent fire or electric



Restore

In the event that the tablet freezes or does not function properly, try correcting the problem by long pressing the Power button for about 10 seconds until shutdown to reset your tablet.

Note: If the problem persists, it may be necessary to restore the tablet to the



Press & hold a song title and this options window will appear.

Settings

Settings app:

Customize and select options to increase battery performance, Wi-Fi options, manage apps and more.

shock hazard.

- Do not use the earphone at a high volume to prevent hearing damages.
- Do not expose the device to water (dripping or splashing) and no objects filled with liquids can be placed on the unit, such as vases.
- Keep the device away from direct sunlight and heat source such as radiators or stoves.
- Do not place the device on unstable cart, stand, tripod, bracket or table. The unit may fall, resulting in possible damage or injury.
- Never place heavy or sharp objects on the LCD panel or device.
- Unplug the power from the outlet when the unit is not in use.

Cleaning

- Before cleaning the device make sure it is turned off.
- Never spray or pour liquid directly onto the screen or plastic casing.
- To clean the LCD screen, wipe the screen with a clean, soft, lint-free cloth.

- To clean the plastic casing and the device, use a soft, dry cloth.
- **Disclaimer:** Authorized Dealer does not recommend the use of any ammonia or alcohol-based cleaners on the LCD screen or plastic casing. Some chemical cleaners have been reported to damage the screen and/or display case. Authorized Dealer will not be liable for damage resulting from the use of any ammonia or alcohol-based cleaners.

Package contents

- Tablet PC
- Power Adapter
- USB cable
- User Manual

3. If you select "Copy" or "Move", " HoldingDownload" message will appear on the top of the screen, press and hold on a folder and select "Paste into folder" to copy the file there.




Multimedia


Use the tablet to store and play music, pictures and video files.

Music

Tap Music icon  to access music files stored on the tablet.

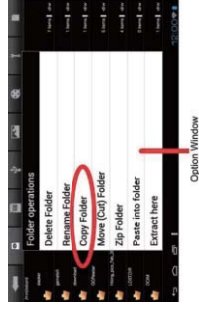


2. Select a file or folder.

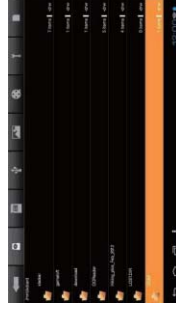

Key Features

- Operating System: Android 4.1
- Chipset: All Winner A10, ARM CORTEX-A8 processor, 1.2 GHz
- RAM: 512MB DDR3
- Graphic accelerator: Support Open GLES 2.0/open VG1.1
- 7" capacitive multi-touch screen
- Display resolution: 800*480 (16:9)
- Network: WI-FI (802.11 B/G/N)
- Internal Memory: 4GB; External Memory: Support Micro SD card (up to 32GB)
- Camera : 2.0M Pixel (Rear) / 0.3M Pixel (Front)

A Quick Look at Your Device

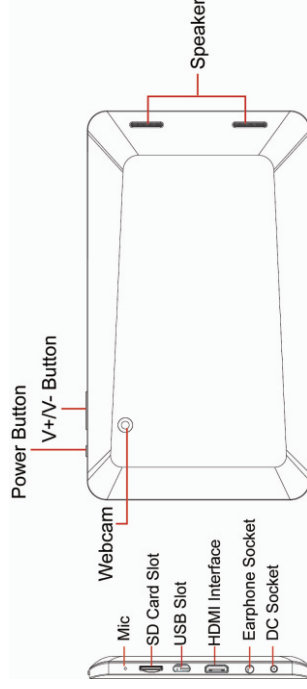


Press to open
Press & hold for options

Copy, move or delete a file or folder

1. Press and hold a file or folder until the options window appears, then select an option from the options window.

File Manager

To view, open, copy or delete files on the internal memory of the tablet, inserted Micro SD card or USB stick, select "File Manager" on the Apps screen.

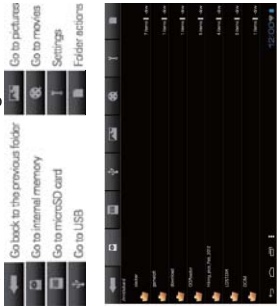

Briefly press a file or a folder to open it.

Basic operation

Charging the battery

Connect the tablet to the power source using the included power adapter.

Note: The tablet may also be charged by connecting it to a computer using the USB cable. However, it will take much longer to fully charge.

Battery Tips:

- Turn off Wi-Fi when it's not in use.
- Lock the tablet (the display is off) to shorten charging time.
- To optimize battery time and performance, adjust the "Brightness" options in the Settings app.

Inserting Micro SD card

The tablet supports Micro SD cards up to 32GB (not included).

1. Insert the card face up into the SD card slot until it clicks and locks into place.
2. Once the card is mounted, the card icon appears on the Status Bar.



3. To access the Micro SD card, select "File Manager"  from the Apps screen.

Unmount & remove the Micro SD card

1. Open "Settings", Select "Storage".
2. Select "Unmount shared storage".
3. It is now safe to remove the card from the tablet.
4. To remove the card, gently push it in until it pops out.




Transferring and managing files

It is possible to manage and transfer media files to the tablet by connecting it to your computer.

Video chat

Use the built-in, front facing camera to video chat with friends and family.

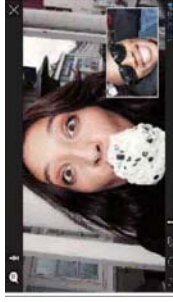

Setting up e-mail

Select  "Email" on the Home or Apps screen and follow the instructions to set up your email account on the tablet. (You must connect to WI-FI before accessing or setting up email accounts).

Note:

- Do not use force when inserting the card.
- Make sure to unmount the card before taking it out of the tablet.

Conserve Internal Memory

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Note: Transfer and store media files such as music, pictures and videos on to a Micro SD card and avoid placing these types of files in the internal memory of the tablet - this will conserve the internal memory, and allow you to download more apps.

Turning on the tablet

Press and hold the Power  button until the startup screen appears.

Unlock (enter) the tablet

Slide the "Lock icon" to the right  .

Lock (standby) the tablet

To lock or unlock the tablet, briefly press the  button (Lock the device to conserve the battery).

Turning off the tablet

Press and hold the  button until the Power off dialog appears.


Home screen

On the Home screen, you can place app shortcuts and widgets and access to other Home screens through swiping the screen left and right.

Access apps & widgets screen

Press  to access the Apps & widgets screens. When enter into Apps & widgets screens, swipe the Apps & Widgets screen left or right to access more apps and widgets. Press  to return to the Home screen.
The Status Bar is available on all screens and apps of the tablet.

or videos with the built-in, front facing camera.

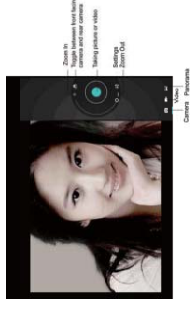

Share pictures to Email

To utilize email to share picture, an Email account must be set up for this option to appear.



Share: Share the selected picture through Email.

Trash: Delete the selected picture.

Menu: Slideshow, edit and more.

Super-HD Play

View your images and videos with this application. It will play individual tracks, entire albums, or a play list. It also includes a cover art feature to enable visual identification of albums and artists.



Sound Recorder

This application lets you record and playback audio files, effectively turning your device into a digital dictation device.




Other Applications: This device supplied with many other applications for you to choose. As well, you can download the applications from the "Play store".

Introduction of Basic Functions

Camera and video chat

Front facing camera

Select  on the apps screen to go to camera mode. It is possible to take pictures

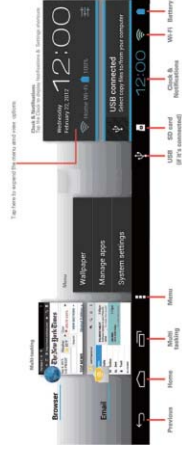


Placing apps & widgets on the Home screen

1. Access to Apps screen.
2. Select the app or widget which you want to place on Home screen.
3. Press and hold the selected app or widget until the blue rectangle appears. Release your finger and now you can see the app or widget has been placed on Home screen.

Removing shortcuts or widgets


Press and hold the app or widget and slide it as shown below.

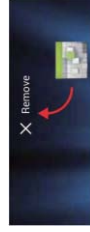

Connections

Connecting to Wi-Fi

1. Open "Settings".
2. Select "Wi-Fi On".
3. Select a network.

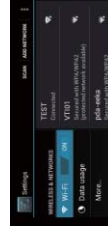

Some Pre-loaded Applications



Calculator

Use this application to do simple calculations including multiplication, division, addition and subtraction.



Calendar

Use the Calendar application to organize your day/ week/ month. You can add events, invite guests, add reminders, etc.



Browser

Your gateway to the world wide web. Use the browser to view Websites on your device, in much the same way you would on a desktop computer.



Clock

This application displays a large-font clock on your device's display, and provides shortcuts to create alarms.


Connecting to TV Set

HDMI switch can switch your video display from tablet to a TV or monitor with HDMI input. While the tablet screen is shown on TV or monitor, tablet will become a touch pad for all operations, including switching video display back to the tablet screen.

To set as below:

1. Connect the tablet to the HDTV/monitor with the included HDMI cable.
 2. Choose the correct input source setting on TV/monitor.
 3. Tap on a compatible video format the TV/monitor can accept.
 4. Wait for a few seconds, the tablet video will show up on the TV/monitor screen.
- It indicates that your tablet have connected to the HDTV/monitor already.

4. If required, enter the correct password and select "Connect".

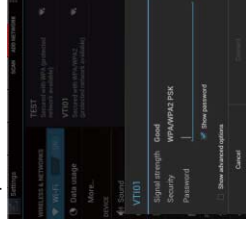

5. When the tablet is connected to a network, the WI-FI signal icon will appear on the Status Bar and "Connected" will appear under the selected network.



Note: To conserve battery life, please turn off Wi-Fi when not connected to a network.

Connecting the tablet to a PC or MAC

1. Connect the included USB cable to the USB port of the tablet and USB port of the computer and the USB will connected as an installer.
2. Tap status bar on bottom right corner of tablet and "USB connected", until the "USB connected" screen appears, select "Turn on USB storage".



13

Note: While connected to the computer, you can also access the "USB connected" screen from the Status Bar as shown below.



3. Select "Turn off USB storage" on the tablet to disconnect it from the computer.

14