


610x Mesh Node Label Placement

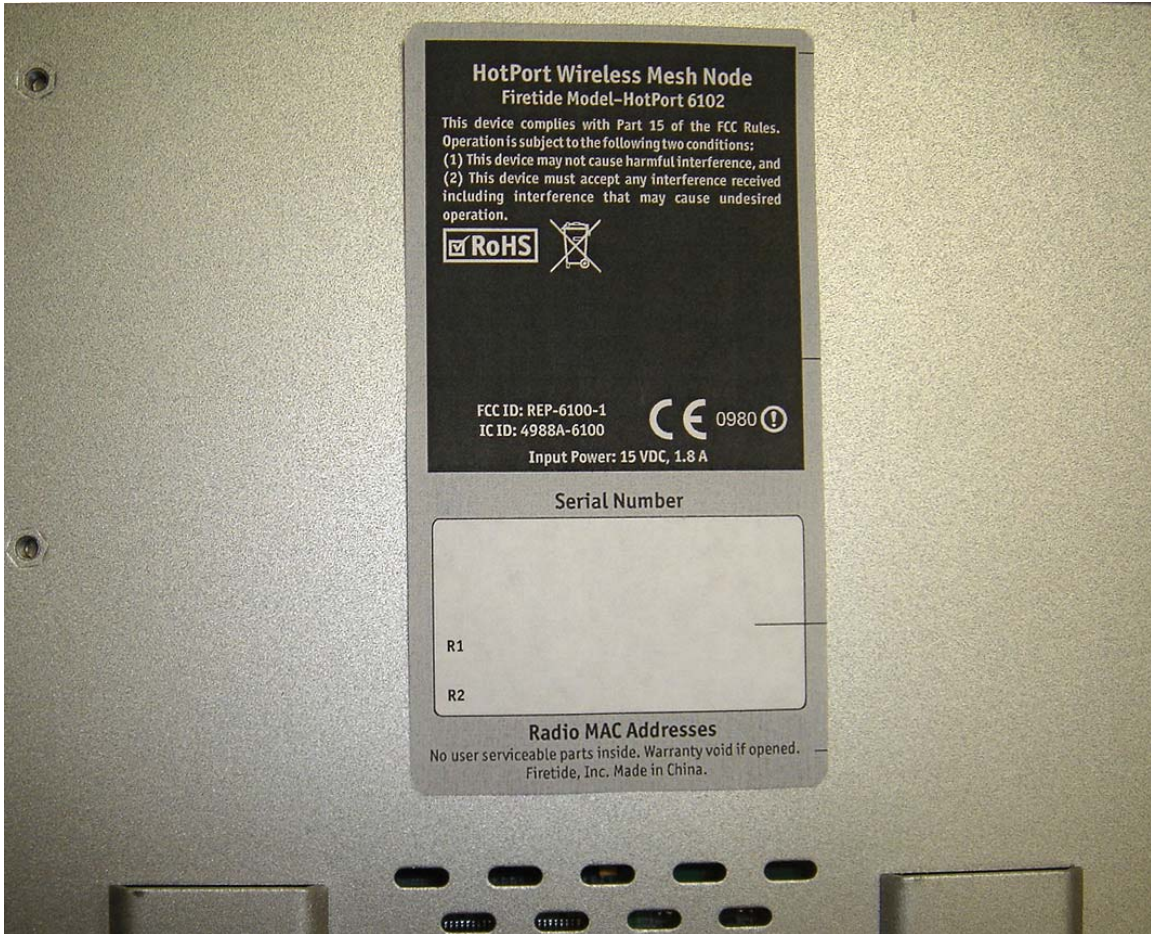

Label is placed on bottom of unit.