



CDMA 2000 1x WIRELESS LOCAL LOOP PHONE ACW-1xP800/1xP1900 USER'S MANUAL



TABLES OF CONTENTS

Safety Precautions	4	Mute	28
Checking Parts	5	Silent Scratchpad	29
Setting up Your Phone	6	Sending Your Phone Number	30
Getting to Know Your Phone	9	Selecting Time Mode	31
Display Icons	10	Setting the Alarm	31
Function Keys	11	Checking and Clearing Call Times	32
Basic Operation		Setting Warning Beeps	32
Placing Calls	14	Advanced Features	
Redial	14	Changing Greeting Message	34
Receiving Calls	15	System Reset	34
Adjusting Volumes	16	Restricting Use of the Phone	35
Choosing the Ring Tone	17	Locking the Phone	37
On-Hook Call	17	Changing the Lock Code	38
Internal Phone Book		Tone Length	38
The Internal Phone Book	20	Optional Features	
Storing Numbers in Memory	20	Call Forwarding	40
Searching for Numbers in Memory	21	Call Waiting	40
Erasing a Number in Memory	23	Three-Way Calling	40
One-Touch Calling	24	Message Service	40
Two-Touch Calling	24	Miscellaneous	
Useful Features		Menu Options Table	46
Call Logs	26	Conversation and Message Menu	48
Electronic Dialing	27	Specifications	48
Displaying Your Phone Number	28		

RF Exposure Information**THIS MODEL PHONE MEETS THE GOVERNMENT ' S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Near-by Person Operation

This device was tested for typical operations with the antenna of the phone kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, maintain a 1.5 cm separation distance between the user' s body and the phone, including the antenna.

WARNING! Read this information before using your phone

SAFETY PRECAUTIONS

1. Avoid placing the phone in a dusty location, or near a source of gas or fire.
2. Don't shake, hit or drop the phone.
3. If you clean the outside of the phone, use only a soft, dry cloth. The chemicals in alcohol, benzine or acetone can damage the surface of the phone.
4. Do not twist or pull the cord out of the phone.
5. Do not disassemble the phone.
6. DO NOT use the power adapter if:
 - The power cord is damaged.
 - The phone has been dropped or damaged in any way.
7. Use only the AXESS TELECOM provided adapter. Do not use the AXESS TELECOM adapter for any other purpose.
8. Use only the AXESS TELECOM provided antenna.
Do not use the antenna for any other purpose.
9. Frequency and length of use can affect the life of the self-charging battery.
Contact your customer service if the battery is not operating properly.
10. Use only the designated self-charging battery. Dispose of exhausted batteries properly. Never discard a battery in or near fire or flame.
11. Do not use the telephone near water, for example, near a bathtub, sink, wet basement, or swimming pool.

NOTE : The input voltage and the shape of the plug on this phone may vary from country to country.

CHECKING THE PARTS

Once you have unpacked your phone, make sure that you have all the parts shown below. If any piece is missing or broken, please call your customer service.

 
- | | |
|--------------------------------|---------------------------------|
| 1. ACW-1xP800/1xP1900 Main Set | 2. Hand Set |
| 3. AC/DC Adapter | 4. User's Manual |
| 5. Antenna | 6. External Battery |
| 7. Data Cable-USB(Optional) | 8. Data Cable-RS-232C(optional) |



SETTING UP YOUR PHONE

INSTALLING THE PHONE

This phone operates by receiving D.C. power from the AXESS TELECOM D.C. adapter, which is connected to electrical outlet. The phone is equipped with a rechargeable external battery to back up power failure.

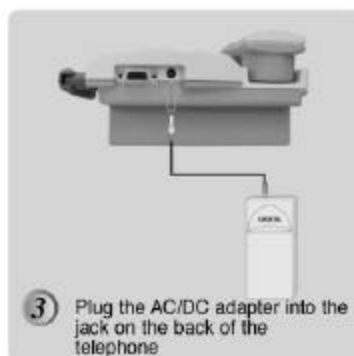

NOTE : The input voltage and the shape of the plug may vary from country to country.
The input and output voltage of the adapter is indicated on the adapter.
Do not use the phone with unspecified voltage.

SERVICE STATUS CHECK

Display in service area

When the power cord is connected properly, Power LED will light.

All segments in the LCD window will turn on briefly.

When the service LED at the top of the phone is on, service is available.

The display will show the greeting, time and date.

You can change the greeting(See page 34).

Display in service area



Display in area with no service

 
When there is no service in your area, the signal icon does not appear in the display.

In this case, contact your service provider.

Display in area with no service



INSTALLING THE BATTERY

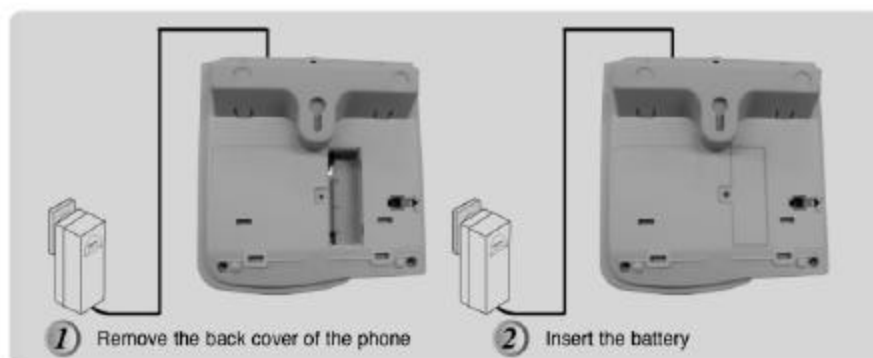

GETTING TO KNOW YOUR PHONE



1. **Antenna** : Adjusting the antenna improves the sound quality of the call.
2. **Power/RSSI LED** : The Power LED lights when the power is connected. Under battery power, this LED is always off.
3. **STORE** : Stores phone numbers, and any settings you select in the menu within the phone's memory.
4. **MESSAGE** : Press to retrieve messages.
5. **RECALL** : Allows you to redial the last number called.
6. **On-Hook** : Allows you to enter phone number without lifting the handset off the hook.
7. **Shift Keys** : Press to move the cursor when entering letters and to scroll through menu options and displays.
8. **CLEAR** : Lets you clear your last entry.
9. **MENU** : Press to access the phone's menus.

DISPLAY ICONS

Icons display on the screen to indicate what features you are using and the status of the phone, signal strength, and battery.



	Indicates the strength of the current signal. The more bars, the stronger the signal.
	Indicates the level of battery power. The more bars, the more power. When the battery is low, the icon blinks and an alert tone sounds.
	Indicates that you are using the phone's menu.
	Indicates that you have set your phone's alarm.
	Indicates that you are in the phone's internal phone book.
	Flashes when you have a page, a text message or a voice mail message.
	Indicates that a call is in progress.

FUNCTION KEYS

MENU

Press this key to display the phone's main menu.

CLEAR

Clears information from the display screen.

- To erase one character from the display screen, press it once.
- To erase all the characters on the screen, press and hold down.
- To go back one step when you're accessing a menu, briefly press it once.

STORE

Press this key to store a number in the phone's internal phone book and to save menu settings.

MESSAGE

Press this key to retrieve messages.

RECALL

Press this key to redial the last number called.



The ON-HOOK button is used to enter a number, without lifting the handset off the hook.



Basic Operation



Placing Calls

Redial

Receiving Calls

Adjusting Volumes

Choosing the Ring Tone

On-Hook Call



PLACING CALLS

1. First, check to see that your AXESS TELECOM WLL Phone is turned on. If the Power / RSSI LED is lit, the power is on.
2. Pick up the handset or press  to hear a dial tone. If the service is not available, you hear a no service tone (intermittent tone).
3. Using the keypad, dial the desired telephone number. The LCD window displays the number.
4. press .
5. When the other person answers, begin your conversation. If you pressed  in step 2, pick up the handset before you begin conversation.
6. To end the call, replace the handset .



NOTE : Modifying a phone number.

- Modifying the number by one digit : Press  briefly.
- Modifying the entire number : Press  and hold.

REDIAL

Redial the last number you dialed by using this feature.

1. Pick up the handset, or press .
 2. Press .
- To speak to the other person, pick up the handset.



NOTE : You cannot redial in the above manner when the power is just on. 'NO LAST CALL' will display.

RECEIVING CALLS

When you receive an incoming call, your phone will ring and blink "Incoming Call" display in LCD window and the LED on the phone will blink.

1. Simply pick up the handset to answer the call.
2. To disconnect, replace the handset.

NOTE : If a call comes in while the incoming call restriction function is set, 'INCOMING CALL RESTRICTED' displays and you cannot receive the call until you enter the lock code.

If you select 'Silent' in the phone ring volume selection function, the phone will not ring. Instead, the incoming call light will blink.



When Caller ID is activated.

 
Caller ID Display

The Caller ID feature displays the caller's number when the phone rings. If the caller's name and number are stored together in your phone's memory, the caller's name will display.

Contact your service provider to activate this feature.



NOTE : If there is a missed call (the call not answered), the missed call number will display



ADJUSTING VOLUMES

You can control the sound volumes on your phone, including the key tone (the sound you hear when you press a key), the conversation volume (the sound of the other party during a phone call) and the ring volume of an incoming call.

Controlling conversation volume

Lift the handset and press    and press  or  and  to adjust voice volume.



Controlling key tone volume

Lift the handset or press    and press  or  and  to adjust key tone volume.



Controlling ring tone volume

Lift the handset or press    and press  or  and  to adjust ring tone volume.



CHOOSING THE RING TONE

You can choose from ten different ring tones.

1. Press  and  to select 'Ring/Alert'.
2. Press  to select 'Ring Tone'.
3. Press  or  to scan ring tones.
4. Press  to save the desired ring tone setting.



ON-HOOK CALL

This feature allows you to make a call without picking up the handset.

1. Press .
You will hear the dial tone through the speaker.
Dial tone time : 20 sec.
2. Enter the phone number you want to call.
3. When you hear the other party answer, pick up the handset and begin the conversation.



NOTE : If you do not pick up the handset, the other party will not be able to hear you.

To make a Quick Call

Pick up the handset, or press , enter the phone number of the party you want to call, and then press . The call connects immediately.



Internal Phone Book



The Internal Phone Book

Storing Numbers in Memory

Searching for Numbers in Memory

Erasing a Number in Memory

One-Touch Calling

Two-Touch Calling

THE INTERNAL PHONE BOOK

Your phone has an 'Internal Phone Book' in which you can store up to 99 frequently called names and numbers. You can set them up for convenient, one-touch or two-touch dialing, and you can store them as confidential phone numbers.

STORING NUMBERS IN MEMORY

1. press .
2. Enter the desired telephone number up to 28.
3. Press .
4. Enter a name by pressing the alphanumeric keys.

NOTE : If you do not wish to enter a name, just skip over this step. You can only input 16 letters

5. Press .
6. Press  to store at an empty location displaying automatically.

 
 
7. To assign a specific location, Press a 2-digit location number between 01 and 99.

To store the number in the next memory location, Press  or .

NOTE : If you are selecting a location between 1 and 9 enter zero (0) before that number. If there is no empty location, the message 'MEMORY(01-99) IS FULL!' will display.

If the message 'MEMORY USED!' displays,

8. Press .
9. To store the number in confidential, press  or  and select 'SECRET'.
10. Press .



SEARCHING FOR NUMBER IN MEMORY

If you do not remember which telephone numbers have been stored in the various memory locations, you can scroll through memory to find a specific entry.

Searching by Location Number

1. Press **MENU** and **5** and **1**.
2. Enter the two-digit memory location to display the number. The name displays.
3. Press **STORE** and the number displays and can be modified.

NOTE : If the location is empty, 'Empty Location!' will displays.

4. When the desired number displays.

To make the call, press **RECALL**.

To exit the function, press **CLEAR**.



Searching by Name

1. Press **MENU** and **5** and **1** in sequence.
2. Press **STORE** and you can enter all or part of the name by pressing the alphanumeric keys on the keypad.
Example) Enter A to find all names beginning from the letter A.
3. Press **STORE**. The phone briefly displays the memory location number along with the name and number of the first match. If the number displayed is not the one you want, press **RECALL** or **RECALL** to scroll through the list until the desired number displays.
4. When the desired number displays, press **RECALL** to dial the number automatically.



Searching All

1. Press  and  and  in sequence.
2. To browse all stored list, press  or .
3. Press  to select one among the list and see the details.
4. When the desired number displays, press  to make the call,



Searching Confidential Number

To see the phone number stored in a confidential memory location, follow these steps :

1. Press  and  and  in order.
2. Search the one who you want to look by a searching method said previously and The name (if any) displays.
3. Press , "INPUT LOCK CODE" displays.
4. Enter the lock code.
NOTE : The lock code is preset to '0000' at the factory.
5. To make the call, press .
To exit the function, press .

 
 


ERASING A NUMBER IN MEMORY

 To Erase a Specific Number

1. Press  and  and  in order.
2. Search the one who you want to look by a searching method said previously and The name (if any) displays.
3. Press  on one who you want to erase among the list.
4. Press  to erase it. Confirming message displays.
5. To confirm, press . To cancel, press .
6. If you erase a secret one, you have to enter lock code instead of pressing  to confirm.

NOTE : In order to erase everything in the memory, you must reset the phone.



ONE-TOUCH CALLING

Memory locations 01 ~ 09 are special one-touch dialing locations. You can dial the numbers stored in 01~09 by pressing one key. You do not need to precede the numbers with a zero when using one-touch dialing.

1. Pick up the handset or press .
2. Press and hold the number of the location number and hold it down for at least one second.
3. The number displays and dials automatically.



TWO-TOUCH CALLING

1. You can easily dial phone numbers stored in memory by pressing the two-digit memory location.
2. Briefly press the first digit of the memory location number, then press the second digit and hold it down for at least one second.
Example) To dial location 23, briefly press the , then press  and hold for a moment.
3. The number stored displays and dials automatically.





Useful Features



Call Logs

Electric Dialing

Displaying Your Phone Number

Mute

Silent Scratchpad

Sending Your Phone Number

Selecting Time Mode

Setting the Alarm

Checking and Clearing Call Times

Setting Warning Beeps

CALL LOGS

Your phone stores the last 10 outgoing calls and the last 10 incoming calls (only when Caller ID function is activated). You can display and redial these numbers.

☎ Redialing Outgoing Calls

 
1. Pick up the handset or press **☎**.
2. Press **RECALL** to redial the last outgoing call.
NOTE : If there's no last call record, "MEMORY EMPTY" will appear with an alarm.
3. To display the phone numbers of the last 10 outgoing calls, press **MENU**, **6**, **1** and press **☎** or **#** until the desired number displays. To redial the number in the display, press **RECALL**.
4. To exit the function, press **CLEAR**.



☎ Returning Incoming Calls

To display a list of recently received calls.

1. Press **MENU**, **6**, **2**.
NOTE : If there's no incoming call record, "INCOMING CALL MEMORY EMPTY!" message will appear with An alarm.
 2. Press **☎** or **#** until the desired number displays.
 3. To redial the number in the display, press **RECALL**.
 4. To exit the function, press **CLEAR**.
- NOTE** : This function is available only when caller ID is activated.



☎ Erasing All Numbers in Redial Memory

1. Press **MENU**, **6**.
2. Press **3** to select 'Erase Logs', and then press **☎** or **#** select 'Erase'.
3. Press **STORE** to erase all outgoing and incoming numbers.



ELECTRONIC DIALING

This function is used for a computer service, pager, or home automation provided by a bank or a stock company. If 'SILENT KEY' is set, electronic dialing is not available.

☎ Entering a Hard Pause

 
You can enter a hard pause between numbers by Pressing  while entering digits. The hard pause displays as 'p' on the phone. A hard pause is useful when you access an interactive voice response system, such as an automated banking system.



☎ Electronic Dialing Using Pause

This method is used to send numbers while you are in conversation. You can use the pause symbol in more than one position. Up to 30 positions are possible, including the pause symbol. You can store them all in memory with a reference number.

1. Pick up the handset or press .
2. Enter the phone number and press .
Pause symbol 'p' will appear in the display.
3. Enter the numbers to be dialed electronically.
4. When the call connects, you are prompted to enter the number to be dialed electronically.
5. Press .



☎ Electronic Dialing With Several Pause Symbols

You can send more than one series of numbers using more than one pause.

Ex) '02-541-3000p1234p5678'

Call the 025413000 number first. Pick up the handset.

When you are prompted to enter the next number,

press  and '1234' will be dialed automatically.

After that, if you press  again, '5678' will be dialed.

DISPLAYING YOUR PHONE NUMBER

You can display your own phone number.

 
Displaying Your Phone Number

1. Press .
2. Press  to select 'Security'.
3. Enter the lock code.

NOTE : The lock code is preset to '0000' at the factory.

4. Press  to select 'My Phone#'.

The screen displays the phone numbers.



MUTE

This feature lets you mute the microphone, so that the other party cannot hear your voice or the sound of your surroundings. This function is available only during a telephone conversation.

1. Press  during conversation.
2. Press  to select 'Mute'.

The message 'MUTE' blinks. The other party can no longer hear you, but you can hear them.

3. Press  and  again when you wish to resume the conversation.

The message 'MUTE' disappears from the display and you can speak to the other party.



SILENT SCRATCHPAD

You can check your own phone number or press a number during a conversation without transmitting the dial tones to the other party. This function is available only during a telephone conversation.

Turning off the Key tone

1. Press  during conversation.
2. Press  to select 'Scratchpad'.
The message 'Scratchpad' displays.
3. Enter the desired number.
There is no key tone when you press the keys during a conversation.



Turning on the Key tone

1. Press .
2. Press  to select 'Scratchpad'.
The message 'Scratchpad' disappears and the key tone sounds.

NOTE : If you do not turn on the key tone, you cannot use ARS (Automatic Response System) service or Call Pager.

SENDING YOUR PHONE NUMBER

When leaving a message on another party's pager, you may be prompted to enter your phone number. You can conveniently transmit your number to the pager by pressing two keys instead of the entire number. If 'SILENT KEY' is set, you cannot use this feature. This function is available only during a telephone conversation.

1. When the pager prompts to enter your phone number after calling a paging system, press .



2. Press  to select 'Send Tel #'.
Your phone number is transmitted automatically.

SELECTING TIME MODE

 
1. Press , , in sequence.
2. Select one time display mode by pressing or .
AM/PM Type : Time displays with AM/PM.
24 Hour Type : Time displays as 24 hour units.
No Time and Date : Not display time and date.
3. Press .



SETTING THE ALARM

You can set the alarm sound daily or one time only.

1. Press , , in sequence.
2. Select one method of alarm by pressing or .
Daily : Alarm sounds daily.
One time : Alarm sounds only one time.
3. Press .
 If the alarm function is set, 'ALARM TIME', date, present time, and alarm hour displays.
4. Input alarm time.
 Hours should be input as 24hour units.
 To modify the alarm time, press or .
 You can enter a specific time for the alert to sound.
5. Press and enter the number of minutes that you want the alert to sound.
6. Press .
 When the alarm time arrives, a melody sounds and '<ALARM TIME>' displays. The sound will stop if you press any button.



Setting / Canceling the Alarm Time

1. Press , , in sequence.
2. Select 'RELEASE' to off alarm. Bell icon disappears.

CHECKING AND CLEARING CALL TIMES

☎ Checking the Last Call Time

1. Press , , in sequence.
2. Press to clear the display.



☎ Checking Accumulated Air Time

1. Press , , in sequence.
2. Press to clear the display.



☎ Reset Accumulated Air Time

1. Press , , in sequence.
2. Select 'YES' by pressing .
3. Press .



SETTING WARNING BEEPS

You can set your phone to sound warning beeps during conversation that indicate:

- each minute you are on a phone call
- when you are out of the service area

1. Press , , in order to select '1min Alert'.
2. Press or to choose the status 'ON/OFF'.
3. Press .
4. Press , , in order to select 'Svc Alert'.
5. Press or to choose the status 'ON/OFF'.
6. Press .





Advanced Features



Changing Greeting Message

System Reset

Restricting Use of the Phone

Locking the Phone

Changing the Lock Code

 
Tone Length



CHANGING GREETING MESSAGE

This feature lets you change the greeting message that displays when you turn on the phone.

1. Press ^{MENU} .
2. Press ⁴  "Security".
3. Enter the lock Code
NOTE : The lock code is preset to '0000'.
4. Press ¹  to select 'Greeting', Press ^{STORE} .
5. Enter your new greeting message by pressing the alphanumeric keys.
6. Press ^{STORE} .



NOTE : Press ^{MESSAGE}  to choose Capital, Small and Special character.

SYSTEM RESET

To reset all of your phone's features to the manufacturer's defaults, follow these steps :

1. Press ^{MENU} .
2. Press ⁴  "Security".
3. Enter the lock code.
NOTE : The lock code is preset to '0000'.
4. Press ⁴  to select 'Reset Phone'.
5. Press  or  to choose the status 'RESET/CANCEL'.
6. Press ^{STORE} . 'Erasing memory...' blinks while the phone is reset.



NOTE : This feature will erase everything in memory, the telephone book inclusive.

RESTRICTING USE OF THE PHONE

You can restrict the use of the phone by unauthorized persons. There are 4 restriction modes you can choose as follows :

Restricting Outgoing Calls

In this mode, the phone cannot originate a call.
If you try to call, 'OUTGOING CALL RESTRICTED' will display.



Restricting Incoming Calls

In this mode, you cannot answer an incoming call.
If the phone receives an incoming call, 'INCOMING CALL RESTRICTED' will display.



Restricting Long Distance Calls

In this mode, you cannot make a long distance call.
If you try to dial a long call number, 'LONG DISTANCE CALL RESTRICTED' will display.



Restricting International Calls

In this mode, you cannot make an international call.
If you try to dial a international phone number, 'INTERNATIONAL CALL RESTRICTED' will display.



Setting Restriction Modes

1. Press .

2. Press , "Security".

3. Enter your lock code.

NOTE : The lock code is preset to '0000' at the factory.

4. Press  to select 'Restrict'.

5. Select the desired menu by pressing the number

1. Outgoing, 2. Incoming, 3. Long Call, 4. Intl. Call

6. Press  or  to select the status, 'RESTRICT/CANCEL'

7. Press .



Voice Privacy

The voice privacy menu offers protection from illegal wiretapping.

1. Press .

2. Press , "Security".

3. Enter your lock code.

NOTE : The lock code is preset to '0000' at the factory.

4. Press  to select "Voice Privacy".

5. Select the desired menu, "Enhance or Standard".

6. Press  or  to select.

7. Press .

 


LOCKING THE PHONE

You can lock your phone so that calls cannot be made by unauthorized persons. You can still receive incoming calls when your phone is locked by entering the lock code when the phone rings. Turning the phone off does not erase this feature; the phone stays in mode until you reset it.

Locking the Phone

1. Press .
2. Press  to select 'Security'.
At this time, the display will show 'ENTER LOCK CODE'
3. Enter the lock code.
NOTE : The lock code is preset to '0000' at the factory.
4. Press  to select 'SET LOCK', and you can set the desired lock state.
Choice "Never, On power up, Now, Always".
The default setting is "Never".
5. Press  or  to select the status, 'SET'.
6. Press  to auto lock the phone. – LOCKED – displays.
If you try to dial numbers, it will ask you to key in Lock Code.
NOTE : The lock code is preset to '0000' at the factory.
7. If you want to unlock the phone.
8. Follow the same steps above and select 'never' on the step 5.



CHANGING THE LOCK CODE

When you purchase your phone, the lock code is preset to 0000. You can change the lock code to any 4-digit code.

 
1. Press .
2. Press  to select 'Security' and then enter the current lock code.

NOTE : The lock code is preset to '0000'









TONE LENGTH

Tone Length : Some phones you call may be able to recognize only long tones. You may have to change the tone length to LONG for some calls that you place.

Press , ,  : "DTMF Ton Length"

NOTE : When calling a paging system, your phone should be in the Short mode.





Optional Features



Call Forwarding

Call Waiting

Three-Way Calling

Message Service



CALL FORWARDING

Call Forwarding is a feature on your phone that lets you forward your incoming calls to another phone number, even if your phone is turned off. Also, you can receive calls while Call Forwarding is activated.

Contact your service provider to activate Call Forwarding.

CALL WAITING

Call Waiting alerts you to a second incoming call while you are on the phone.

To respond to a call waiting, press  or the hook switch.

Contact your service provider to activate Call Waiting.

THREE-WAY CALLING

Three-Way Calling is a feature on your phone that lets you set up a three-way conversation with two other persons.  or the Hook switch is used with Three-Way Calling.

 
 
Contact your service provider to activate Three-Way Calling.

MESSAGE SERVICE

Message Service can be used only when provided by your CDMA service provider. Check that the CDMA service provider you use is providing message service before using this function. The messages are stored in the order they are received. If there are messages that the user has not checked,  icon will display.



Sending Text Messages

1. Press , ,  in sequence.
2. Enter the dial number and Press .
3. Write message using the alphanumeric keypad.
Note : Press  to choose capital, small letters and special character.
4. Press . A call back number is automatically your phone number.
 It can be changed as you like.
5. Press . Select message type NORMAL, URGENT, EMERGENCY, using  or .
6. Press  to send the message.
Note : Sending text message is available only when your service provider support it.



Receiving Voice Messages

  1. If a voice message is received, '--VOICE MAIL--' and  will display.
2. Press  to connect voice mail center and hear the message.
3. Press  again to call back if the caller leaves a phone numbers.
Note : If the phone number is stored in the phone book with a name, the name will display instead of the phone number.



Receiving Text Messages

1. If a text message is received, CALL BACK NUMBER and  display.
2. Press  or  scroll down the message.
3. Press  and one more  the number automatically.
4. Press . The message will erase.

 
Note : If the phone number is stored in the phone book with a name, the name will display instead of the phone number.




Receiving Page Messages

1. If a page message is received, PHONE NUMBER and  will display.
2. Press  to call back or  to erase Page message.

Note : If the phone number is stored in the phone book with a name, the name will display instead of the phone number.



 Note : If the incoming message tone is operating, a beep tone will be sound at intervals of two minutes until you check the message. If a new message is the same as the previous message, 'DUPLICATE' will display.



Checking Received Voice Messages

MESSAGE
Press  and  in sequence.

The message volume which is stored in the voice service center and the last received time will display.



Viewing Received Text Messages

MESSAGE
1. Press  and in  sequence.

The received message list will display.

 
2. Press  or  select message you want to see.

3. Press . Received message and time will display. If there is a phone number, it will display as well. If the message is long, it will scroll down in 3 seconds automatically. Press  or  to scroll up and down manually.

4. Press  twice if you want to call back.

5. To view the next message, press .

The screen will return to step 2 above.



Erasing the Selected Message

MESSAGE
1. Press  and  or .

 
2. Press  or  to select the message you want to erase.

3. Press . The message will display.

4. Press  once more.

5. Press  again to erase the message.

Press  to cancel erasing.



Clearing All Received Messages

1. Press ,  in sequence.
2. Press  or  to select 'ERASE/CANCEL'
3. Press .



Setting Message Lock

1. Press ,  and  in sequence.
2. Press  or  to select 'SET/RELEASE'
3. Press .



If you set message lock, the phone will ask Lock Code whenever you press  button.

 
NOTE : The lock code is preset to '0000' at the factory.

Setting Message Alert

1. Press ,  and  in sequence.
2. Press  or  to select 'SET/RELEASE'
3. Press .



If you set the message alert, the LED will blink with an alert when a message arrives. If you release the message alert, the LED will blink without an alert.

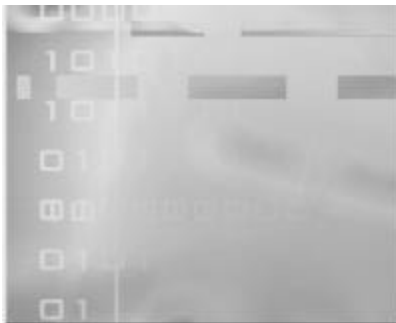

Miscellaneous



Menu Option Table

Conversation and Message Menu

Specifications



MENU OPTION TABLE

I	II	III	Explanation
1: Sound	1: Hand Set Vol		Adjust the volume on earpiece when to conversation.
	2: DTMF Ton Len	Tone Length short / long	Sets length of tone (when DTMF number is sent) to short or long
	3: Key Volume		Adjust Key Volume
2: Ring / Alert	1: Ring Type	Ring Type Bell + Lamp / Lamp	Determines whether the phone alerts the incoming call with sound and lamp or only with lamp
	2: Ring Tone	Ring Tone Melody1~6/Melody1~4	Selects ring sound
	3: Ring Volume	Ring Volume	Adjusts the ring volume
	4: 1 min Alert	1 min Alert On/Off	Determines whether alert beeps at one minute intervals when you make or receive a call
	5: Svc.Alert	Svc.Alert On/Off	Determines whether alert beep should sound when you are out of the service area
	6: Alarm Tone	Alarm Tone Melody1~6/Melody1~4	Selects alarm sound
3: Time	1: Alarm	Set/ Release	Sets/ Release an alarm
	2: Call time		Shows the time of last call made
	3: Air Time		Shows accumulated call time
	4: Clr Air Time	Clear Air Time Yes/No	Resets accumulated call time
	5: Select Time	Select Time No Time & Date/ AM/PM/24 Hours	Selects time expression mode
4: Security	1: Greeting		Used to change greeting
	2: New Code		Used to change lock code
	3: Restrict	1. Outgoing	Used to limit outgoing calls
		2. Int. Call	Used to limit international call
		3. Receive Call	Used to limit incoming calls
		4. Long Call	Used to limit long distance calls
	4: Reset Phone	SYSTEM RESET RESET/CANCEL	Returns the phone to factory setting
	5: Auto Lock	AUTO LOCK SET/RELEASE	Used to lock the phone
	6: My Phone#		Used to check your phone number
	7: Voice Privacy	Standard / Enhanced	Protect illegal wiretapping

* The lock code is preset to 0000 at the factory.

MENU OPTION TABLE

I	II	III	Explanation
5: Phone Book	1: Search	SEARCH OPTION NAME / MEMORY / NUMBER	Used when searching for a phone number in the phone book by altnumber/stored memory reference number
	2: Erase	SEARCH OPTION NAME / MEMORY / NUMBER	Used when erasing a phone number in the phone book by memory and number
6: Call Logs	1: Outgoing		Stores ten phone numbers called most recently
	2: Incoming		Stores ten phone numbers of calls received most recently
	3: Erase Logs		Erase outgoing / Incoming log

* At MENU, press "" to return to the previous menu.



Axess Telecom Co., Ltd.

Printed in Korea
Code No. : P00-DCC UM-XDV1.0
2002.10. Revision

685, Buk-Ri, Namsa-Myun, Yougin-City, Kyunggi-Do, Korea 449-884
Tel : +82-31-718-7365 Fax : +82-31-716-1894
www.axesstelecom.com