

Attention:

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Pls make sure to read the manual carefully before use the device.

- Please don't be in high temperature, moisture or very dust place.
- Please don't be in high temperature, Especially in summer don't put the device in the car when Windows closed.
- Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, This could cause TFT display screen abnormal or damage.
- Please choose the appropriate volume, Use headphones should not be too big volume, If feel tinnitus, Lower the volume or stop using it
- please charge In the following condition,
 - A、 The battery power ICONS shows have no power
 - B、 The system automatically shut off, startup after power off soon
 - C、 Operation buttons no response
 - D、 The machine that the bottom right corner show red icons
- When the device in the format or ongoing upload and download file, please do n't suddenly disconnect, This could cause application error.
- For those who because of damage to the product, repair, or other causes of erased the memory, The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
- Don't disassemble the product, don't use alcohol、 Thinner or benzene to scrubbing products
- Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)
- Please don't using the Tablet PC when you in driving or walking down the street,
- USB just only be used for data transmission


 
The company reserves the right to improve product, products specification and design have any change, The information is subject to changes without prior notice.

(This tablet is no waterproof function)

【Remark】 All pictures in this manual is just for your reference. products specification and design have any change, The information is subject to changes without prior notice.

Appearance and button:



1. Front Camera : 0.3M Pixels
2. TF slot;
3. USB port;
4. Microphone
5. Earphone port;
6. “”: Back. Press the button to make the tablet go back to last step.
7. “-”: Volume -;
8. “+”: Volume +;
9. “”: Power. When the tablet is working, press the button for a bit long time, then there comes out the window of shutting down options; press the button for a short time, the screen and other function buttons will be locked.

In software crash, can a long press on the power button for 6 seconds and the machine will force shutdown.

Remark: unless unable to shut down using this step, it is recommended that work cases according to shut down steps shutdown, otherwise easy to damage the machine system.

10. Speaker

11. Rear Camera: 20M Pixels

1. First use

1.1 Battery management and charge

Before first use, please set the device's battery is fully charged

Just need to connect the adaptor or USB interface, then you can charge

The first two times charging please keep about 6 hours, after that you just need 4 hours to charge.

【Remark】 : This tablet using Built-in type polymer battery, Charge must be to choose standard adaptor (Output: DC5.0V~2.0A), this device without supply DC charging, USB interface can charge, Choose USB interface to charger

During the charging, the battery icon will scroll

When finished charging, battery icon will become green and stop rolling

 
In order to prolong the service life of the machine, suggest use out battery power before charge it

【Remark】 :

1. If you long time don't to use this Tablet, ,in order to avoid power consumption caused damage, pls charge/play the battery once a month.
2. After low battery shut down, connect DC adaptor, device will remind low battery, charging, need to wait some time until the battery is enough power to enter into main menu.
3. Device charging should be in standby status for reach normal charging time.
Because with device and screen consumption, it may cause longer charging time.

1.2 Connection with PC

Use USB cable to connect device to PC, device will pop up the USB connection window, click Turn on USB storage to connect to PC

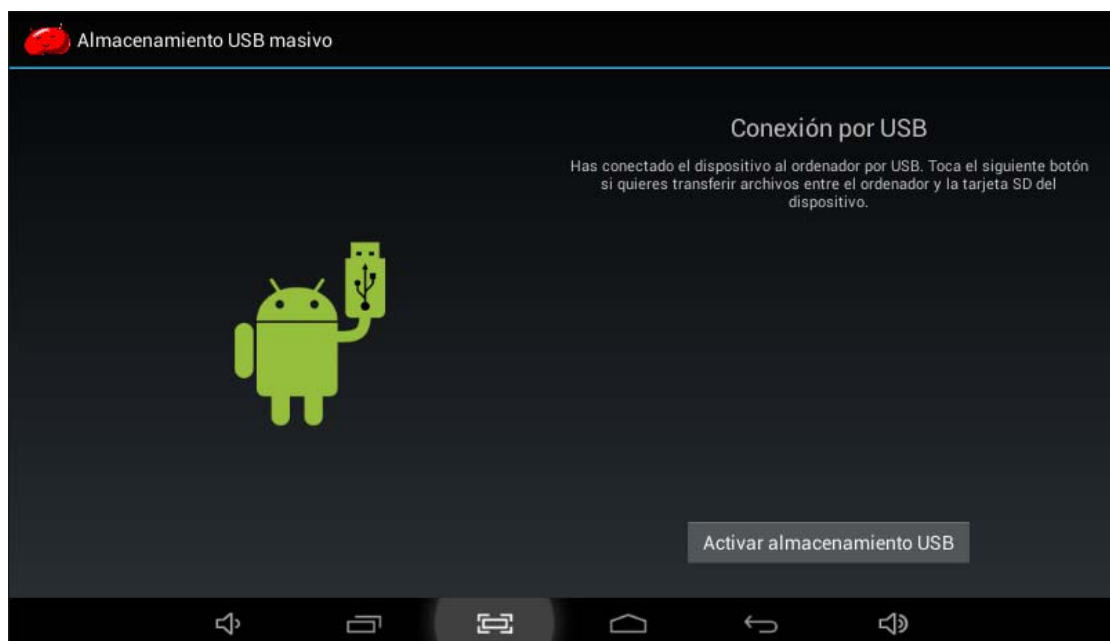


Into the load mode, you can copy or delete the file on the device and the file on the memory card.

2. Equipment operation interface


2.1 Main interface describe

 After startup will enter the main interface

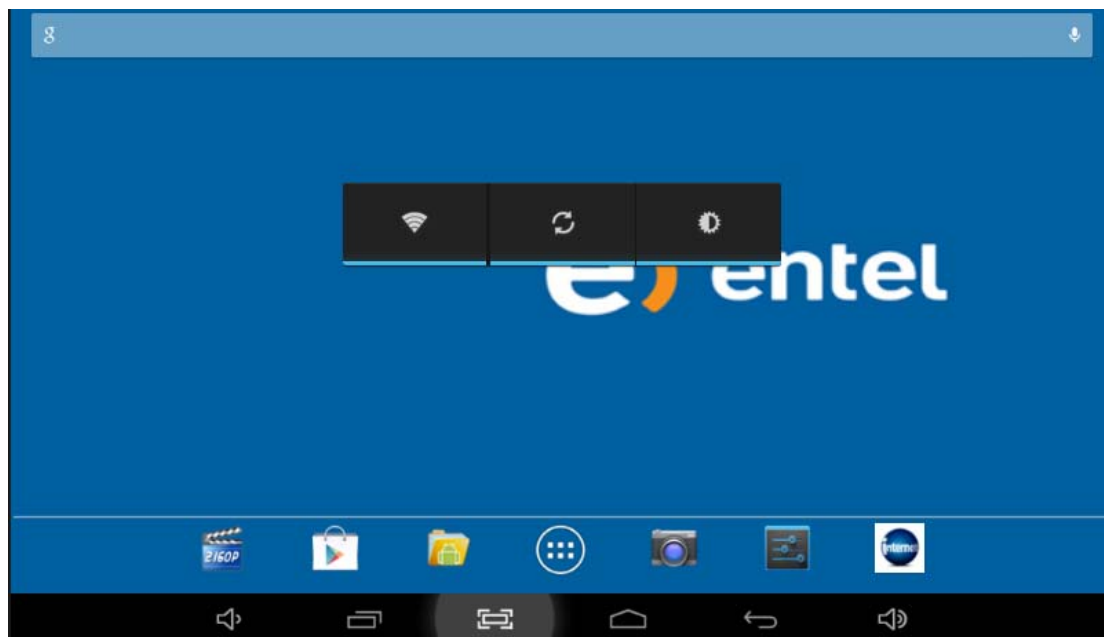


In the main interface, you can :

 Management main interface software ICONS: long press the icons 3 second, after the icons will bigger, then you can drag anywhere in the interface.

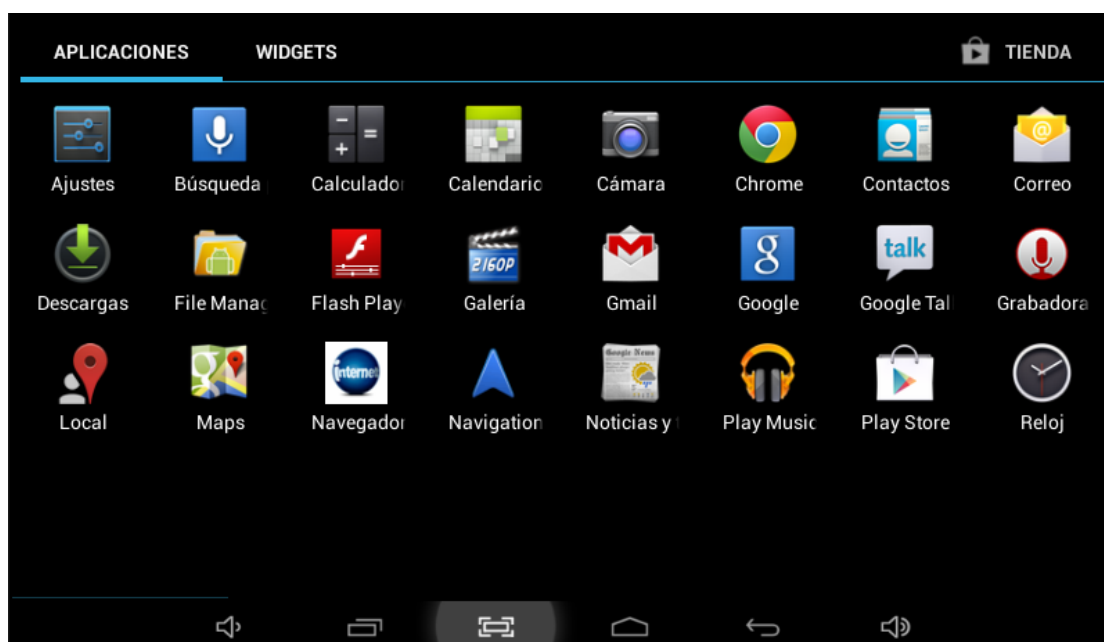

 
Delete icons: long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon

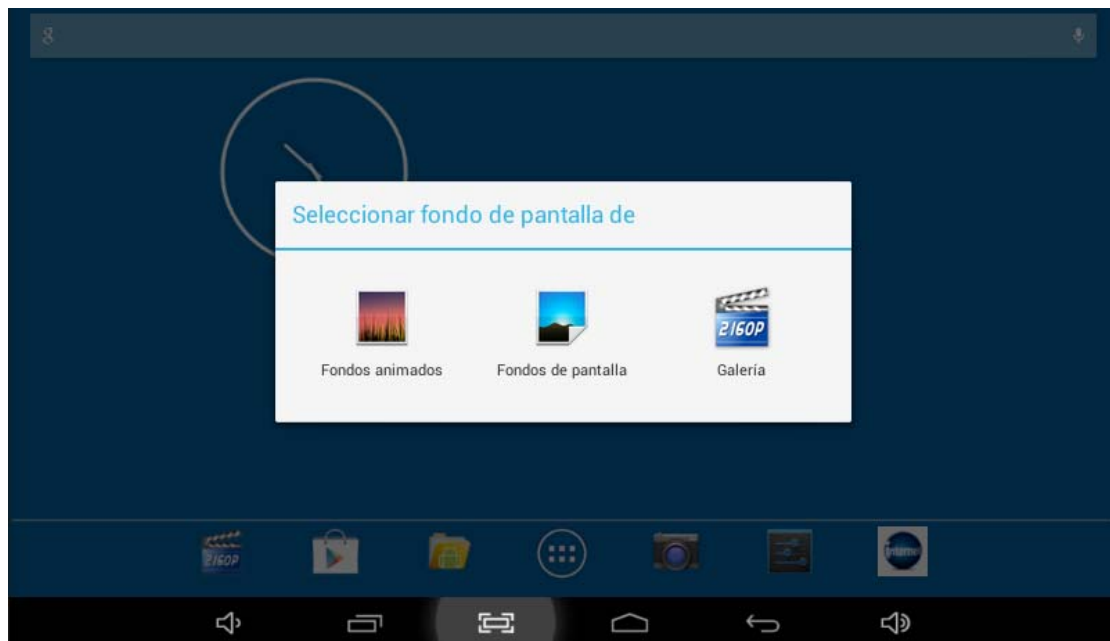


You touch the screen keep a time, appear the dialog box "Add to Home screen" as shown below:




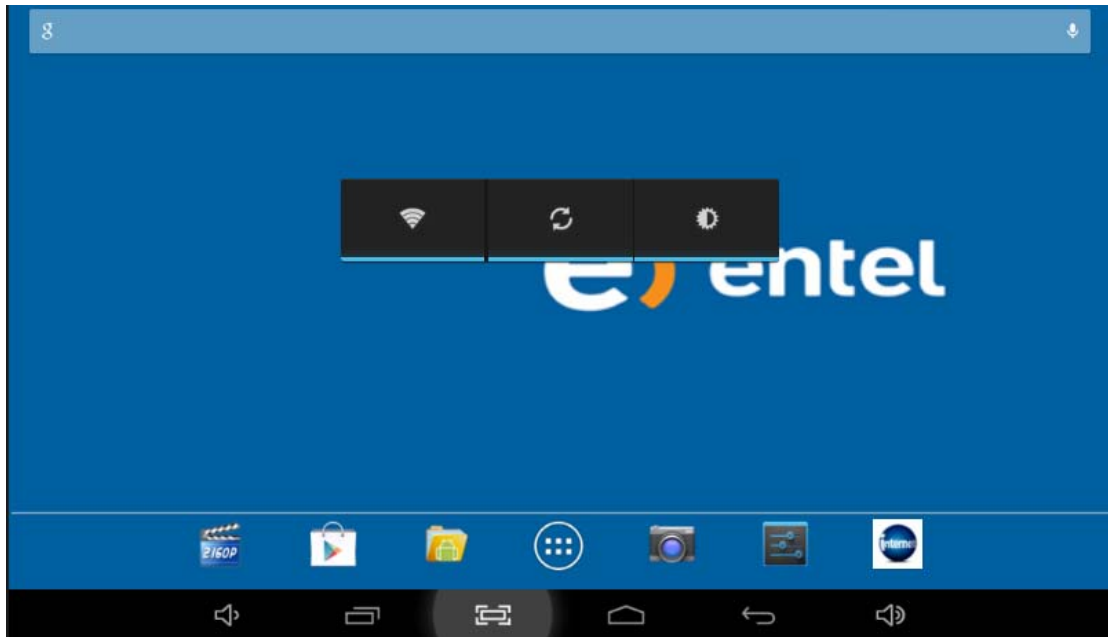 
2.2 Use touch panel

Device equipped with a 7 " touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.

No matter which interface you are on the screen, can go back to main screen through pressing the soft key  on the bottom right corner of the main screen.

【Attention】 The main screen soft key  functions as the machine back key 
In different applications, by tapping the back soft key  on the bottom right corner on the touch screen, you can return to its interface on the up floor.

 
In different applications, by tapping the menu key  on the upper right corner of touch screen, the screen will appear the operation setting interface as follows,



In the main interface, you can touch the icon to open the APPs

In different browser(file, music, video, pictures), You shift and drag the scroll bar, so that the file list can up or down to roll.

3. Equipment basic set

Setting: Click setting icons , enter setting interface





3.1 Sound: Volume, Notification ringtone, Touch sounds, Screen lock sound





3.2 Application Manage applications



Unknown sources: Click “Unknown Sources”, then click “OK”

Manage application: manager and uninstall Application

【Remark】 : when you Firmware Upgrade, pls close the USB connect

 
How to uninstall?

1. enter  “setting”>”Application”>”Manage application” And then there will be

installed the program list

2. Click you want to uninstall icons, will enter the following interface

3. Click Uninstall, then you can delete the application

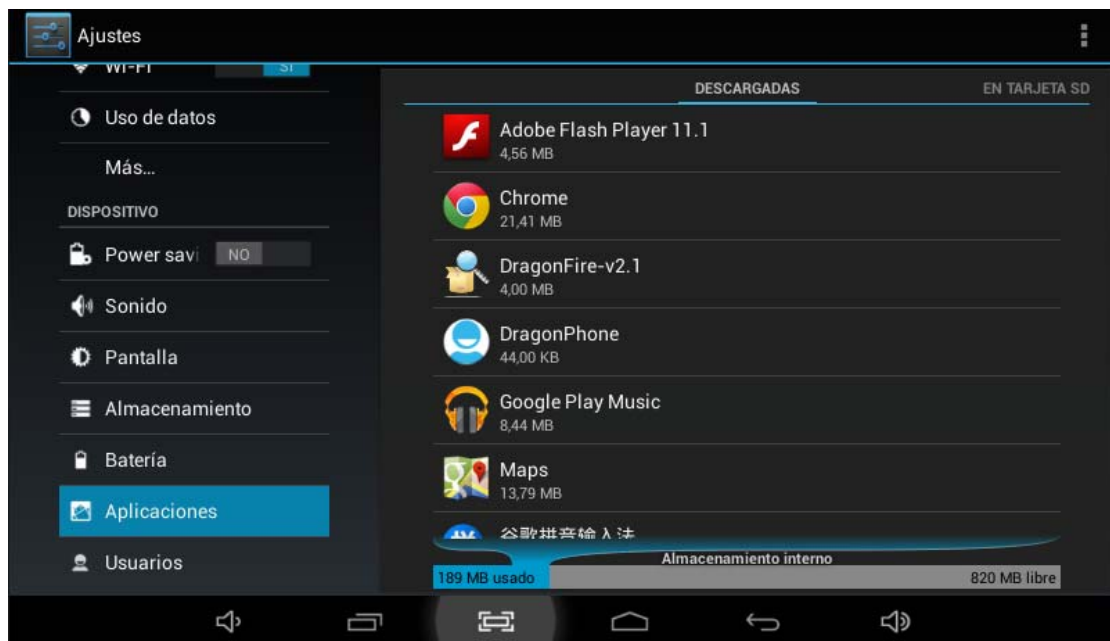

3.3 Privacy

Factory data reset



3.4 Storage

Remove TF card, view of the available storage space



【Remark】 : pls touch option "delete SD card", so that can safety to remove SD card

3.5. Language & keyboard

Setting: (Language), text input and automatic error correction options;



Select Language: all kinds of national languages are available

 
Android keyboard: Android keyboard setting

3.6. Date & time setting

Set date, set time, Select time zone and select date format



3.8 About device

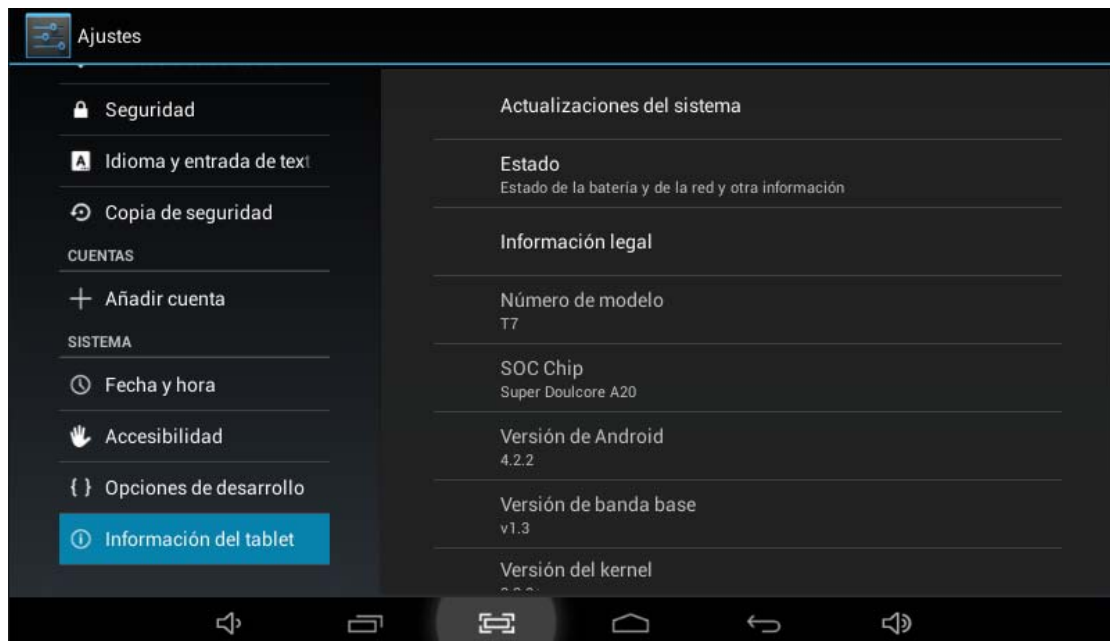

4. Apps Install and manage

This Tablet can support Android APP in market by third party, most Apps can install in the network, can copy to NAND FLASH or SD card.

Click App installer icon, will appear Install, manage, Exit options.

Install: Click install, enter APK install interface

Separately for Internal Memory disk and SD Card disk.

Select the APK you would like to install, click it to install, go back to main menu, will display the installed app you just selected.

Remark: some 3rd APP must install properly by memory card, downloaded 3rd party app may not install properly on device.

Manage: click manage, enter third party interface

Click install icon, will enter Action interface

5. Problem solution

Device can't to open

1. Check the battery power
2. Connect adaptor first, then check again
3. After charging then can't to open, pls contact with the supplier

After startup the screen or the opening picture has been appear , the the device appear shutdown

1. Power is not enough, please charge

Headset can't hear the voice

1. Pls check the volume whether set to 0
2. Check the music file whether damaged. Try playing other music, if the file have damaged may lead to serious noise or hop sounds.

Can copy file or play music and so on

1. Pls check between computer and device is correct connection
2. check the memory storage space is already full
3. check the USB cable is good or not
4. USB connection is disconnected

6. Basic function

Size	192.7mm*120.8mm*10.5 mm	
Screen	7" TFT capacitive screen 800*480	
USB	USB 2.0	
CPU and memory	CPU	A20
	RAM	512MB DDR3
	Memory	4GB
	MicroSD card (TF)	128MB~32GB
	OS	Android 4.2
Network	Wifi	IEEE802.11b/g/n
Power	Battery	3.7V
	Adaptor	DC 5V, 2.0A
Audio	MP3	32K bps – 320K bps
	WMA	16K bps –320K bps
	Frequency response	20Hz to 20KHz +/-3dB
	SNR	>=85dB
	Distortion	<0.6%

	MP3,WMA,MP2,OGG,AAC,M4A,MA4,FLAC,APE,3GP,WAV
Video	AVI(H.264, DIVX, DIVX, XVID, rm, rmvb, MKV(H.264, DIVX, DIVX, XVID), WMV, MOV, MP4 (H.264, MPEG, DIVX, XVID), MPEG, MPG, FLV (H.263, H.264)
Picture	JPG, JPEG, GIF, BMP, PNG
Working condition	-5 ---40°C
Language	Simplified Chinese, traditional Chinese, English and so on
Compatible OP	Windows2K/XP/Vista/Windows7/Linux2.4/MAC OS 10.4

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.