



Model D1450U

2.4 GHz / 5 GHz Dual Band USB 2.0 WLAN card

User's Guide

Conexant Proprietary Information

Revision Notice

Revision	Date	Comments
0.1	16 august 2004	Initial draft

Contents

1	Introduction	1
	Scope 1	
2	Installation	2
	Unpacking the USB WLAN card	2
	What You Need.....	2
	Hardware Installation	2
	Configuring in Microsoft Windows	3
3	Notices	4
	Regulatory Statement for EEC.....	4
	Regulatory Statement for FCC.....	5
	FCC Information to User	5
	FCC Guidelines for Human Exposure.....	5
	FCC Electronic Emission Notices	5
	FCC Radio Frequency Interference statement.....	5
	Regulatory Statement for Canada – Industry Canada (IC)	6

This page is left intentionally blank.

1 Introduction

This USB 2.0 WLAN client card connects your computer to all popular high speed IEEE802.11a, 802.11b and 802.11g wireless networks available today.

Scope

This guide describes the hardware installation procedures for your USB 2.0 WLAN card into a computer running Microsoft Windows Operating System.

2 Installation

Installation of this WLAN product is a simple two-step process consisting of:

1. Hardware installation
2. Configuring in Microsoft Windows.

Unpacking the USB WLAN card

Be certain that you have all the items listed below. This package contains:

- A USB WLAN card
- A USB cable
- User's manual
- Software for the modem

What You Need

You will need:

- A USB host PC system with Plug and Play enabled Windows Operating System

Hardware Installation

Exercise caution at all times when working with AC powered and static-sensitive equipment. Discharge any static electricity from your body by touching any bare metal surface of the PC system, such as its power supply cover.

This USB WLAN card needs to be used with the USB cable provided in the package.

1. Plug the small connector of the USB cable into the USB WLAN card
2. Plug the large connector of the USB cable into an available USB port of the host PC.
3. Now follow the steps outlined in the next section, Configuring Microsoft Windows.

Configuring Microsoft Windows

Follow these steps to install the drivers for Microsoft Windows, provided with the USB WLAN card.

1. When started for the first time after card installation, Microsoft Windows detects the wlan card and displays the **Found New Hardware Wizard** dialog box. Click **Next** to continue.
2. In the newly displayed window, select **Search for a suitable driver for my device (recommended)** and click **Next**.
3. In the displayed window, select **Specify a location** and click **Next**.
4. In the displayed window, click on **Browse**, select the folder in which the modem drivers are located, click **OK**, then click **Next**. (If you have not selected the correct folder, the **Next** button will be greyed out and you will not be able to continue.)
5. If the **Digital Signature Not Found** window is displayed, click **Yes** to continue.
6. Click **Finish** to complete the installation of your wlan card.


3 Notices

Regulatory Statement for EEC

This device complies with the essential requirements and other relevant provisions of the European R&TTE Directive 1999/5/EC.

Compliance to essential test suites is met per standards:

R&TTE Harmonized Standard	Description
LVD specification EN 60950	EN 60950,ed. (1992), incl A1(1993), A2(1993), A3(1995) and A4(1997) Safety of information technology equipment, including electrical business equipment. Meets R&TTE directive art. 3.1.a of essential requirements on protection of the health and safety of the user.
ETSI EMC specification ETSI EN 301 489-1 V1.4.1 (2002-08) ETSI EN 301 489-17 V1.1.1 (2000-09)	Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; <i>Part 1: Common technical requirements</i> <i>Part 17: Specific conditions for Wideband data and HIPERLAN equipment</i> Meets R&TTE directive art. 3.1.b of essential requirements on protection with respect to Electro Magnetic Compatibility.
ETSI RF specification ETSI EN 300 328 Part 1 V1.4.1 (2003-04) ETSI EN 300 328 Part 2 V1.2.1 (2001-12) EN 301 893 V1.2.3 (2003-08)	Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband Transmission systems; data transmission equipment operating in the 2,4 GHz ISM band and using spread spectrum modulation techniques; <i>Part 1: Technical characteristics and test conditions</i> <i>Part 2: Harmonized EN covering essential requirements under article 3.2 of the R&TTE Directive</i> Broadband Radio Access Networks (BRAN), HIPERLAN Type 2 Harmonised EN covering essential requirements of article 3.2 of the R&TTE Directive Meets R&TTE directive art. 3.2.a on effective use of spectrum so as to avoid harmful interference.

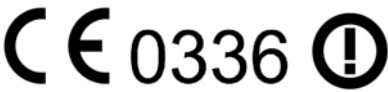	<p style="text-align: center;"><u>Important Notice :</u></p> <p>This device is a dual band 2.4 GHz / 5 GHz low power RF device intended for home and office use in EU and EFTA member states. In some EU / EFTA member states some restrictions may apply. Please contact local spectrum management authorities for further details before putting this device into operation.</p>
---	---

Regulatory Statement for FCC

FCC Information to User

This product does not contain any user serviceable components and is to be used with approved antennas only. Any product changes or modifications will invalidate all applicable regulatory certifications and approvals

FCC Guidelines for Human Exposure

In order to comply with RF exposure limits, the user is advised to maintain a distance of at least 20 cm from the antenna of this device while it is in use. The antenna is integrated within the plastic part of the enclosure.

FCC Electronic Emission Notices

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:


1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation.

Caution:

1--Within 5.15 to 5.25 MHz bands, UNII devices are restricted to indoor operations to reduce any potential harmful interference to co-channel Mobile Satellite Systems (MSS) operations.

2--High power radars are allocated as primary users in the 5.25 to 5.35GHz and 5.65 to 5.85GHz bands. These high power radar stations can cause interference with and/or damage to this device.

FCC Radio Frequency Interference statement

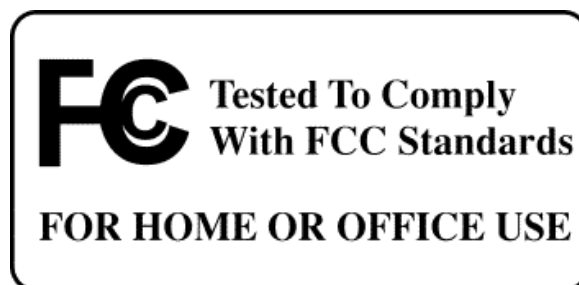

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

Operation of this equipment in a residential area may cause harmful interference, in which case the user will be required to correct the interference at his own expense.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Regulatory Statement for Canada – Industry Canada (IC)

This device complies with RSS 210 of Industry Canada.

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of this device.”

L' utilisation de ce dispositif est autorisée seulement aux conditions suivantes :

- (1) il ne doit pas produire de brouillage et
- (2) l' utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

WARRANTY AND REPAIR SERVICE CENTER:

Company Name: Conexant Systems, Inc.

146 Colonnade Road South

Ottawa, Ontario, K2E 7Y1

Ph: 613-274-0922