




1:14

## Instruction Manual


### Caution

- Do not combine the use of new and old batteries.
- Do not combine the use of different types of batteries.
- Make sure the batteries are installed with the correct polarity in the battery compartment.
- Do not operate the vehicle through puddles of water, on sand, thick carpet or dusty environment that will damage the vehicle and electronic parts.
- Do not operate the vehicle with the same frequency of other player in the same area that will interfere the frequency and make the vehicle out of control.
- Do not store the transmitter and vehicle in a location of high temperature or high humidity. Do not store the product under direct sunlight.
- Do not attempt to disassemble or solder the transmitter and vehicle.

### Content

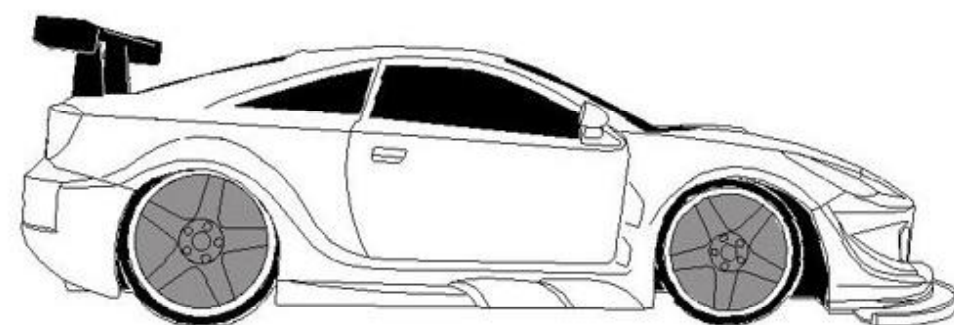

Vehicle

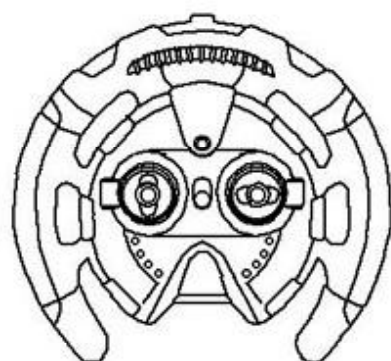


Transmitter



Antenna

### Transmitter Battery Installation


- Make sure the transmitter's power switch is turned **OFF** when installing batteries.
- Unscrew battery cover on the back of transmitter.

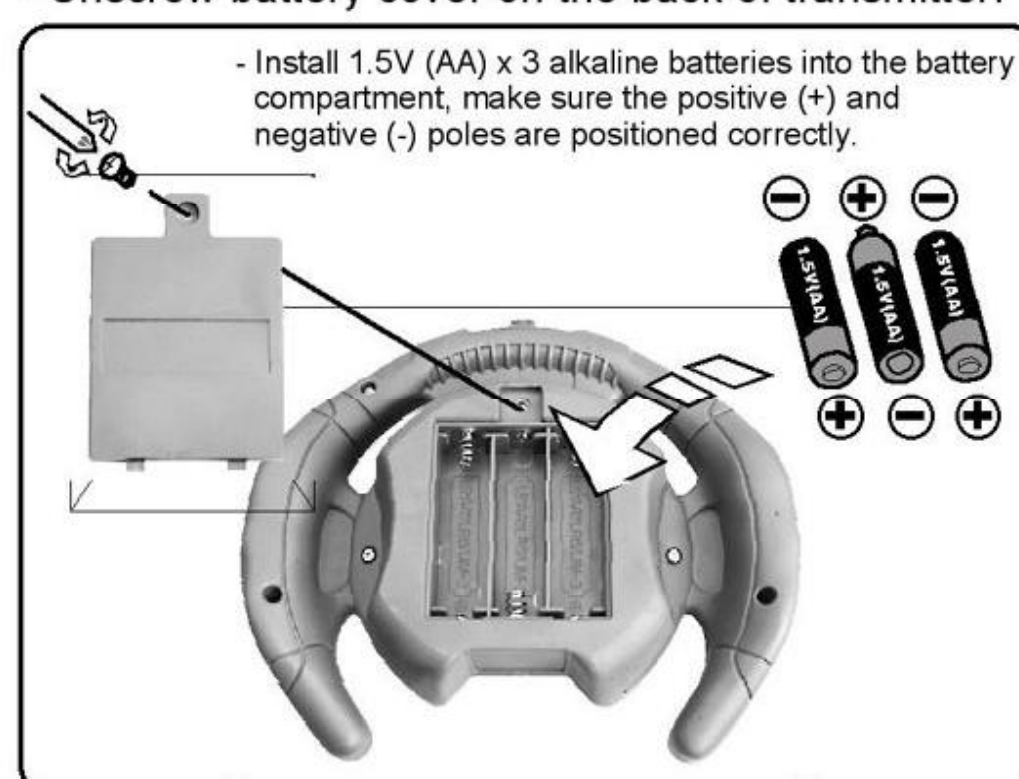

- Replace the battery cover and tighten the screw.

### Vehicle Battery Installation


- Make sure the vehicle's power switch is turned **OFF** when installing batteries.

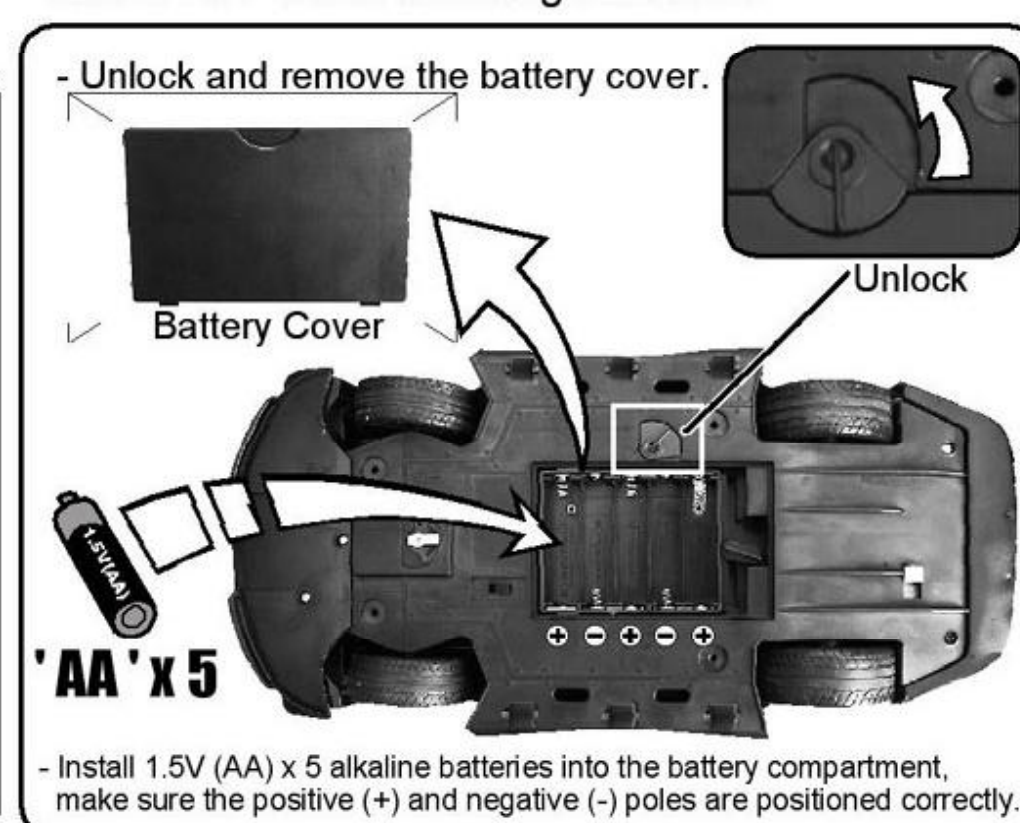


- Replace and lock the battery cover.

### Operation

#### Content Assembly


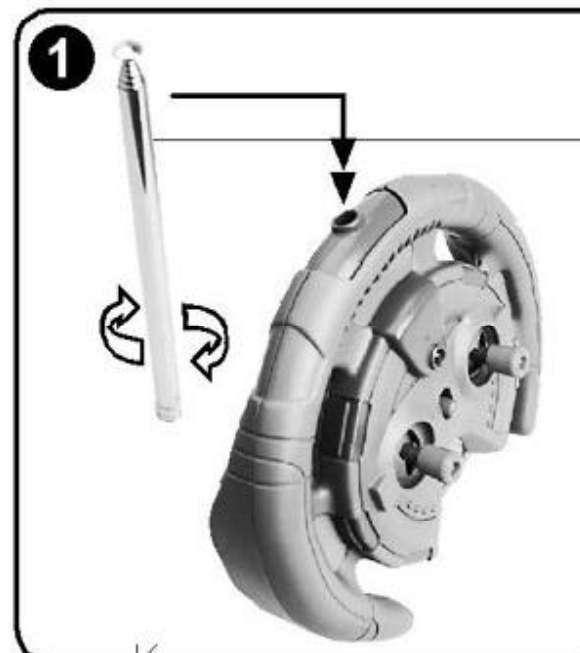


- Twist the antenna (clockwise direction) on top of the transmitter.

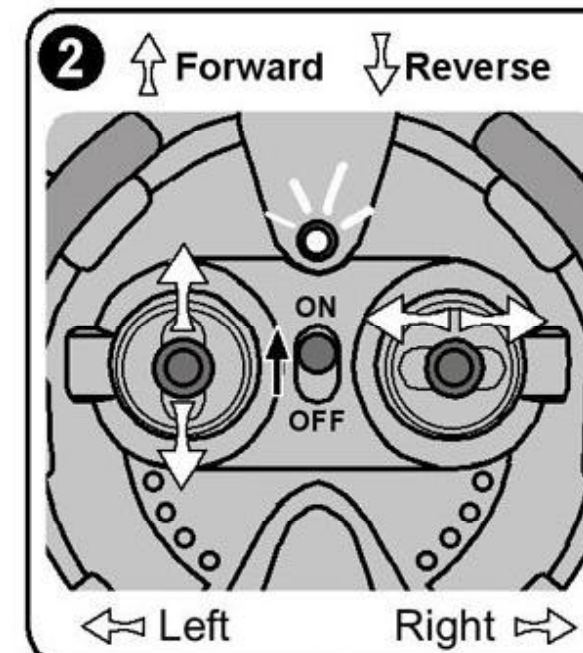


- Turn the power switch of the transmitter to **ON** position and the operation indicator will turn **RED**.
- Operate the vehicle's direction with the lever of the transmitter.


#### Transmitter Index

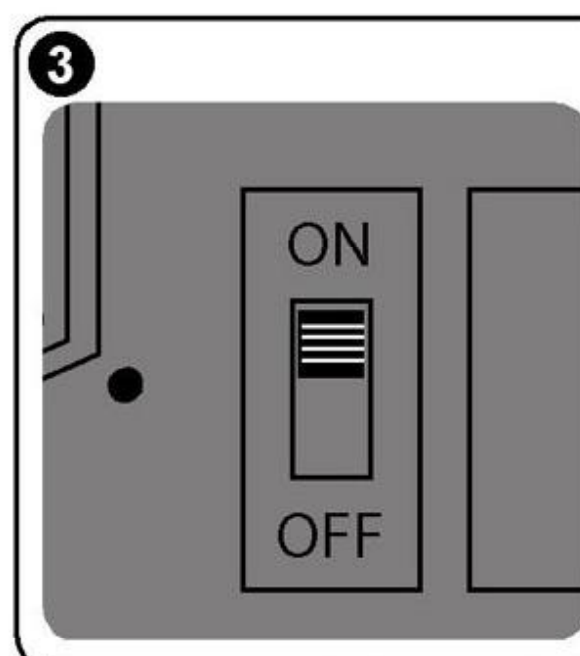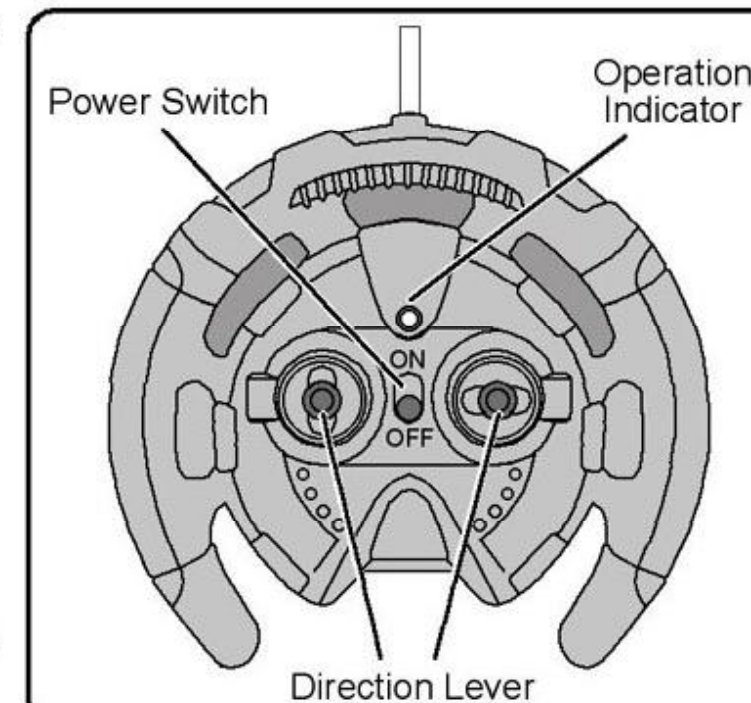

- Turn the power switch located on bottom of the vehicle to **ON** position.

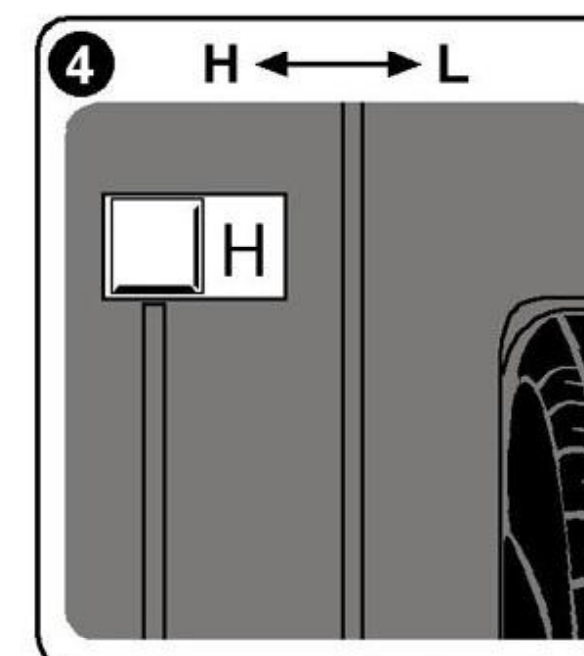

- You can choose fast "H" or slow "L" speed by turning the switch on bottom of the vehicle.

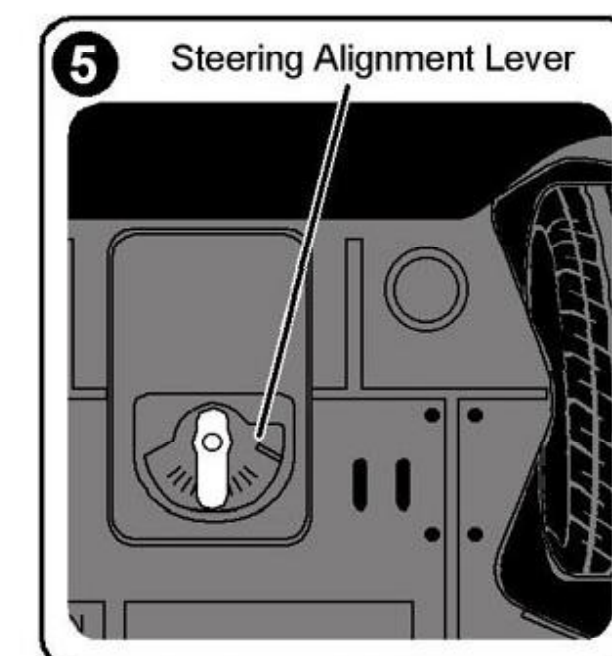


- If you find the vehicle does not run in straight, you can adjust the steering alignment lever on the bottom of the vehicle.

- Turn the power switch of both vehicle and transmitter to **OFF** position after operation.
- Remove all batteries from transmitter and vehicle after playing.

### Remarks

Operation range is estimated 10 meters (without interference).

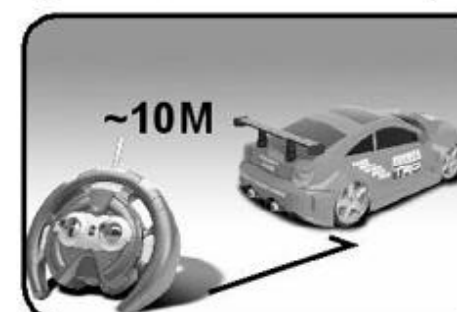

### FCC Statement

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

REMARK: Modifications not authorized by the manufacturer may void users authority to operate this device.

### WARNING

- The supply terminals are not to be short-circuited.
- Avoid water damage to transmitter and vehicle. If they get wet, stop operating immediately and wait until they completely dry.
- Do not dispose batteries in fire that may cause explosion.
- If liquid leaking from the batteries stick to your skin or clothes, wash off immediately. If liquid get into your eyes, wash your eyes with distilled water and consult a physician immediately.