


LM960 – External & Internal Photos




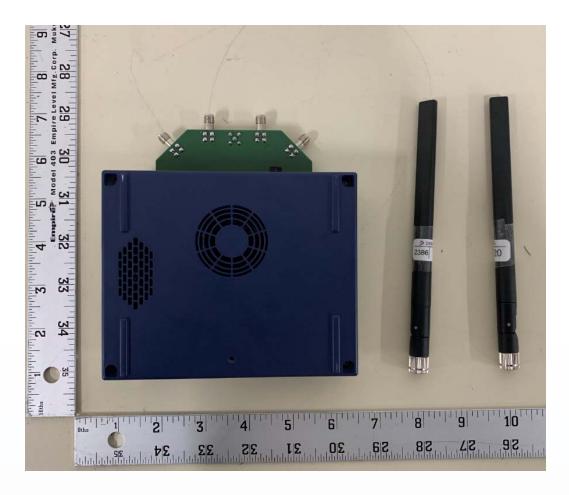


Evaluation board for LM960 & Antennas (Top side)



Evaluation board for LM960 & Antennas (Bottom side)

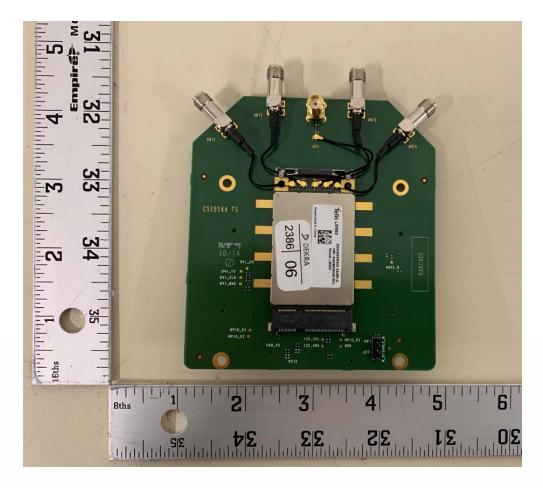

Interface board for LM960 (Top side)

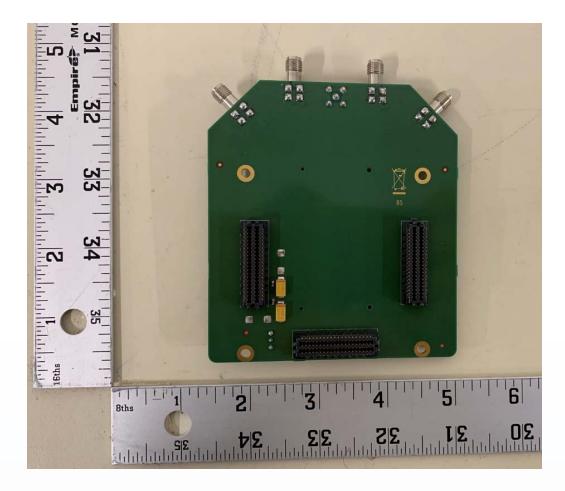

Interface board for LM960 (Bottom side)

EUT Photo (Antenna) _ 5




Antennas





LM960 (Top side)

LM960 (Bottom side)

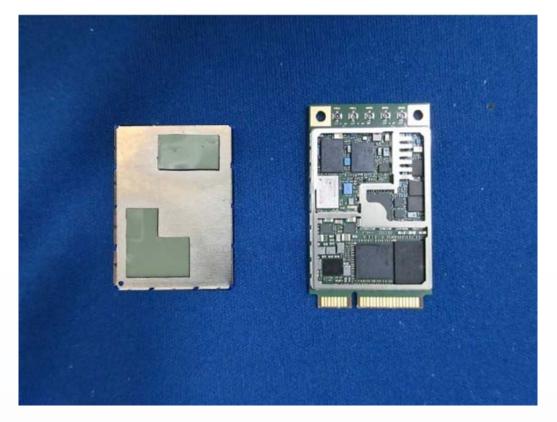





Internal photo of LM960 (With Shield)

Internal photo of LM960 (Without Shield)




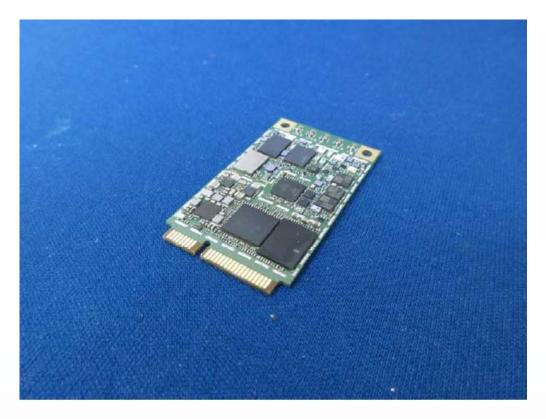


Internal photo of LM960 (Without Shield)

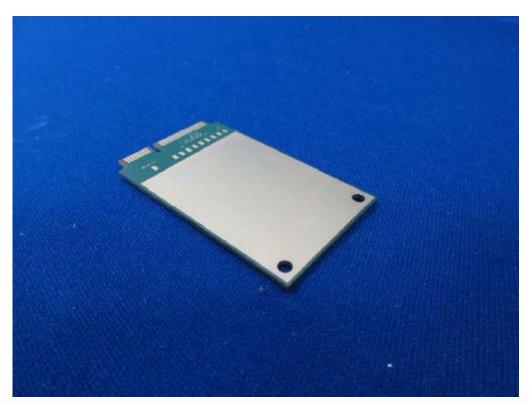



LM960 (Bottom side)

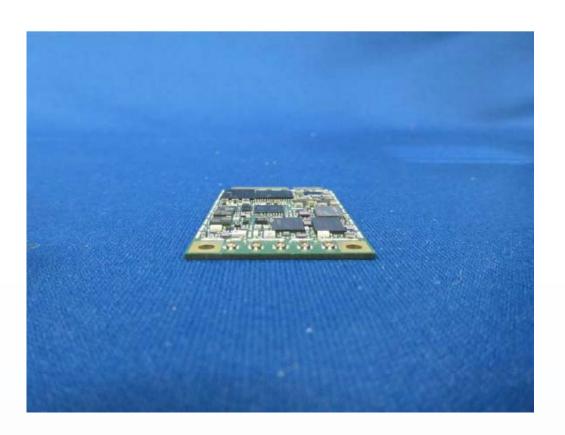

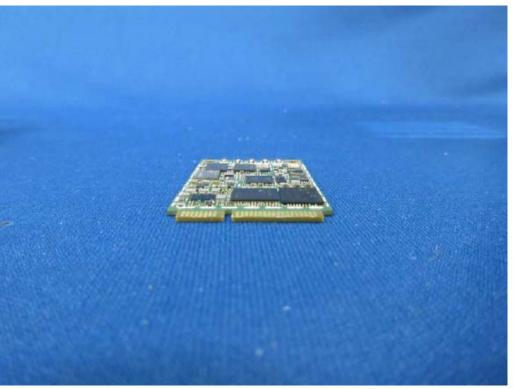

Internal photo of LM960

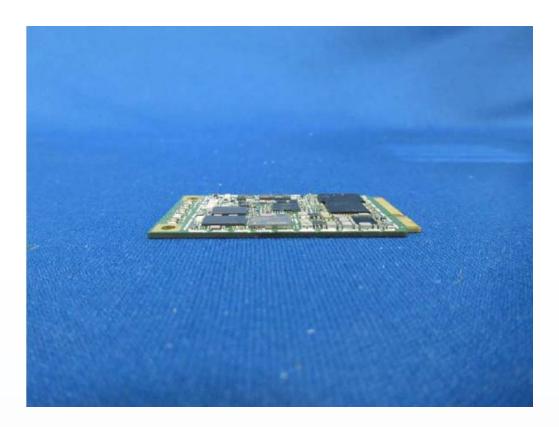

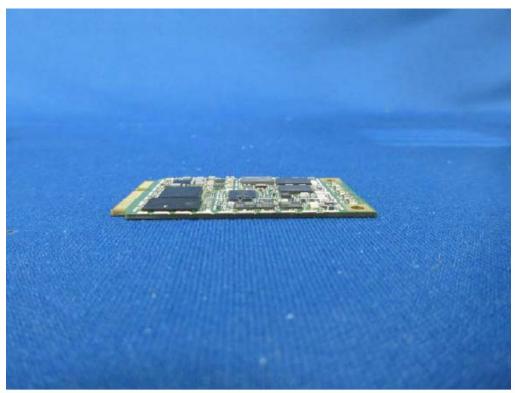



Internal photo of LM960







Internal photo of LM960

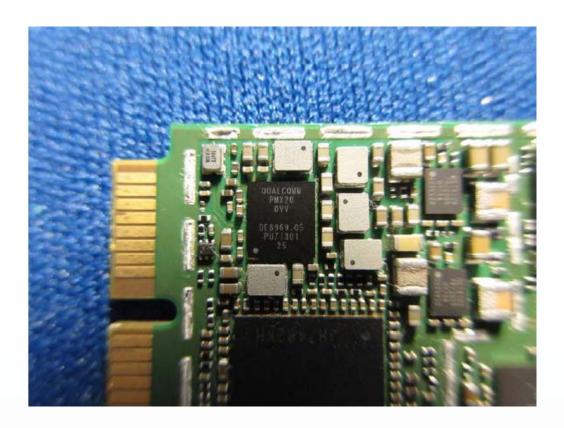

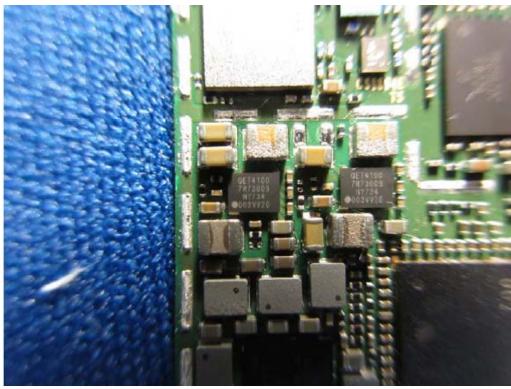



Internal photo of LM960

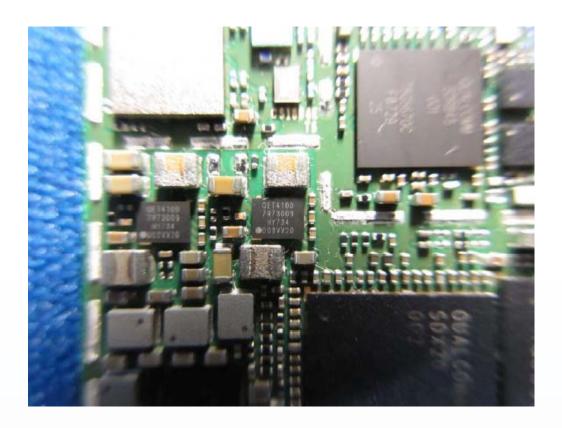

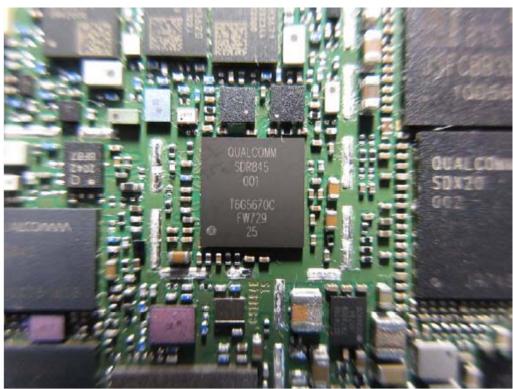



Internal photo of LM960

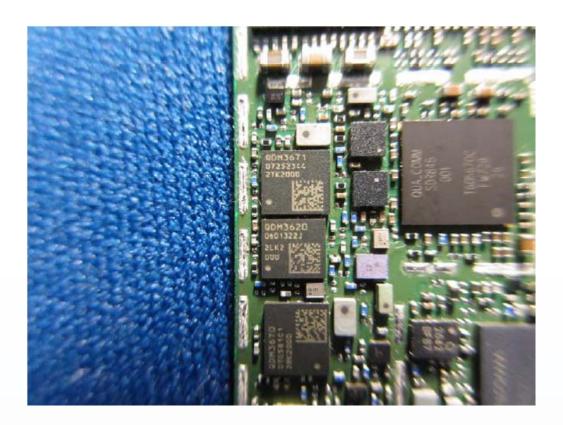

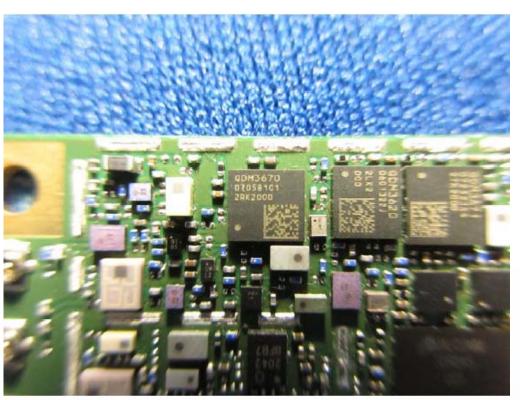


Internal photo of LM960

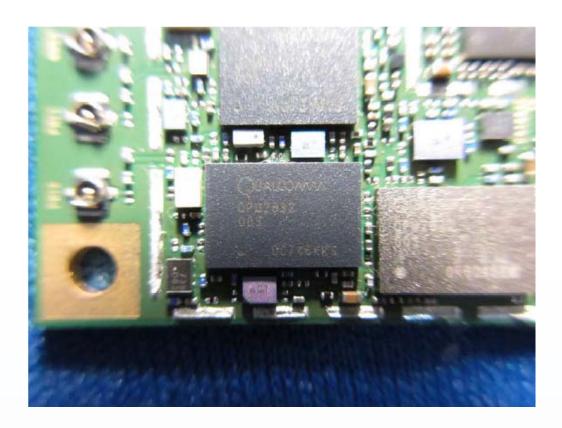


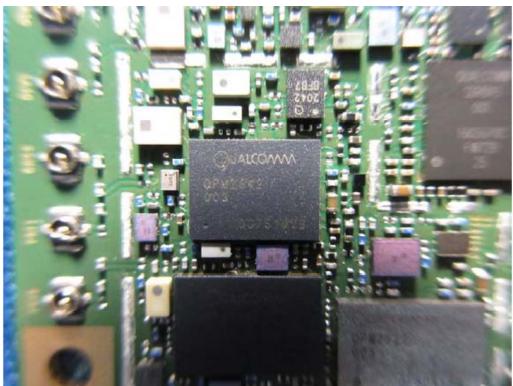

Internal photo of LM960

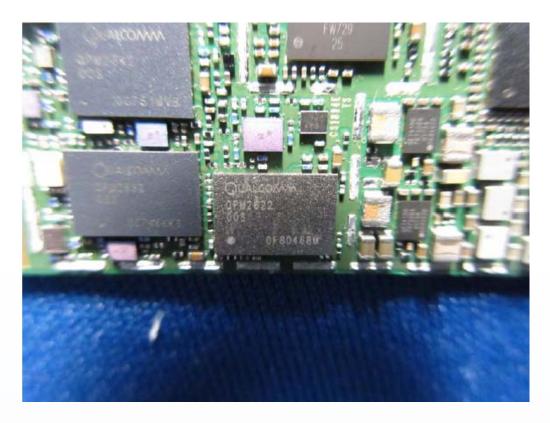

Internal photo of LM960

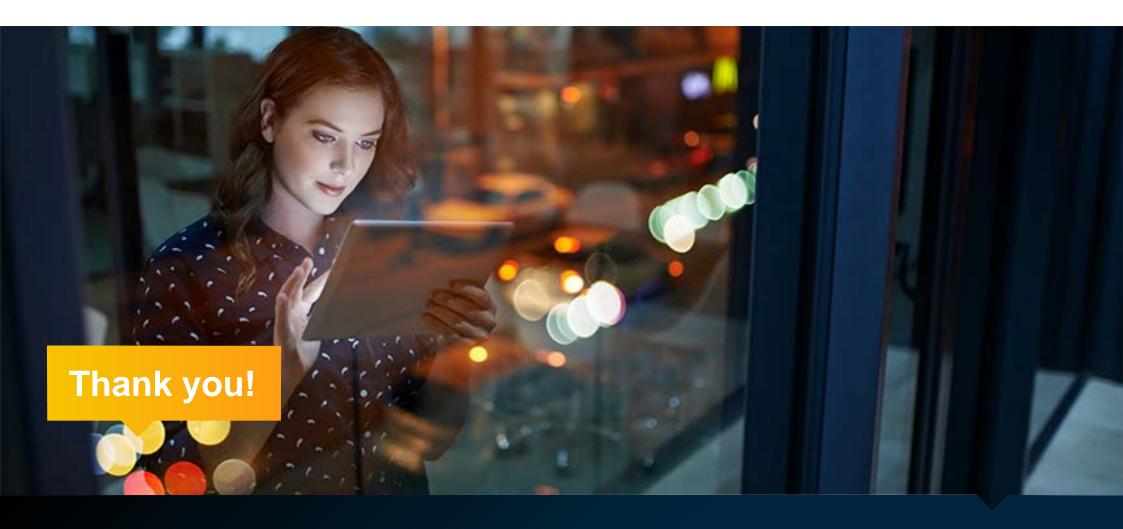

Telit reserves all rights to this document and the information contained herein. Products, names, logos and designs described herein may in whole or in part be subject to intellectual property rights. The information contained herein is provided "as is." No warranty of any kind, either express or implied, is made in relation to the accuracy, reliability, fitness for a particular purpose or content of this document. This document may be revised by Telit at any time. For most recent documents, please visit www.telit.com © 2018 Telit

