

Venue 10

5000 Series

Quick Start Guide

Quick Start Guide

Quick Start Guide

Quick Start Guide

Quick Start Guide

For Proof Only
Dell Confidential

1 Connect the power adapter and turn on your tablet

Connect the power adapter and turn on your tablet
Connect the power adapter and turn on your tablet
Connect the power adapter and turn on your tablet
Connect the power adapter and turn on your tablet

2 Finish Android setup

Finish Android setup
Finish Android setup
Finish Android setup



Connect to your network.

Connect to your network.
Connect to your network.
Connect to your network.

NOTE: If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.

NOTE: If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.

NOTE: If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.

NOTE: If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.



Sign in to your Google account or create a new account.

Sign in to your Google account or create a new account.

Sign in to your Google account or create a new account.

Sign in to your Google account or create a new account.

3 Register your tablet

Register your tablet
Register your tablet
Register your tablet

dell.com/support/retail


Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)

Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)

Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)

Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)

Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)

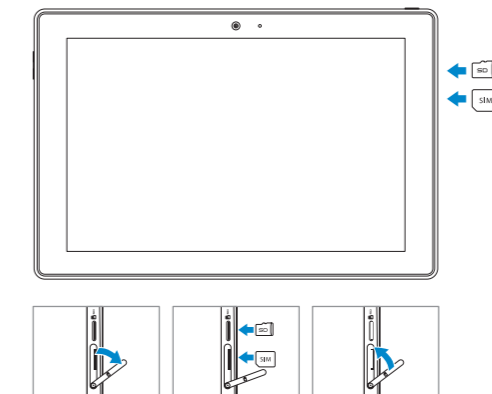

Product support and manuals
Product support and manuals
Product support and manuals
Product support and manuals
Product support and manuals

dell.com/support
dell.com/support/manuals

Contact Dell
Contact Dell | Contact Dell
Contact Dell | Contact Dell

dell.com/contactdell

Regulatory and safety
Regulatory and safety | Regulatory and safety
Regulatory and safety | Regulatory and safety

dell.com/regulatory_compliance

Regulatory model
Regulatory model | Regulatory model
Regulatory model | Regulatory model

T14G

Regulatory type
Regulatory type | Regulatory type
Regulatory type | Regulatory type

T14G001

Computer model
Computer model | Computer model
Computer model | Computer model

Venue 10 5050
Venue 10 5050 WWAN
Venue 10 5050 series [ZHCN only]

Información para NOM, o Norma Oficial Mexicana

La información que se proporciona a continuación se mostrará en los dispositivos que se describen en este documento, en conformidad con los requisitos de la Norma Oficial Mexicana (NOM):

Importador:
Dell México S.A. de C.V.
Paseo de la Reforma 2620 - Piso 11.º
Col. Lomas Altas
11950 México, D.F.

Número de modelo reglamentario:	T14G
Voltaje de entrada:	100 VAC–240 VAC
Corriente de entrada (máxima):	0,3 A
Frecuencia de entrada:	50 Hz–60 Hz
Corriente de salida:	2 A
Voltaje de salida	5 VDC


© 2014 Dell Inc.
© 2014 Google Inc.

For Proof Only
Dell Confidential


Printed in China.
2014-11

Connecting the keyboard

Connecting the keyboard | Connecting the keyboard
Connecting the keyboard | Connecting the keyboard

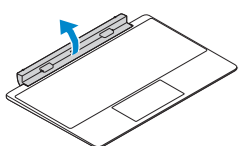


Turn the dock panel outwards to 90 degrees.
Turn the dock panel outwards to 90 degrees.
Turn the dock panel outwards to 90 degrees.
Turn the dock panel outwards to 90 degrees.

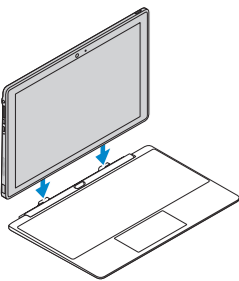

Align the dock latches with the tablet dock-guides and dock the tablet to the keyboard dock.
Align the dock latches with the tablet dock-guides and dock the tablet to the keyboard dock.
Align the dock latches with the tablet dock-guides and dock the tablet to the keyboard dock.
Align the dock latches with the tablet dock-guides and dock the tablet to the keyboard dock.

Disconnecting the keyboard


Disconnecting the keyboard | Disconnecting the keyboard
Disconnecting the keyboard | Disconnecting the keyboard

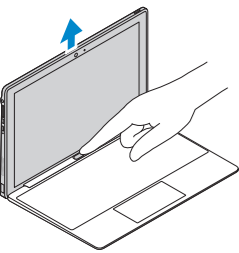


Press the undock button and remove the tablet.
Press the undock button and remove the tablet.
Press the undock button and remove the tablet.
Press the undock button and remove the tablet.

Modes

Modes | Modes | Modes

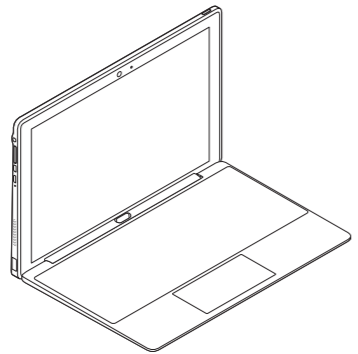


Laptop mode
Laptop mode
Laptop mode
Laptop mode
Laptop mode

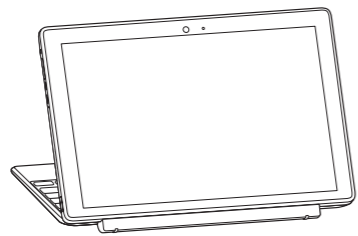

Media mode
Media mode
Media mode
Media mode


Features

Features | Features | Features | Features

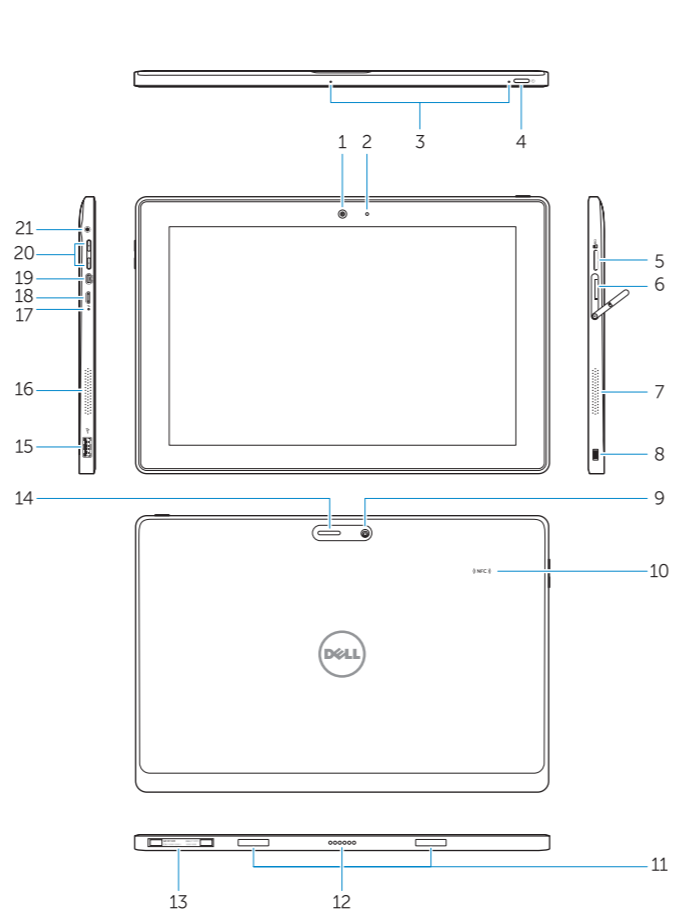

- 1. Camera
- 2. Camera-status light
- 3. Microphones
- 4. Power button
- 5. MicroSD memory card reader
- 6. Micro-SIM reader (LTE/HSPA+ models only)
- 7. Speaker
- 8. Noble security-cable slot
- 9. Back camera
- 10. Near Field Communication (NFC) reader
- 11. Dock-guide slots
- 12. Dock pins
- 13. Service-tag label
- 14. Wi-Fi / WWAN status light
- 15. USB 2.0 connector
- 16. Speaker

- 17. Battery-status light
 - 18. Micro USB power connector
 - 19. Micro HDMI connector
 - 20. Volume buttons
 - 21. Audio connector
- Keyboard dock (optional)**
- 22. Dock connector
 - 23. Dock latches
 - 24. Undock button
 - 25. Touchpad
- Pen (Optional)**
- 26. Pen Tip (replaceable)
 - 27. Programmable buttons
 - 28. Pen loop

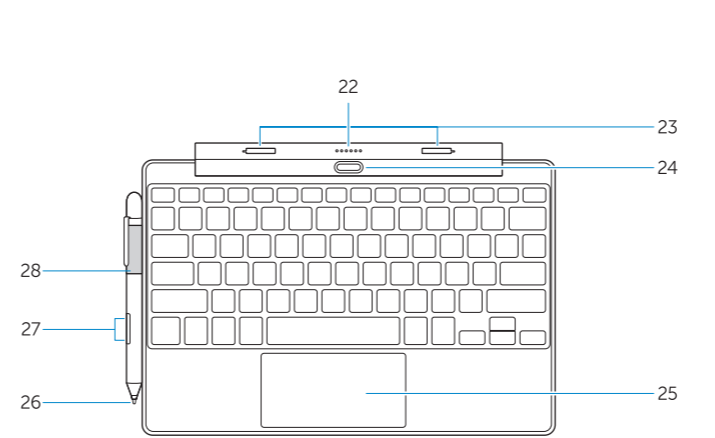

- 1. Language2
- 2. Language language language
- 3. Language
- 4. Language language
- 5. Language
- 6. Language language language
- 7. Language language
- 8. Language language language
- 9. Language language language
- 10. Language language
- 11. Language
- 12. Language language language
- 13. Language language
- 14. Language language language
- 15. Language
- 16. Language language
- 17. Language language language

- 1. Language3
- 2. Language language language
- 3. Language
- 4. Language language
- 5. Language
- 6. Language language language
- 7. Language language
- 8. Language language language
- 9. Language language language
- 10. Language language
- 11. Language
- 12. Language language language
- 13. Language language
- 14. Language language language
- 15. Language
- 16. Language language
- 17. Language language language

- 18. Language
- 19. Language language language
- 20. Language
- 21. Language language
- 22. Language language language
- 23. Language
- 24. Language language language
- 25. Language language
- 26. Language language language
- 27. Language
- 28. Language language

- 18. Language
- 19. Language language language
- 20. Language
- 21. Language language
- 22. Language language language
- 23. Language
- 24. Language language language
- 25. Language language
- 26. Language language language
- 27. Language
- 28. Language language

- 1. Language4
- 2. Language language language
- 3. Language
- 4. Language language
- 5. Language
- 6. Language language language
- 7. Language language
- 8. Language language language
- 9. Language language language
- 10. Language language
- 11. Language
- 12. Language language language
- 13. Language language
- 14. Language language language
- 15. Language
- 16. Language language
- 17. Language language language

- 1. Language5
- 2. Language language language
- 3. Language
- 4. Language language
- 5. Language
- 6. Language language language
- 7. Language language
- 8. Language language language
- 9. Language language language
- 10. Language language
- 11. Language
- 12. Language language language
- 13. Language language
- 14. Language language language
- 15. Language
- 16. Language language
- 17. Language language language

- 18. Language
- 19. Language language language
- 20. Language
- 21. Language language
- 22. Language language language
- 23. Language
- 24. Language language language
- 25. Language language
- 26. Language language language
- 27. Language
- 28. Language language

- 18. Language
- 19. Language language language
- 20. Language
- 21. Language language
- 22. Language language language
- 23. Language
- 24. Language language language
- 25. Language language
- 26. Language language language
- 27. Language
- 28. Language language