

Content

- 1.The Device
 - 1.1 Features
 - 1.2 Accessories
 - 1.3 Part Description
 - 1.4 Keys, Functions and Specification
 - 1.5 Operation List
- 2.Get Started
 - 2.1 Charging
 - 2.2 Power On
 - 2.3 Language Setting
 - 2.4 Pairing/Connecting the B. Voice
 - 2.4.1 First Time pairing
 - 2.4.2 Connecting
 - 2.5 Setting up the B. Voice
 - 2.5.1 Phone Book Transfer for Caller ID Announcement
 - 2.5.2 Deleting phone book
 - 2.6 Volume Control & Ring Volume Control
 - 2.7 Disconnect bluetooth
 - 2.8 Power Off
3. Speed Dialing
4. Making Call
 - 4.1 Making Call from last dialed number
 - 4.2 Receiving Call
 - 4.3 Rejecting Call
 - 4.4 Caller ID Announcement
 - 4.5 Voice Dialing
 - 4.6 Options during a Call
 - 3.6.1 Call Waiting
 - 3.6.2 Transfer Call between mobile and B. Voice during conversation
 - 3.6.3 Mic Gain control and Mute
5. Trouble Shooting

*Notes:

Please do not attempt to charge the unit with personal computer, please use the car charger provided to do the charging.

1. The Device


BTS28VB05

1.1 Features:

- Integrated Text-To-Speech system (TTS)
- Voice announcement during incoming call and operation
- Professional DSP for echo cancellation and noise reduction
- Microphone gain control
- Speed Dialing
- Digital Volume Control
- Last number redial
- Voice Dialing
- Software Upgradeable*
- Built-in Battery

*Please consult local retailer for detail

1.2 Accessories

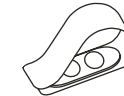

Car Charger Operation Manual Universal Sun Visor Clip

*Notes:

Manufacturer of Car charger: DongGuan Channex Electronics Products Co., Ltd
Model No: SAC-171-0500650-1
Input voltage: 12V-24V DC
Output No Load: 5.0V~5.5V DC
Load: 4.7V~5.3V DC 650mA



The ferrite bead on the charger must be fixed with the cable at all time. In case of lose, please follow below intrusion to install it back to the Cable

1. Surround the ferrite bead by the charging cable

2. Clip it and it will be locked



Appropriate to use B. Voice ...

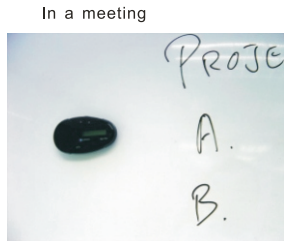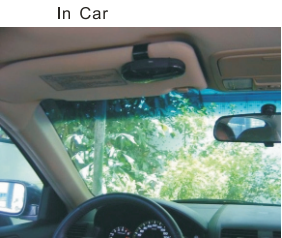


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.




 
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

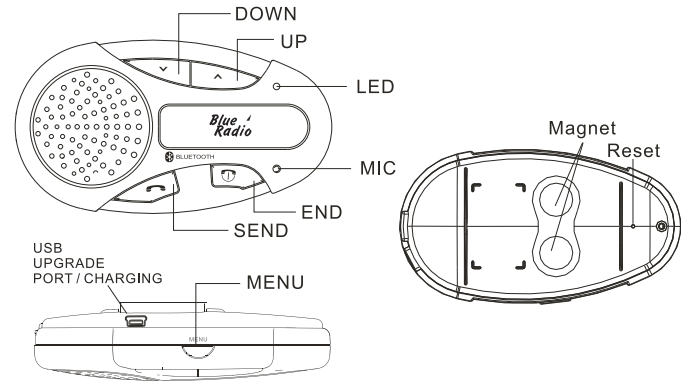1.3 Part Description



1.4 Keys and Functions

 <ul style="list-style-type: none">• Receive call• Voice dialing• Conversation transfer• Yes• Bluetooth link connection	 <ul style="list-style-type: none">• End call• Reject call• No• Power on / off (press and hold for 2 seconds)
 <ul style="list-style-type: none">• Volume +• Upward• Leftward• Microphone gain control +	 <ul style="list-style-type: none">• Volume -• Downward• Rightward• Microphone gain control -

MENU

Language Setting:

- British English, American English, Deutsch, Espanol, Italiano, French

Pairing Mode**Specification**

Function	Description
Mic Sensitivity	-60 +/- 2dB
Speaker	8ohm / 1W
Input Voltage	5.0V
Battery	Li-ion 3.7V 650mAH
Frequency Range	2402MHz to 2480MHz
Working Current	100mA
Standby Current	3.5mA
Operating Tempature	-10 ~ 50 C°
Storing Temperature	-20 ~ 60 C°
Talking Time	10 Hours Max
Standby Time	200 Hours Max

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The antennas used for this transmitter as shown in this filing must be installed to provide a separate distance of at least 20cm from all persons and must not be con-located or operating in conjunction with any other antenna or transmitter

1.5 Operation List

Features	Operation
Power on	Press and hold
Power off	Press and hold
Language Select into	Press
Confirm language select	Press
Cancel language select	Press
Pairing mode	Press and hold
Requst connect bluetooth	Press and hold
Dissconnect bluetooth	Press and hold +
Transfer PB by AT CMD ?	Press and hold +
Transfer PB by AT CMD Confirm	Press
Transfer PB by AT CMD Cancel	Press
Delete PhoneBook	Press and hold +
Delete PhoneBook confirm	Press
Delete PhoneBook cancel	Press
OPP Received the speed phone number(B. Voice will auto disconnect BT)	Press and hold + Press and hold + Press and hold +
Speed Dial number	Press and hold Press and hold Press and hold
Call transter to Mobile	Press and hold
Call transter from Mobile to B. Voice	Press and hold or Single Press
Call Waitting	Press
Voice Dial	Press and hold
Last number redial	Double click
MIC GAIN HIGH OR LOW	Press and hold or
Volume increae	Press
Volume decreae	Press
Mute or Unmute	Press

2. Get Started

2.1 Charging:

Steps to Charge B. Voice:

- CIGAR LIGHTER CHARGING → STEP1: Connect the car charger to a power outlet
- STEP2: Connect the DC power jack of the B. Voice

2.2 Power on:

1. To power on the unit, press and hold . **TTS: Power On**
2. B. Voice will then enter search mode.
3. If no device was found, it will switch to standby mode. To search again, press once to activate search mode. **TTS: Searching For Device**
If there is no connection for 5 minutes, B. Voice will automatically power off. **TTS: Power Off**

Before pairing, please make sure Bluetooth mode on your mobile phone is activated. For automatic pairing, you must successfully connect to B. Voice at least once in order for the feature to activate. Otherwise, for the first use, auto searching will not be activated automatically during start up.

2.3 Language Setting:

B. Voice offer multi languages interface, British English, American English, Deutsch, Espanol, Italiano, French.

To select language:

1. Press once, **TTS: Press send button to select language**
2. Press to confirm the language selected.
3. Press to cancel **TTS: Cancel Language setting** or,
4. If no action was taken, it will repeat 2 times and then exit.

2.4 Pairing / Connecting the B. Voice:

2.4.1 First time pairing

1. Make sure the unit is no longer in search mode or press once. Press and hold for 2 seconds. **TTS: Pairing Mode**
2. Use you mobile to search B. Voice.
(Please refer to you mobile's operation manual for detail)
3. After B. Voice was successfully found by your mobile, it will display the register ID on your mobile. The ID of B. Voice is "BTS28V" and it will display on your mobile when linked.
4. Enter "1234" when a passcode is requested.
5. If it is successfully paired, **TTS: Pairing Successful**
6. If no response for 1 minute, it will auto exit. **TTS: Exit Pairing**

2.4.2 Connecting

After pairing, you can connect B. Voice via your mobile or by pressing the button of B. Voice once. Make sure Bluetooth has been activated on the mobile phone before pressing the button.
(Please refer to your mobile's operation manual about connecting Bluetooth device)
Once it is connected, **TTS: Bluetooth Connected**.

2.5 Setting up the B. Voice

**Some setup function only available when B. Voice is connected to a device.

2.5.1 Phonebook Transfer for Caller ID Announcement

In order for the unit to speak out the caller's name during income call, user must transfer the phonebook contact to the unit.

AT COMMAND

1. Press and hold + .
2. Press to download or to cancel
TTS: Please press send button to load contact
TTS: Transfer In Process Please Wait or **Cancel Load Contact**
3. Blue LED will flash while transferring
4. When completed, **TTS: Download successful**

NOTE: NOT ALL MOBILES SUPPORT AT COMMAND. If fail to transfer, **TTS: No Response** then exit

OPP (Object Push Profile)

1. If it is currently connected, please disconnect Bluetooth Link by press and hold + .
2. Do the proper setting on the mobile phone for copying and transferring the contacts from the mobile phone to B. Voice
(Please refer to the mobile's operation manual for detail)




 
IMPORTANT NOTES:

B. Voice can store up to 500 phone numbers. If it exceed the maximum capacity, the unit will give a warning message. **TTS: Memory Full**
Hence, if the user are trying to transfer 600 records to the unit, only 500 records will be successfully transferred.

2.5.2 Deleting Phonebook

1. To delete phone book, press and hold + .
2. Press to confirm or to cancel
TTS: Press Send Button to Delete Contact
TTS: All contact deleted or **Cancel Delete Contact**

2.6 Volume & Ring Volume


User can adjust the volume by pressing the  or  during a call.
User can adjust ring volume level by pressing the  or  in the root.

Note: When the volume reach the max or min,
TTS: *Maximum Volume* or *Minimum Volume*

2.7 Disconnect Bluetooth









To disconnect Bluetooth link, press and hold  +  for 2 seconds. **TTS: *Phone Disconnected***

2.8 Power Off

To power off, press and hold  for 2 seconds
TTS: *Power Off*

3. Speed Dialing

B. Voice offer 3 slots of memory for Speed Dialing. To setup:

1. Press and hold  + either ,  or 
(Each slot are represented by ,  or )
TTS: *Ready for contact transfer*
2. Use your mobile to send a single contact to the unit through Bluetooth
Please refer to your mobile operation's menu for detail.
3. When successful transfered, you will hear a tone from B. Voice.
5. If fail to transfer, the unit will exit Speed Dialing setup mode after 1 minute
- 4 Reconnect Bluetooth link by pressing  or through the mobile


IMPORTANT NOTES:

Since some mobiles support multiple phone numbers under the same contact/name, B. Voice. is unable to recognize your preferred number from those contacts. To enable B. Voice to recognize the phone number, the contact/name should be organized in only one contact/name before transferring to B. Voice.


4. Making Call

User can make call either from mobile or B. Voice


4.1 Making Call from last dialed number

1. Press  twice and it will automatically redial the last dialed number.
TTS: *Last Number redial*

4.2 Receiving Call

To receive Call, simply press .

4.3 Rejecting Call

To reject call, simply press  **TTS: *Call Ended***

4.4 Caller ID Announcement


Caller ID is a network service, please consult your network provider for details.

There are 3 types of announcement:

1. With Name* - **TTS: *Call From "Caller's Name"***
2. With Number - **TTS: *Call From "Phone Number"***
3. Withheld - **TTS: *Incoming Call***

4.5 Voice Dialing

To Enter Voice dialing mode:

1. Hold  key for 2 seconds **TTS: *Voice Dial***
2. Speak the name after the tone



*Phonebook must be transferred to the unit in order to activate this function.

4.6 Options during a call

4.6.1 Call Waiting:

**This is a network service, please consult your network provider for details

Accepting incoming call during a conversation

1. Press  and it will automatically switch to Line2
2. To switch between to Lines, press 

4.6.2 Transfer Call between mobile and B. Voice during conversation

Press and hold  for two seconds.

4.6.3 Mic Gain control and Mute

Mic Gain:

To increase Microphone Gain, press and hold  for 2 seconds.

TTS: Microphone gain High

To decrease Microphone Gain, hold  for 2 seconds

TTS: Microphone gain Low

Mute:

To mute, simply press . **TTS: Mute**

To cancel, press  once again. **TTS: Unmute**

5. Trouble Shooting

Phone status showing:

It is depending on the availability and provides by the connected mobile phone

Mobile phone couldn't pair with B. Voice:

1. Please power off and on again B. Voice then repeat the pairing procedures again.
2. Set off all other Bluetooth devices before start pairing.
3. Either B. Voice and the mobile phone are able to be master or slave to pair with other Bluetooth device, however pairing will not work if those are being master or slave at the same time.

Loudspeaker sound level too low:

Please increase the volume level to maximum on the mobile phone during conversation.

Voice too low to be heard from the person who talking to B. Voice user:

Do the following steps while conversation in progress

1. Adjust the microphone gain to maximum on B. Voice, or
2. The person who is talking to B. Voice user adjust his/her mobile phone volume to maximum.

Strong echo heard from the person who is talking to B. Voice user:

During Conversation, transfer the call to mobile and listen. If echo disappeared, please transfer the call again from mobile phone to B. Voice and lower the loud speaker until echo is eliminated. If the echo is still remains, that means the echo is generated by the network provider or mobile phone itself. B. Voice is unable to eliminate.

Loudspeaker volume of B. Voice too low or high and impossible to adjust:

Please adjust the volume directly on the mobile phone as desired, then fine tune it by the volume control of B. Voice.

The number dialed by mobile phone couldn't be found from B. Voice:

All number which are dialed directly from the mobile are unable to save in B. Voice, please check it on the mobile phone.

All buttons disabled:

Reset B. Voice by press and hold the reset button for min. 2 seconds. It will restart again but all data will be lost.

B. Voice not functioning after auto-reconnection

Please restart you mobile and connect again. If the problem is not solved, please restart B. Voice as well

Some mobile phone models:

Nokia 6103 - after a call has been held and one call closed the held call cannot be "un-held" from the kit. It has to be actioned on the phone.

Most of Nokia phones call transfer function -

When the car kit transfer a call to mobile, then the mobile will disconnect Bluetooth. To reconnect, simply press SEND button, hold the SEND button only for call transfer.

LG KG800 - when the mobile is connected to car kit, it only supports HSP profile, then some HFP functions are disabled (such as reject incoming call, DTMF, call transfer). If the car kit is connected to mobile then it can support HFP call functions, therefore, preferable to use car kit to connect to LG KG800 phone.

Samsung E870, G600 - to transfer calls to/from phone needs confirmation on the phone

Samsung G600 - this phone does not support call waiting /swapping

How to get the audio back when it lost:

Turn the kit off and on again to get back the audio connection. If the unit is frozen, press reset switch.

6. Warning

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.