

GPSmile 53

Portable Automobile Navigation System

Product User Manual

Version: V1.01

September 2006

Registered info

HOLUX and GPSmile are trademarks of HOLUX Technology, Inc.

All other trademarks belong to each registered companies.

Note

- Contents of this manual will be modified without further notice.
- The proper operation temperature of the product is between 0°C~40°C. Operating or recharging in an environment with temperature over 40°C might cause system reboot; yet this should be considered as a normal phenomenon. Please do not operate in an extreme temperature environment.

Safety Precautions

- Use the power adapter included with the package, using power adapters other than the one provided will result in malfunction and could prove dangerous.
- The device should only be used with the supplied batteries.
- About the power adapter
- Do not use the power adapter in a wet environment. When hands and feet are wet, do not touch the power adapter.
- While using the power adaptor ensure that the area is well ventilated. Do not let paper or other material cover the power adaptor, as this will interfere with cooling. Do not use the power adaptor whilst it is in a bag.
- Do not attempt to repair the device. If device is damaged or is in a wet environment, replace the device immediately.
- About the battery
- Use only the original factory approved charger.
- A Lithium battery is built in to the device. To prevent fire or skin burns, do not disassemble, pierce, impact, or expose the battery to fire. The battery will crack, explode, or release dangerous chemicals if placed in a fire.
- Important instructions
 - ❖ Note: Replacing with an incorrect battery may result in an explosion. When disposing of the battery, follow the instructions. The replacement battery must be original factory approved.
 - ❖ Regulations must be observed when recycling or disposing of batteries.
 - ❖ The battery should only be used in this device.

Warranty Statement

- This warranty applies to parts and services of GPSmile53 manufactured and sold through Holux Technology Inc. The local area covered is Taiwan; the warrantee length is one year from date of purchase (counting from the date on the sales receipt). Under normal user operation, Holux Technology provides free repair services.
 - ❖ The replaceable battery warranty is six months.
 - ❖ The replaced parts after repair are properties of Holux Technology Inc.
- Holux Technology is not responsible for providing repairs or replacements of any software; Holux Technology does not provide any warranty service for third party software/hardware.
- Important instructions

Note: This warranty does not cover damage or malfunction from the below causes: unauthorized disassembly/modification of unit, abuse or incorrect usage, accidental and other unpreventable causes, operation under variables mentioned other than in this product user manual, using parts not made or sold by Holux Technology, or repairs done by anyone other than Holux Technology and authorized retail/service provider.

- ❖ Expendable parts are not covered in the warranty.
- ❖ Any program, data, or portable storage media damages or loss are not responsible. Please contact your local Holux Technology authorized service provider to learn more about geographical limitations, proof of purchase requests, response time agreements, and other specific maintenance service requests.

Technical Support

- If there are any questions regarding the use of this product, please logon to the website www.holux.com and see the FAQ.
- If answers cannot be found on the website, please send us an e-mail at info@holux.com.tw, stating your query and location.

Maintenance Service

HOLUX Technology, Inc.

+886-3-6687000

Web Site: www.holux.com

E-mail: info@holux.com.tw

HOLUX Technology, Inc.

www.holux.com

Table of Contents

Safety Precautions.....	i
Warranty Statement.....	ii
Technical Support.....	iii
Maintenance Service.....	iii
Preface.....	1
Symbols.....	1
Important Notice.....	1
Other Functions.....	2
First time use.....	3
<i>Copyright</i>	3
<i>Important Notice</i>	3
Using Functions.....	4
Function Menu.....	6
Setting.....	7
<i>System Settings</i>	7
<i>Music Playback Function</i>	12
<i>Storing MP3 files onto SD memory cards</i>	12
<i>Starting music playback</i>	12
<i>Image Browsing Function</i>	14
Troubleshooting.....	錯誤! 尚未定義書籤。
<i>Quick Troubleshooting</i>	166
<i>Normal Care and Maintenance</i>	166
<i>Storage</i>	17
Appendix.....	18
<i>Specifications</i>	188

Preface

We appreciate your purchase of the GPSmile 53.

Please read all instructions thoroughly for a full understanding of the products' features.

Symbols

 
For fast reference to the data you wish to find, this manual uses the following symbols.

- ✓ This icon means to take note to messages and to read for while during use.
- ⚠ This icon means a warning and should take care not to damage the unit.
- 👉 This icon means useful tips for extra information while using.

Important Notice

- This system only provides a navigational reference. Do not use this system for any directional, distance, and geographic etc precise measurements.
- The first GPS positioning should be performed at a single set point, wide-open area without building shelters. Positioning time length will depend on the satellite signal strength, cloud levels; possibly taking up to 10 minutes.
- GPS (Global Positioning System) is the satellite system used by the United States of America Department of Defense. All maintenance and operations are also managed by the United States of America Department of Defense. Should the system be modified and adjusted, the precision and operation of GPS related systems might be affected.
- Any wireless communication products (mobile phone, radio, speed detection unit etc) might affect the GPS signal, resulting in a poor signal.
- For safety reasons, do not operate this system while driving a vehicle.

- Do not leave this unit under your front windshield after you leave the vehicle. Exposure to high temperatures might be dangerous and cause overheating to the battery, resulting in malfunction of the device.
- Window tinting might interfere with the reception of satellite signals. We recommend you install a vehicle antenna to strengthen and stabilize the signal.
- The planned navigational route is for reference only; changes in roadside conditions (one way streets, no right turns) may happen so please respond accordingly to the situation and decide whether or not to follow the planned course.
- When placing this system in the vehicle, please secure with brackets on the car to ensure safety. The recommended installation location is illustrated below.

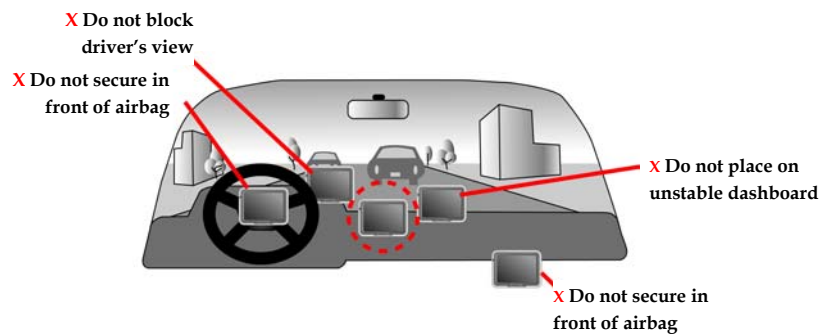

- Differences between manufactured and shipped versions may be present; this software may be updated frequently. If the descriptions in this manual are different from your software version, please follow the software version currently on hand.

Other Functions

- Music playback: plays MP3 music files.
- Image display: displays photographs or image files.

First time use

Copyright

Without the written consent of HOLUX Technology, Inc, this manual including the product and the software may not be duplicated, transmitted, recorded or saved on storage devices; nor shall it be translated under any circumstances into any other languages.

Copyright ©2006 HOLUX Technology, Inc. All rights reserved.

Important Notice

Please read thoroughly this manual of operating instructions and explanations. Use only original factory approved batteries and accessories to prevent unexpected damage. If the correct procedures were not followed for operation or incompatible accessories were connected, this violates the warrantee agreement and will automatically void the warrantee; even causing personal safety issues.

Using Functions

During the first startup, the screen will show the main screen consisting of four functions: navigation, music, photo, and settings. Directly select the icon onscreen to use the function.



GPS

Loads the navigation program and navigation screen


Note: If the SD card with navigator software is

inserted, the system will enter GPS function automatically after startup.

Music	Plays MP3 music
Photo	Plays images
Other	Enter other functions
Video	Play film
eBook	Play eBook
Bluetooth	Bluetooth function
Setting	Function adjustments and operation instructions
About	Device version information

Function Menu

 The function menu is the main function window other than the navigation screen and includes system settings, navigation settings, schedule plans, GPS status, MP3, image browsing.

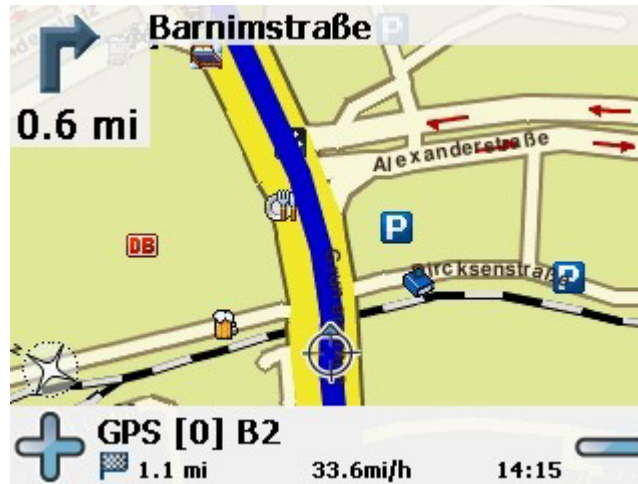


Setting

The setting function gives you the ability to adjust the basic system options, including time settings, volume control, screen calibration, startup message, backlight setting, version info, and GPS reset etc. You can modify the settings according to personal preferences.

System Settings



 
Time

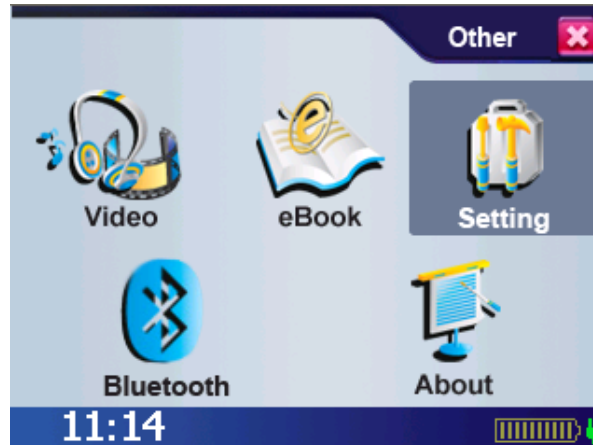1. After system startup, select **[Setting]** from the main screen to go into the System Settings window.



 
2. Select from the **Hour** pull down menu and choose the correct value.
3. Select from the **Minute** pull down menu and choose the correct value.



4. Select  to confirm, or select  to keep original settings.
5. Select  to return to main menu screen.

Volume

1. Under the settings window, control the volume directly with the **scroll bar**. There are six levels of volume in total.

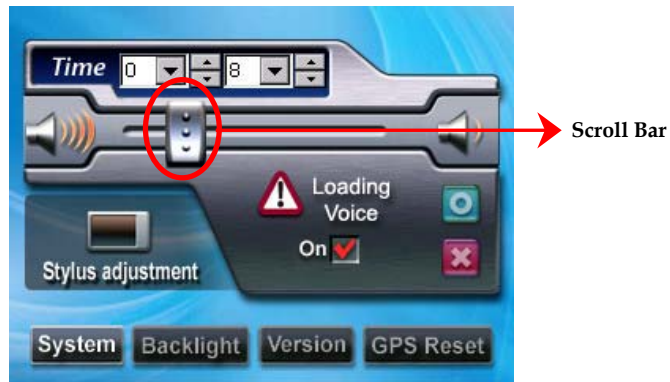

Startup Message

1. Under the settings window, select the **Warning Voice** On or Off for whether the startup message is to be broadcast.



Stylus Adjustment

Control of the unit is accomplished primarily through the stylus by touching/writing on the screen. If the system cannot correctly identify your stylus' input, please run through the screen calibration procedure.


1. From the settings window, select [Stylus Adjustment] to start the screen calibration procedure.



2. Use the stylus and touch the cross at the center of the screen once.
3. Touch the cross in the second position once.
4. Touch the cross in the third position once.
5. Continue the calibration by touching the cross in the positions that follow

Fully press and briefly hold stylus on the center of the target.
Repeat as the target moves around the screen.
Press the Esc key to cancel.

 


6. To finish the calibration procedure, press the **Enter** key to accept the new settings.
7. Press the **Esc** key to keep the old settings.
8. Select  to go back to the main menu screen.

Backlight Settings




The backlight settings will adjust the brightness of the backlight and the auto-off time.

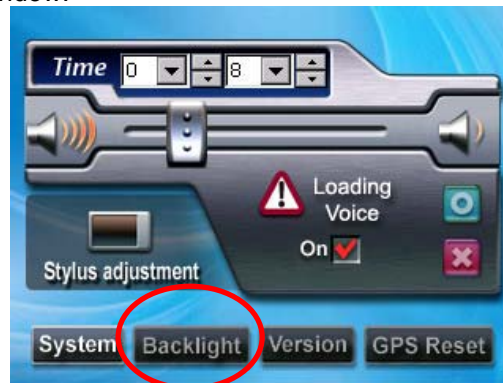1. Under the settings window, select **Backlight** to enter the backlight settings window.



 
2. Select the time to turn off backlight when running off the battery / external power (1 min, 3 min, 5 min, 10 min, 30 min, Always On).




3. Scroll the brightness bar to control backlight brightness. There are six levels in total.
4. Select  to confirm or select  to keep the original settings.
5. Select  to return to main menu screen.

Version

1. Under the settings window, select **Version** to enter the version window.
2. The screen display will show the version information and instructions for operation of music playback and image browsing functions.

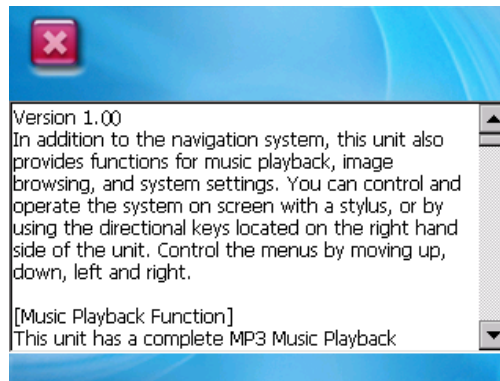

3. Select  to exit the Version screen.

Music Playback Function

This unit has an MP3 Music Playback function that is capable of playing back MP3 files stored on SD memory cards.

 
Storing MP3 files onto SD memory cards

On your computer, you must first convert the music from an audio CD into MP3 files, then save them onto the SD memory card.

All the files need to be stored under the **MP3** directory, and the file format needs to be “.mp3”.

Starting music playback

1. Insert the SD memory card with stored MP3 files into the SD memory card slot on the unit.
2. Power on, and select the **[Music]** icon on the main menu.

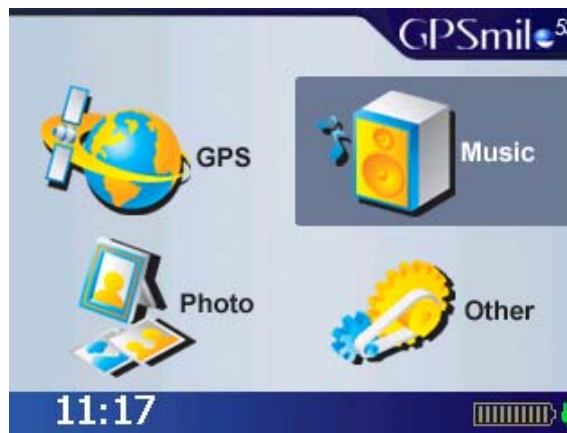

3. The Music Playback Window. Use the buttons to control each playback function.



- | | | | |
|---|-------------------|----|-----------------------|
| 1 | Play | 8 | Volume up |
| 2 | Next | 9 | Volume down |
| 3 | Stop | 10 | Repeat mode indicator |
| 4 | Previous | 11 | Progress Bar |
| 5 | Repeat mode | 12 | Volume display |
| 6 | Battery indicator | 13 | Exit |
| 7 | Timer | | |

Image Browsing Function



1. The system has an Image Browsing function that is capable of displaying images/photographs stored on SD memory cards.
All the files need to be stored under the **Image** directory, and the file format needs to be "*.jpg".
2. Insert the SD memory card with stored image files into the SD memory card slot on the unit.
3. Power on, and select [Photo] icon on Main Menu.
4. The Image Browsing Window.





Quick Troubleshooting

Power	Cannot startup	Insufficient battery charge, please connect to the adapter and restart system.
Screen	No screen displayed	After powering up, if the system does not respond, try the following: 1. Connect adapter, restart system. 2. Reset system.
	Display speed is too slow	1. Check if the battery is low on power. 2. Reset system.
	Screen has no response	Reset system.
Navigation	GPS cannot display my current location	Make sure your current location is not obstructed by buildings or other interferences.

Normal Care and Maintenance

To ensure the unit's normal operation and extended life span, please note the following while using and storing:

Keep dry

This product is not waterproof. If it comes into contact with water spray or is submerged it will seriously damage the components, resulting in irreversible damage.

Do not drop the unit

If violently impacted or shocked, serious damage may be caused.

Avoid sudden temperature changes

Condensation may occur when entering a warm room on a cold day. To prevent condensation from damaging the unit, please place into an airtight plastic bag before sudden temperature changes.

Keep away from strong magnetic fields

When using or storing, please keep away from strong electromagnetic/radioactive or magnetic field equipment.

Operating temperature

The products operating temperature is between 0°C ~ 40°C; please do not operate under extreme temperatures.

Avoid exposure to sunlight

Please avoid long periods of sunlight or high temperature exposure.

Using the stylus

The LCD screen is easily scratched; please use only the stylus for operation. Do not use any other sharp objects on the screen to avoid damaging the LCD screen.

Cleaning the screen

Using a soft clean cloth to wipe the screen is recommended; do not use ordinary tissue to wipe the screen.

Do not disassemble

Please do not disassemble the product, this may void the warranty and damage the unit.

Storage

When the product is not being used for a long period, please remove the battery and store in a cool and dry place. For long-term storage, keeping the unit in a dry box is recommended.

Please do not keep the product in the following environments:

1. Unventilated and humid locations.
2. In a car window that is exposed to excessive amounts of sunlight.
3. In an environment where humidity is over 90%.

Appendix

Specifications

Integrated GPS Receiver	20 parallel channels
Acquisition Time	<ul style="list-style-type: none"> • Reacquisition : 0.1 sec. • Hot start : 1 sec. • Warm start : 35 sec. • Cold start : 42 sec.
Accuracy	Position: 10 m. for 90% Velocity: 0.1 m/s
GPS antenna	Built-in patch antenna
Handheld Software (Pre-loaded)	Companion CD: Adobe Acrobat Reader® for Pocket PC - PDF file viewer NAV-53 Handheld Manual
Processor	Centrality Atlas Processor at 200 MHz.
Operating System	Microsoft Windows CE. Net 4.2 Core Version
Memory	32 MB NAND flash memory and 64MB SDRAM memory for operating system and embedded applications
Weight	180 g +/- 5g
Size	95.5 (L) x 77 (W) x 22 (H) mm
Car Holder / Charger	Input voltage: 11V. ~ 28V. Output voltage: 5.5V. ± 0.3V.
Battery	Rechargeable 2600 mAh. Polymer Li-ion Battery life: 8 ~ 10 hrs.
Extension Slot	SD card slot, over 1 GB.
Display	3.5" high-brightness & contrast ratio transfective TFT LCD (16.7 M colors) with touch screen. 240 x 320 resolution
LED	Red/Green LED for battery charging status
Audio	Built-in speaker. Software volume control.
Operation Temperature	0°C ~ 40°C
Storage Temperature	-20°C ~ 70°C
Mini-USB Connector	USB client; DC power in

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.