

# Parrot PARTY

HIFI WIRELESS  
SOUNDBOX

## USER MANUAL

FOR *BLUETOOTH*® ENABLED  
MOBILE PHONES, SMARTPHONES, PDA,  
MP3 PLAYERS AND COMPUTERS

ENG FRA ESP ITA DEU POR



Stereo 2 x 6W Portable

# Parrot PARTY

English	.....	07-20
Français	.....	21-34
Español	.....	35-48
Deutsch	.....	49-62
Italiano	.....	63-76
Português	.....	77-90



[www.parrot.com](http://www.parrot.com)

# **GENERAL INFORMATION**

---

## SAFETY INFORMATION

### FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:  
(1). this device may not cause harmful interference, and  
(2). this device must accept any interference received, including interference that may cause undesired operation.

*Note: The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.*

### DECLARATION OF CONFORMITY



We, Parrot S.A. of 174 quai de Jemmapes, 75010 Paris, France, declare under our sole responsibility that our product, the Parrot PARTY to which this declaration relates is in conformity with appropriate standards EN300328, EN301489-1, IEC60065 following the provision of Radio Equipment and Telecommunication Equipment directive, with requirements covering EMC directive 89/336/EEC and Low Voltage directive 73/23/EEC.

### CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRONIC EQUIPMENT)

(Applicable in the European Union and other European countries with separate collection systems). This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they

purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contract their supplier and the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

### PROTECTION AND PERSONAL SAFETY

Carefully read the user guide and follow the indicated procedure when setting up the device.  
Do not dismantle or open the device and do not touch the electronic components or the drivers.

Do not attempt to dismantle or modify either of the speakers. Never introduce any metal object to avoid the risks of electric shocks, fire, short circuits or dangerous emissions.  
If your device shows signs of faulty operation, call the approved Parrot technical support centre or an approved retailer.

Never leave the Parrot PARTY exposed to rain or chemical products; do not place them in a damp area or where they are likely to be splashed with water. Never place your device on a recipient containing any type of liquid, which might seep inside the device. Doing so will reduce the risks of electric shocks, short circuits, fire and injury.

### GENERAL PRECAUTIONS

Do not expose the Parrot PARTY to outside temperatures below 5°C or above 55°C. The system could be damaged or the cabinet warped. Avoid placing the system near a source of heat or exposing it to sunlight (even through a window). Similarly, excessively low temperatures and humidity could damage the device.

Always unplug the system from the mains during a thunderstorm or if you will not be using it for a certain amount of time. Otherwise, you are increasing the potential risks of electric shocks, short circuits and fire.

Only use the power lead supplied with the device.  
Do not place any heavy objects on top of the speakers: take care when using the buttons, connections and protection covers. Otherwise, you are likely to damage the device.

Avoid exposing the Parrot PARTY to an excessive amount of dust, whether during operation or in storage. Dust is likely to build up inside the device and lead to poor or faulty operation.  
Do not use any benzene-based products, solvents, detergents or any other chemical products to clean the outside of the device. Such products are likely to discolour and damage the front panel and the case. Simply wipe over with a soft, dry cloth.

#### DATA SECURITY

Parrot and its suppliers shall not be held liable for any lost data or any other damage resulting directly or indirectly from the use or malfunction of this product.

Parrot strives to provide the most up-to-date and comprehensive guides possible. It is our aim to provide you with a user-friendly, easy-to-understand guide to help you set up your new equipment and quickly become familiar with the various features. If your guide does not exactly match the product purchased, refer to our website ([www.parrot.com](http://www.parrot.com)) to obtain the very latest version of the guide.

## GENERAL INFORMATION

#### COPYRIGHTS

Copyright © 2007 Parrot. All rights reserved. The total or even partial reproduction, transmission or storage of this guide in any form or by any process whatsoever (electronic, mechanical, photocopy, recording or otherwise) is strictly prohibited without prior consent from Parrot.

Identification N. 394 149 496 R.C.S. PARIS  
Parrot S.A.

#### REGISTERED TRADEMARKS

All the names and trademarks mentioned in this document are copyright-protected and are the property of their respective owners.

#### BLUETOOTH

The *Bluetooth* word mark and logos are owned by the *Bluetooth* SIG, Inc. and any use of such marks by Parrot S.A. is under license. Other trademarks and trade names are those of their respective owners.  
QD ID : B012425

#### MODIFICATIONS

The explanations and specifications in this guide are given for information purposes only and may be modified without prior notice. They are deemed to be correct at time of going to press. The utmost care has been taken when writing this guide, as part of the aim to provide you with accurate information. However, Parrot shall not be held responsible for any consequences arising from any errors or omissions in the guide, nor for any damage or accidental loss of data resulting directly or indirectly from the use of the information herein. Parrot reserves the right to amend or improve the product design or user guide without any restrictions and without any obligation to notify users.

As part of our ongoing concern to upgrade and improve our products, the product that you have purchased may differ slightly from the model described in this guide. If so, a later version of this guide might be available in electronic format at Parrot's website at [www.parrot.com](http://www.parrot.com).



# PARROT PARTY

ENGLISH



# CONTENTS

Important Safety Instructions .....	9
Attention: Wireless technology .....	10
Introduction .....	10
Kit contents .....	11
Use cases.....	11
• Streaming audio from a mobile phone / PDA / smartphone .....	11
• Streaming audio from a PC .....	12
Compatibility .....	12
• Mobile phone/Smartphone/PDA with A2DP audio streaming functionality .....	12
• Windows operated PC and peripherals .....	12
Using the Parrot PARTY for the first time .....	13
Meaning of the LEDs.....	13
Connecting the Parrot PARTY to an audio player .....	14
• Using an audio player via <i>Bluetooth</i> .....	14
• Pairing with a <i>Bluetooth</i> audio player .....	14
• Using several <i>Bluetooth</i> audio players .....	15
• Using an audio player with a Jack audio cable .....	15
• Stand by mode.....	15
Audio streaming function .....	15
• <i>Bluetooth</i> audio streaming connection .....	15
• Volume control .....	16
• Audio effects.....	16
• Controlling the play function .....	16
Parrot Audio Configuration Tool software .....	17
Software updates via <i>Bluetooth</i> .....	17
Troubleshooting .....	18
Hotline .....	19
Technical Specification .....	19



## IMPORTANT SAFETY INSTRUCTIONS



An equilateral triangle, is intended to alert the user to the presence of uninsulated «dangerous voltage» within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers ) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where it exists from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or AC/DC adaptor is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

## ATTENTION : WIRELESS TECHNOLOGY

Interference can be caused by devices that emit waves. Devices such as Wi-Fi routers and microwave ovens can affect audio transmissions with your Parrot PARTY and also degrade your system's audio quality.

## INTRODUCTION

The *Bluetooth* wireless technology enables audio information and data to be sent via a short-distance radio link. Parrot draws on its long years of experience in the *Bluetooth* technology to offer you an innovative system, the Parrot PARTY. This compact, easy-to-fit system will enable you to listen to the tracks on your audio player (mobile phone, PC, etc.), even when on the move, by means of a Bluetooth link or an audio cable (jack / jack).



Parrot PARTY

## KIT CONTENTS

The kit includes :

- Parrot PARTY system
- A jack / jack audio cable
- A 15V / 1.2A mains adapter
- A carry case
- A wrist-strap
- A rechargeable battery pack
- A CD-ROM containing the following:
  - Parrot Audio Configuration Tool
  - Acrobat Reader
  - Parrot Flash Update Wizard
  - User guide in pdf format
- User guide
- Parrot product guide



Note that the label showing the device's technical specifications can be found behind the batteries in the battery compartment.

## USE CASES

### STREAMING AUDIO FROM A MOBILE PHONE / PDA / SMARTPHONE

You can listen to your music tracks stored on your mobile phone / PDA / smartphone via the Parrot PARTY. Your mobile phone must be able to support the *Bluetooth* A2DP profile (Advanced Audio Distribution Profile). You may also come across the terms «*Bluetooth* stereo» or «*Audio streaming*».



If you want to find out which devices are equipped with this technology, visit the Support section on our website at [www.parrot.com](http://www.parrot.com)

### STREAMING AUDIO FROM A PC

You can also listen to your music tracks stored on your PC via the Parrot PARTY. Your PC must support the *Bluetooth A2DP* profile (Advanced Audio Distribution Profile).

To find out if your PC is equipped with this technology, visit the website of your machine manufacturer or the Support section on our website at [www.parrot.com](http://www.parrot.com)



*NB: There will be other possible ways of using the Parrot PARTY in the future. You can keep up to date with the latest developments by visiting the Support section on our website at [www.parrot.com](http://www.parrot.com)*

## COMPATIBILITY

### MOBILE PHONE/SMARTPHONE/PDA WITH A2DP AUDIO STREAMING FUNCTIONALITY

To obtain the latest compatibility list, refer to the Support section on our website at [www.parrot.com](http://www.parrot.com). You will find a list there, which is regularly updated.

You will find there, in particular, all the procedures for configuring your mobile phone to operate with your Parrot PARTY. These procedures will make it easy for you to use your Parrot PARTY with your audio player.

### WINDOWS OPERATED PC AND PERIPHERALS

To obtain the latest compatibility list, refer to the Support section on our website at [www.parrot.com](http://www.parrot.com). You will find a list there, which is regularly updated. You will find there, in particular, all the procedures for configuring your PC or peripheral to operate with your Parrot PARTY. These procedures will make it easy for you to use your Parrot PARTY with your audio player.


### USE WITH THE JACK SOCKET

You can connect your audio player to the Parrot PARTY via the jack / jack audio cable. This type of cable is supplied.


## USING THE PARROT PARTY FOR THE FIRST TIME

*Note : The batteries are neither fully charged nor fitted when you unpack the Parrot PARTY. You have to insert and charge them before using the Parrot PARTY for the first time.*

1. Remove the cover from the battery compartment underneath the device.
2. Insert and connect the batteries into the compartment as shown in the diagram below.

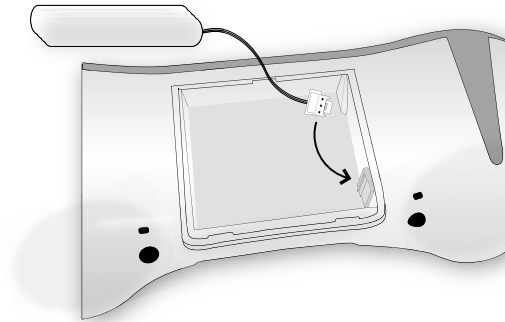

3. Replace the cover.
4. Connect the power lead supplied to the Parrot PARTY, making sure that it is fully inserted, and then plug the lead into the mains supply.
5. Turn on the Parrot PARTY using the ON/OFF switch on the back of the device.
  - > The centre LED on the Parrot PARTY flashes red/blue and then turns violet: this colour means that the device is charging. The LED turns blue when the batteries are fully recharged.

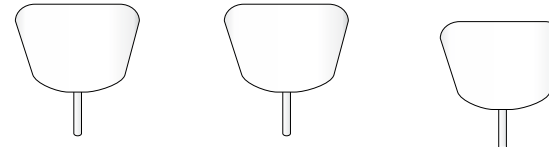

ERROR: rangecheck  
OFFENDING COMMAND: .buildshading2

STACK:

-dictionary-  
-dictionary-  
-savelevel-