

Bluemate

INSTRUCTION

Bluetooth Headset

Model no: Bluemate-616

User Information

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

 
The FCC require the user to be notified that any changes or modification made to this device that are not expressly approved by **Hi-Pro International R&D Co., Ltd.** may avoid the user's authority to operate the equipment.

To comply with FCC RF exposure requirement, this device and its antenna must no be co-located or operating in conjunction with any other antenna or transmitter.

Welcome

1. Thank you for using the Bluemate-616 wireless headset.
2. Bluemate-616 utilizes the state-of-the-art Bluetooth technology to achieve a wireless connection between your mobile phone and headset. Your mobile phone must be also utilize the same Bluetooth Technology in order to make and receive calls using Bluemate-616.

Functions

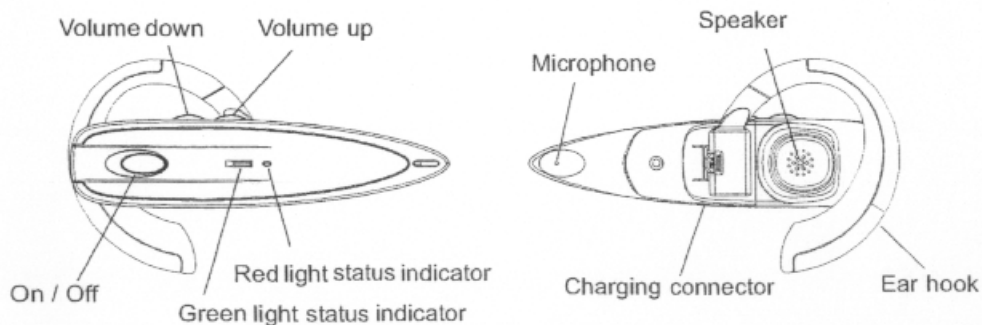

Description for Lighting Indicators(detail appears on back)


Green light ststus indicator		Red light ststus indicator	
—	Light off	○	Light off
■	Constant on	●	Constant on
⚡	flash	⚡	flash

Your First Use

Battery Charging

1. The headset is equipped with a lightweight and durable Lithium Polymer rechargeable battery.

 Battery charging

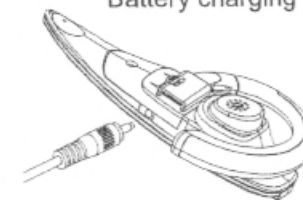

When charging the indication light will be

1. Headset on, the status lights indicator will be — ⚡ ●
2. Headset off, the status lights indicator will be — □ ●
3. Fully Charged , the status lights indicator will be — ⚡ ○

- .Low Battery , the status lights indicator will be — ⚡ ⚡
- .The battery is fully charged when the red light goes off and the green light comes on, it usually takes 2 to 3 hours.

Note: 1. Do not use the headset during charging.








2. For safety reasons , Please use the provided Bluemate charger only.

Pairing with mobile phone : please follow up the following steps.

- 1 . Turn off the headset ○ lighting indicators shall be — □ ○

 







Turn on the headset — Press ○ lighting indicators shall be — ⚡ ○
and you will hear 🎵 from the speakers.

Turn off the headset — Press ○ until the lighting indicators shall be — □ ○
and you will hear 🎵 from the speakers.


 
 

2. Press the  sequentially until the lighting indicators to be   (The green light constant on, and red light period flash)
You will hear **Bi....**  from the speaker .
3. Please take reference from the manual of your mobile phones and turn on the Bluetooth to searching and pairing with Bluemate-616.
4. It means your mobile phone searching with headset successfully when **"Bluemate-616"** shown on the mobile phone screen, Press the mobile phone **YES** key and enter PIN number **"1 2 3 4"** and press **"YES"** . the lighting indicators will be   


Note: your mobile phone must be utilized in Bluetooth for making and receiving calls by Bluemate-616

Receiving calls

1. Bluemate-616 stand-by   , When the mobile phone rings, please press  to talk . if the mobile phone rings before the headset ,please wait until Bluemate-616 rings and press  .
2. Press again  to end the call .
3. During your conversation , the lighting indicators will be  
- The maximum working distance between Bluemate-616 and mobile phone is 5 meters Indoors , 5 to 10 meters outdoors.
- If Bluemate-616 has been shut down before your conversation with mobile phone , please press  to re-activate Bluemate-616.


Volume control

 - During conversation press  volume will be down.  volume will be up .
- When the minimum/ maximum volume is reached, a beep chime will be alarmed.
- To mute/unmute the microphone:
Press  simultaneously until you hear a beep.
Press  simultaneously again to un-mute the microphone.
- You will hear chime to remind you, release the mute function.

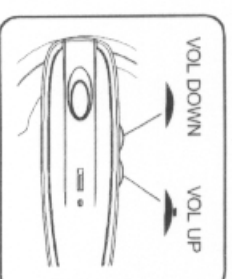

To switch headset on either ear (Placement)

 Please put the on earhook behind your ear and the microphone toward your mouth.

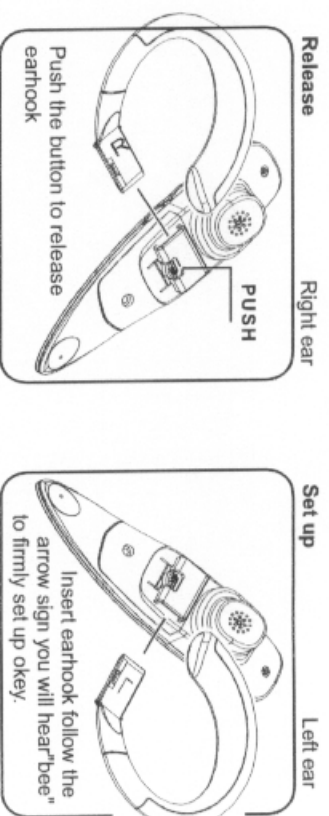

Remarks

1. Battery charging restriction: it must be operated in the temperatures range: $+10^{\circ}\text{C}(+50^{\circ}\text{F}) \sim +45^{\circ}\text{C}(+131^{\circ}\text{F})$.
2. Keep your Bluemate-616 in a dry area all the times and keep it extreme temperature conditions.
3. Do not disassembly Bluemate-616 by yourself. please contact us for after sales service.